



PLAYGROUND

MODEL N° 90136

OWNER'S MANUAL

COPY

Keep this Product ID Number and use when contacting Customer Service:

REGISTER YOUR LIFETIME PRODUCT TODAY!

There are benefits to registering your Lifetime product. With our new online product registration form, it's fast and easy! Register with us at www.lifetime.com and enjoy these great benefits:

- Receive exclusive money-saving offers from BuyLifetime.com, our online store, as well as NEW product notifications and special closeout promotions!
- In the unlikely event of a product recall or safety modification, we will notify you.
- Registering your product guarantees you warranty service. If you do not register your product, your warranty rights will not be diminished. But you will need to provide a sales receipt to verify your product purchase date before warranty service will be provided.

LIFETIME'S PROMISE TO YOU:

Maintaining your privacy is our long-standing policy at Lifetime. And you can rest assured that Lifetime will not sell or provide your personal data to other third parties, or allow them to use your personal data for their own purposes.

We invite you to read our privacy policy at www.lifetime.com

REGISTER today!

Save this owner's manual for future reference and in the event that the manufacturer has to be contacted.

****U.S. and Canada customers ONLY****

IF ASSISTANCE IS NEEDED,

DO NOT CONTACT THE STORE!

**CALL OUR CUSTOMER SERVICE DEPARTMENT at
1 (800) 225-3865**

HOURS: 7:00 a.m. to 5:00 p.m. Monday through Friday (Mountain Standard Time)

****Call or visit our Web site for Saturday hours****

Lifetime Products, Inc.

PO Box 160010 • Freeport Center, Bldg. D-11 Clearfield, Utah 84016-0010

****For customers outside the U.S. or Canada, please contact the store for assistance.****



SAFETY INSTRUCTIONS



FAILURE TO FOLLOW THESE WARNINGS MAY RESULT IN SERIOUS INJURY OR PROPERTY DAMAGE AND WILL VOID WARRANTY.

To ensure safety, do not attempt to assemble this product without reading and following all instructions carefully. Check the entire box and inside all packing materials for parts and/or additional instruction material. Before beginning assembly, identify and inventory all parts and hardware using the parts and hardware lists and identifiers in this document. Proper and complete assembly, use and supervision are essential for proper orientation and to reduce the risk of accident or injury. A high probability of serious injury exists if this product is not installed, maintained, and/or operated properly. Failure to comply with any of the warnings in this instruction manual may result in serious personal injuries such as cuts, broken bones, nerve damage, paralysis, brain injury, or death. Failure to comply may also result in property damage. Please heed all warnings and cautions.

Most injuries are caused by misuse and/or not following instructions. Use caution when using this product.

***This product is intended for use by children ages 4 to 10,
and is for outdoor residential use only.***

BEFORE BEGINNING ASSEMBLY



Keep the hardware bags and their contents separate. If any parts are missing, call our Customer Service Department.



Identify and inventory all parts and hardware using the parts and hardware lists and identifiers in this document.



Test fit all Bolts by inserting them into their respective holes. If necessary, carefully scrape away any excess powder coating buildup from inside the holes. Do not scrape away all of the powder coating. Bare metal may rust. You may need to pound some Bolts into place with a hammer or mallet.



 
TOOLS AND PARTS REQUIRED FOR THIS ASSEMBLY

3/16" Allen Wrench




(1, included)

1/2" Wrench

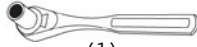

(1)

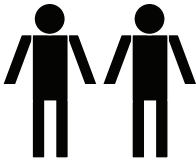

****Two adults required to complete assembly****

Only adults should set up the product. Do not allow children in the setup area until assembly is complete.

ASSEMBLY GUIDES

Refer to the following areas throughout the instructions to assist in the assembly process:

This area is located at the top, left-hand corner of the page and indicates which tools and hardware are needed to complete the assembly steps on a page.



TOOLS AND HARDWARE REQUIRED FOR THIS PAGE

This area is usually located in the bottom, left-hand corner of a step and indicates that special attention is needed to perform a particular part of a step.



Note:

These areas are usually located in the bottom, right-hand corner of a step and indicate that damage to the product or serious injury may occur if the caution or warning is not heeded.



CAUTION



WARNING

****IMPORTANT SAFETY INFORMATION****

PLEASE READ BEFORE BEGINNING ASSEMBLY:

INSTALLATION & GROUND PREPARATION INSTRUCTIONS

- Place the equipment on a level, well-drained ground, not less than 6 ft (1.8 m) from any structure or obstruction such as a fence, garage, or house.
- Provide enough room so that children can use the equipment safely. For example, for structures with multiple play activities, a slide should not exit in front of a swing.
- Separate active and quiet activities from each other. For example, locate sandboxes away from swings or use a guardrail or barrier to separate the sandbox from the movement of the swings.
- Do not install home playground equipment over concrete, asphalt, packed earth, grass, carpet, or any other hard surface. A fall onto a hard surface can result in serious injury to the equipment user (see page 8).
- To prevent serious injury, warn children that they must not use the equipment until properly installed.
- Create a site free of obstacles that could cause injuries – such as low overhanging tree branches, overhead wires, tree stumps and/or roots, large rocks, bricks, and concrete.
- Choose a level location for the equipment. This can reduce the likelihood of the play set tipping over and loose-fill surfacing materials washing away during heavy rains
- For any questions call our Customer Service Department at 1-800-225-3865 for more information.

PLAYGROUND AND SURFACE MATERIALS INSTRUCTIONS

- Use containment, such as digging out around the perimeter and/or lining the perimeter with landscape edging.
- Do not install loose fill surfacing over hard surfaces such as concrete or asphalt.
- Installations of rubber tiles or poured-in-place surfaces (other than loose-fill materials) generally require a professional and are not “do-it yourself” projects.
- Use Playground Surfacing Materials (other than loose-fill material) which comply to the safety standard ASTM F1292 Standard Specification for Impact Attenuation of Surfacing Materials within the Use Zone of Playground Equipment.

OPERATING INSTRUCTIONS

Observing the following instructions and warnings reduces the likelihood of serious or fatal injury:

- The maximum number of occupants that may safely use the entire playset is four with a maximum weight of 400 pounds (181 kg).
- On-site adult supervision should be provided for children of all ages.
- Instruct children not to use the equipment in a manner other than intended.
- To prevent entanglement and strangulation, dress children appropriately using well-fitting shoes and avoiding ponchos, scarves, jackets with neck drawstrings, helmets with straps, and other loose-fitting clothing that is potentially hazardous while using equipment.
- Instruct children not to play when the equipment is wet.
- Instruct children not to attach items to the playground equipment that are not specifically designed for use with the equipment, such as, but not limited to, jump ropes, clothesline, pet leashes, cables and chain as they may cause a strangulation hazard.
- Do not move the equipment while it is in use.

MAINTENANCE INSTRUCTIONS

- If routine checks and maintenance procedures are not done, the equipment could overturn and/or become a hazard.
- Check surfacing material and replenish as necessary to maintain proper depth (see page 8).
- Rake surfacing periodically to prevent compaction and maintain appropriate depths.
- Remove any tripping hazards, such as exposed concrete footings, tree stumps, or rocks.
- Check all nuts and bolts twice monthly during the usage season for tightness and tighten as required. It is particularly important that this procedure be followed at the beginning of each season.
- Check all coverings for bolts and sharp edges twice monthly during usage season to be certain they are in place. Replace when necessary. It is especially important to do this at the beginning of each new season.
- Do not use the equipment when the temperature drops below 32°F (0°C).
- Sand rusted areas on tubular members and repaint using a nonlead-based paint meeting the requirements of Title 16 CFR Part 1303.
- If the warning sticker is illegible, destroyed, or removed contact the Customer Service Department at 1-800-342-3865 for a replacement.

Disposal Instructions: Disassemble and dispose of the playground equipment in such a way that no unreasonable hazards will exist at the time the equipment is discarded. Follow all local disposal requirements.

CONSUMER INFORMATION SHEET FOR PLAYGROUND SURFACING MATERIALS*

The U.S. Consumer Product Safety Commission (CPSC) estimates that about 100,000 playground equipment related injuries resulting from falls to the ground surface are treated annually in U.S. hospital emergency rooms. Injuries involving this hazard pattern tend to be among the most serious of all playground injuries, and have the potential to be fatal, particularly when the injury is to the head. The surface under and around playground equipment can be a major factor in determining the injury causing potential of a fall. It is self evident that a fall onto a shock-absorbing surface is less likely to cause a serious injury than a fall onto a hard surface. Playground equipment should never be placed on hard surfaces such as concrete or asphalt and while grass may appear to be acceptable, it may quickly turn to hard packed earth in areas of high traffic. Shredded bark mulch, wood chips, fine sand or fine gravel are considered to be acceptable shock-absorbing surfaces when installed and maintained at a sufficient depth under and around playground equipment.

Table 1 lists the maximum height from which a child would not be expected to sustain a life-threatening head injury in a fall onto different loose-fill surfacing

materials if they are installed and maintained at depths of 6, 9, and 12 inches. However, it should be recognized that all injuries due to falls cannot be prevented no matter what surfacing material is used.

It is recommended that a shock-absorbing material should extend a minimum of 6 ft. in all directions from the perimeter of stationary equipment such as climbers and slides. However, because children may deliberately jump from a moving swing, the shock absorbing material should extend in the front and rear of a swing a minimum distance of 2 times the height of the pivot point measured from a point directly beneath the pivot on the supporting structure.

This information is intended to assist in comparing the relative shock-absorbing properties of various materials. No particular material is recommended over another. However, each material is only effective when properly maintained. Materials should be checked periodically and replenished to maintain correct depth as determined necessary for your equipment. The choice of a material depends on the type and height of the playground equipment, the availability of the material in your area, and its cost.

****The maximum fall height for this product is 60 in (152 cm).**

We recommend using 6 in (15 cm) of Double Shredded Bark Mulch. **

TABLE 1 — Depth of Surfacing Material Required Based on Fall Heights

Material / Fall Height	5 ft (152 cm)	6 ft (183 cm)	7 ft (213 cm)	9 ft (274 cm)	10 ft (305 cm)	11 ft (335 cm)	12 ft (366 cm)
Double Shredded Bark Mulch	--	6 in (15 cm)	--	--	9 in (23 cm)	12 in (30 cm)	--
Wood Chips	--	6 in (15 cm)	9 in (23 cm)	--	--	--	12 in (30 cm)
Fine Sand	6 in (15 cm)	--	9 in (23 cm)	12 in (30 cm)	--	--	--
Fine Gravel	--	6 in (15 cm)	9 in (23 cm)	--	12 in	--	--
Shredded Tires***	--	--	--	--	6 in (15 cm)	--	--

*This information has been extracted from the CPSC publications "Playground Surfacing--Technical Information Guide" and "Handbook for Public Playground Safety." Copies of these reports can be obtained by sending a postcard to the: Office of Public Affairs, U.S. Consumer Product Safety Commission, Washington, D.C., 20207 or call the toll-free hotline: 1-800-638-2772.

***This data is from tests conducted by independent testing laboratories on a 6-inch depth of uncompressed shredded tire samples produced by four manufacturers. It is recommended that persons seeking to install shredded tires as a protective surface request test data from the supplier showing the critical height of the material when it was tested in accordance with ASTM F1292.

PARTS LIST

<u>ID</u>	<u>Item Description</u>	<u>Qty</u>	<u>✓</u>
CPC	1 1/8" x 33 3/4" Green Tube	15	<input type="checkbox"/>
CPF	1 1/4" x 33 3/4" Green Tube with Sticker	15	<input type="checkbox"/>
CPD	1 1/8" x 38" Light Brown Tube	30	<input type="checkbox"/>
CPE	1 1/4" x 38" Light Brown Tube with Sticker	5	<input type="checkbox"/>
CPB	Handhold	16	<input type="checkbox"/>

HARDWARE LIST

<u>ID</u>	<u>Item Description</u>	<u>Qty</u>	<u>✓</u>
CPA	<i>Geodome Assembly Hardware Bag</i>		
ASI	5/16" x 1 3/4" Button Head Bolt	17	<input type="checkbox"/>
ASE	5/16" Nylock Nut	27	<input type="checkbox"/>
ASN	3/16" Hex Wrench	1	<input type="checkbox"/>
ATL	5/16" Nut	17	<input type="checkbox"/>
ARL	1/4" Washer	88	<input type="checkbox"/>
ARN	5/16" x 3/4" Button Head Bolt	11	<input type="checkbox"/>

*There may have extra hardware at the end of the assembly

PARTS IDENTIFIER

Parts shown at 5% of Actual Size



CPD (x30)
38" Light Brown Geodome Tube




CPE (x5)
38" Light Brown Geodome Tube with Sticker



CPC (x15)
33 3/4" Green Geodome Tube



CPF (x15)
33 3/4" Green Geodome Tube with Sticker

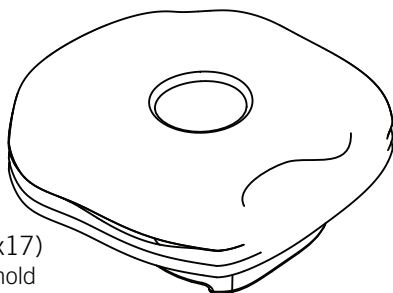


CPB (x17)
Handhold

HARDWARE IDENTIFIER

GEODOME ASSEMBLY HARDWARE (CPA)

 
Hardware shown at Actual Size




ASI (x17)
5/16" x 1 3/4" Button Head Bolt



ASE (x27)
5/16" Nylock Nut

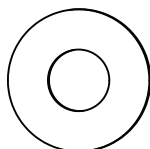


ARL (x88)
1/4" Washer

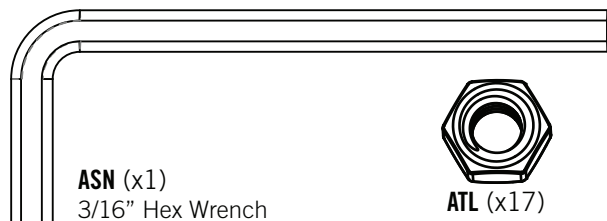

ASN (x1)
3/16" Hex Wrench



 ATL (x17)
5/16" Standard Nut




ARN (x11)
5/16" x 3/4" Button Head Bolt



TOOLS AND HARDWARE REQUIRED FOR THIS PAGE



 
3/16"



ASI (x5)



ATL (x5)

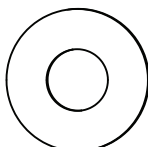


ARL (x10)

SEC

1.1


Slide a **Washer (ARL)** over a **5/16" x 1 3/4" Bolt (ASI)**, then slide the Bolt through the two **Green Tubes with Sticker (CPF)** and four **Light Brown Tubes (CPD)** in the order indicated by the numbers. Slide another Washer over the Bolt and secure with a **5/16" Standard Nut (ATL)**. Hold the Nut with a wrench while tightening the Bolt. Tighten completely to prevent movement.

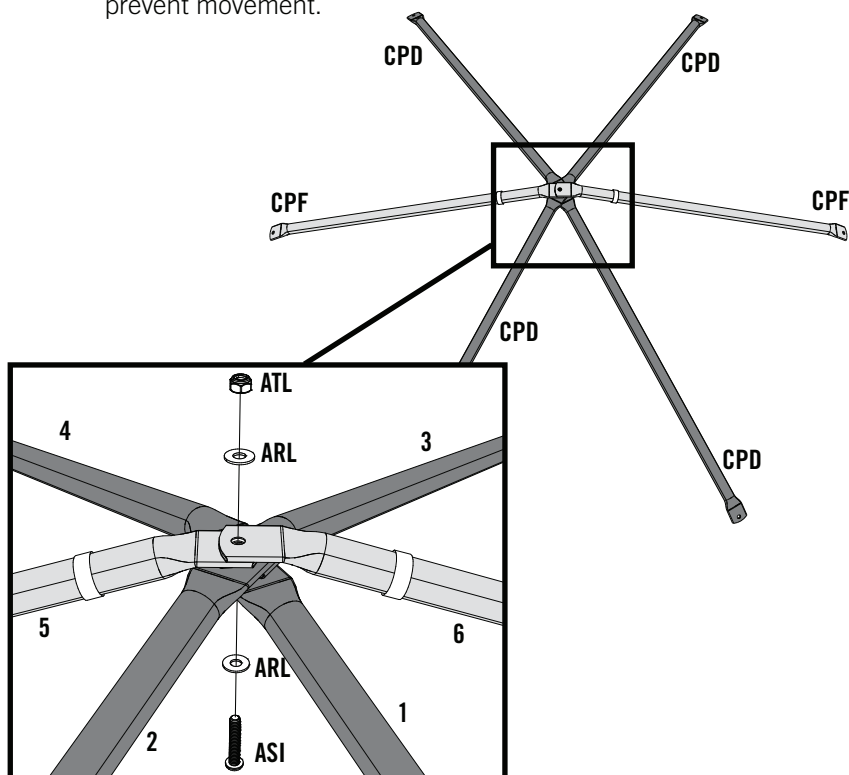

Note: Repeat this step five times, making five joints.




TOOLS AND HARDWARE REQUIRED FOR THIS PAGE

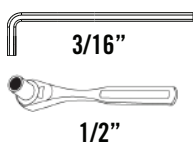

3/16"

 
1/2"

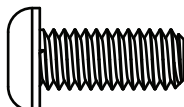

ARN (x10)



ASE (x10)


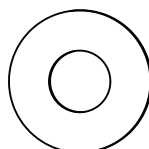


ARL (x20)

SEC

1.2



Attach a **Light Brown Tube (CPD)** to the bottom of the assembly completed in the previous step (Joint A). Slide a **5/16" x 3/4" Bolt (ARN)** through a **Washer (ARL)** and the two Light Brown Tubes. Place a Washer over the Bolt and finger tighten a **Nylock Nut (ASE)** for removal later. Follow the same assembly for Joint B.

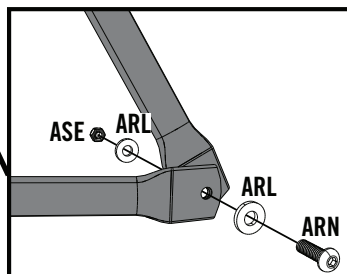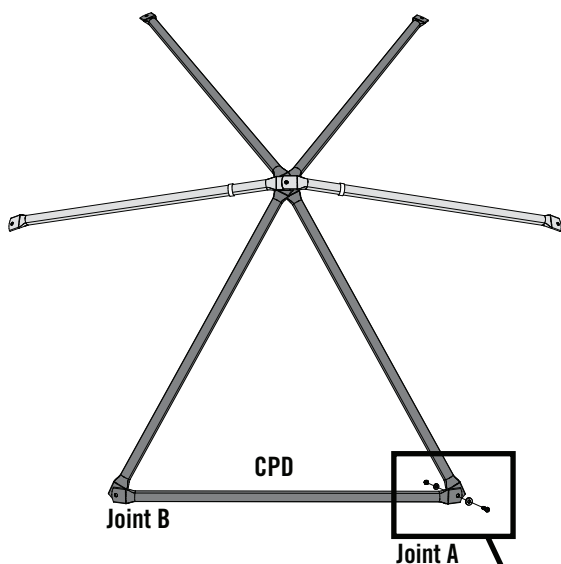

Note: Repeat this step on all five assemblies.




TOOLS AND HARDWARE REQUIRED FOR THIS PAGE

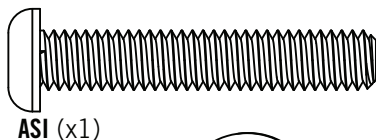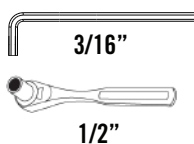

SEC

1.3


Bring the assemblies completed in steps 1.1 and 1.2 together as shown. Place a **Green Tube (CPC)** over the **Light Brown Tubes (CPD)** and secure the Green and Light Brown Tubes together at the top joint as shown below by placing a **5/16" x 1 3/4" Bolt (ASI)** through **Washer (ARL)** then through the Brown Tubes and Green Tube. Place a Washer over the Bolt and finger tighten the **5/16" Standard Nut (ATL)** for removal later.

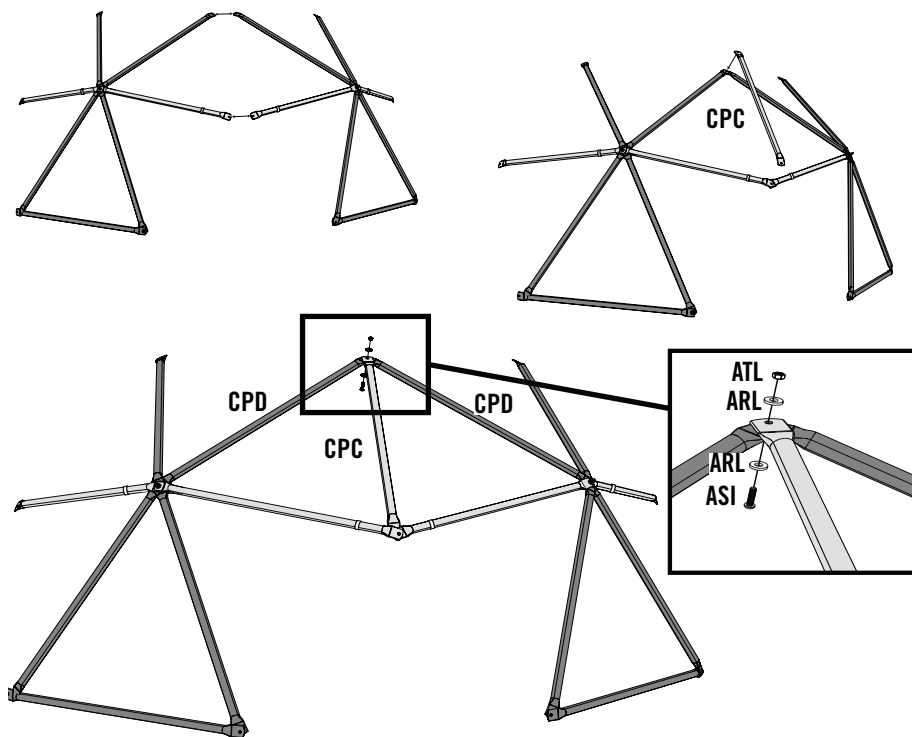

Note: The Geo-Dome should be stood upright to complete this step and the rest of the assembly.



 TOOLS AND HARDWARE REQUIRED FOR THIS PAGE

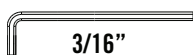

3/16"




1/2"



ASI (x1)



ATL (x1)


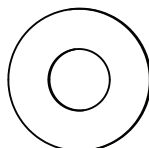


ARL (x2)

SEC


1.4

Add two additional **Green Tubes (CPC)** in the order indicated. Place the **5/16" x 1 3/4" Bolt (ASI)** through the **Washer (ARL)** then through the five **Green Tubes**. Secure with another Washer and a **5/16" Standard Nut (ATL)**. Tighten completely.

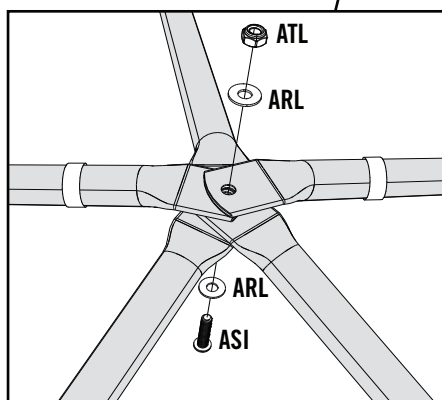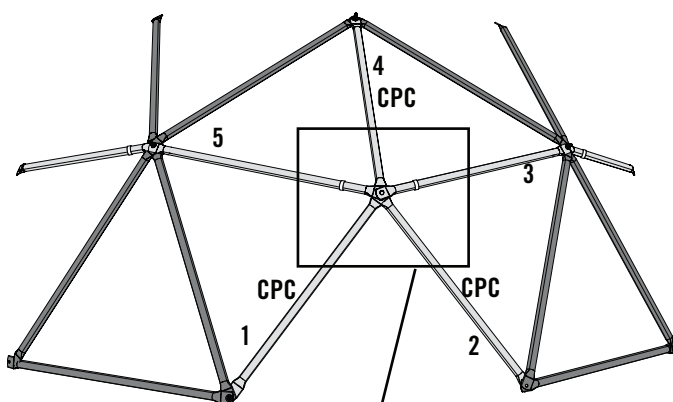



 TOOLS AND HARDWARE REQUIRED FOR THIS PAGE



3/16"






1/2"

NO NEW HARDWARE REQUIRED FOR THIS PAGE

SEC

1.5


Remove **5/16" Nylock Nut (ASE)** from the bottom two **Light Brown Tubes (CPD)**. Place a new **Light Brown Tube** at the bottom of the green pentagon assemblies. Secure the **Light Brown Tube** and **Green Tubes (CPC)** to the existing joint by replacing the **Washer (ARL)** and the **Nylock Nut**. Tighten completely.

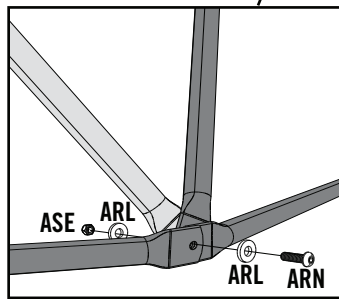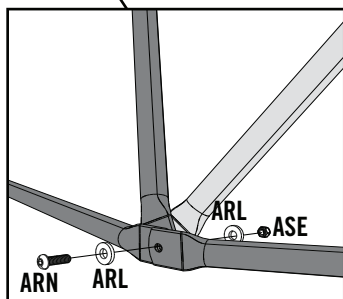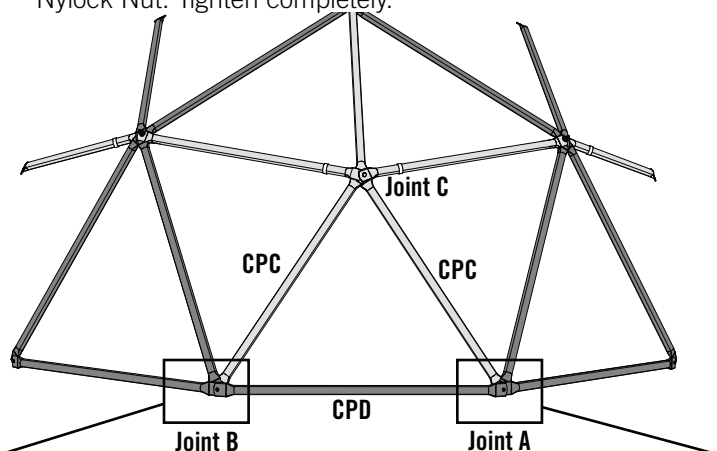

Note: Make sure all Bolts on the bottom go in the direction shown, with the head of the Bolt on the outside, to prevent injury.



 
TOOLS AND HARDWARE REQUIRED FOR THIS PAGE



3/16"



 
1/2"

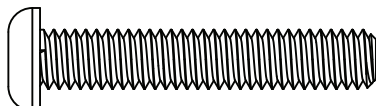

ASI (x8)



ATL (x8)

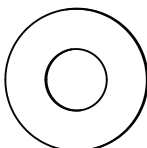


ARL (x16)

SEC


1.6

Add one of the assemblies completed in step 1.2, to the assembly completed in step 1.5. Use the instructions from steps 1.3, 1.4, and 1.5 to attach the assemblies. Continue adding the assemblies from step 1.2 to complete the circle.

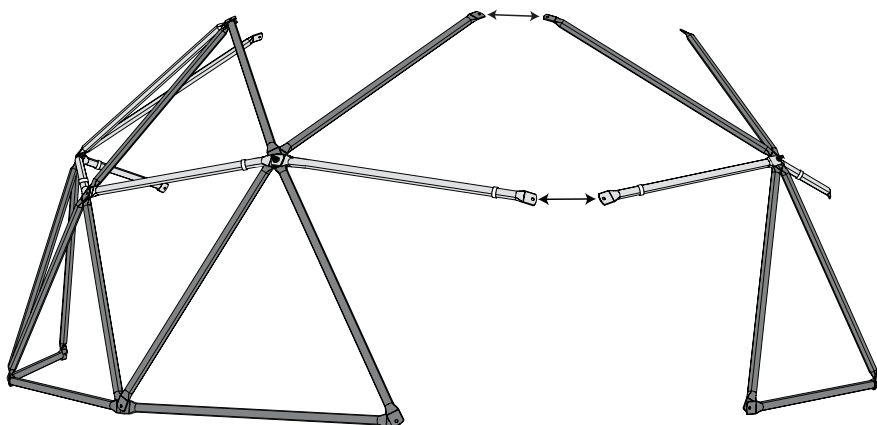



 TOOLS AND HARDWARE REQUIRED FOR THIS PAGE



3/16"



1/2"


NO NEW HARDWARE REQUIRED FOR THIS PAGE

SEC

1.7


Remove the **5/16" Standard Nut (ATL)**, the **Washers (ARL)** and the **1 3/4" Bolt (ASI)** at Joint C and add an additional **Light Brown Tube with Sticker (CPE)**. Replace the Washer, Nut, and Bolt, however do not completely tighten to Joint D, repeat the same process for Joint E.

Remove the hardware at Joint E. Place the removed Bolt and Washer through the added Light Brown Tubes with Stickers (CPE), and **Green Tube with Sticker (CPF)** in the order indicated. Replace the hardware and tighten joint completely. Complete around the circle.

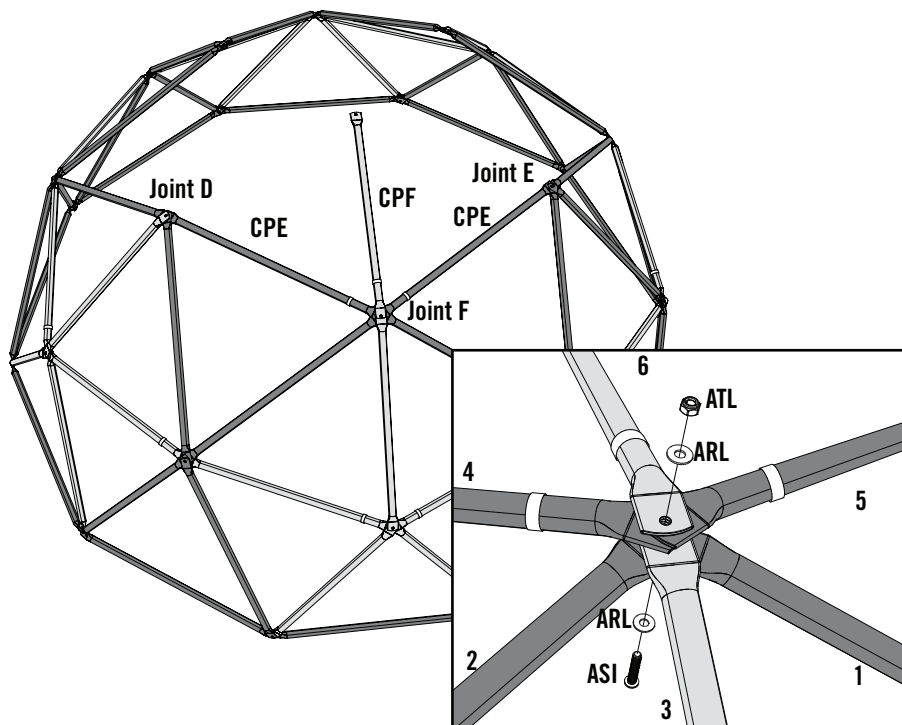




TOOLS AND HARDWARE REQUIRED FOR THIS PAGE

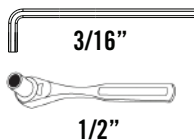


3/16"

1/2"

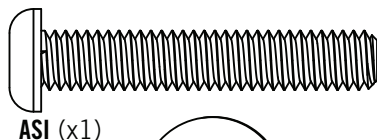

ASI (x1)

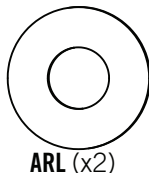

ARL (x2)





ATL (x1)

SEC

1.8

Connect the five **Green Tubes (CPC)** at the top by sliding a **5/16" x 1 3/4" Bolt (ASI)** through a **Washer (ARL)** and through the five Green Tubes in the order shown. Secure with a Washer and **5/16" Standard Nut (ATL)**. Tighten completely.

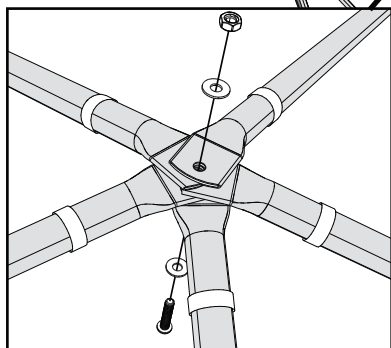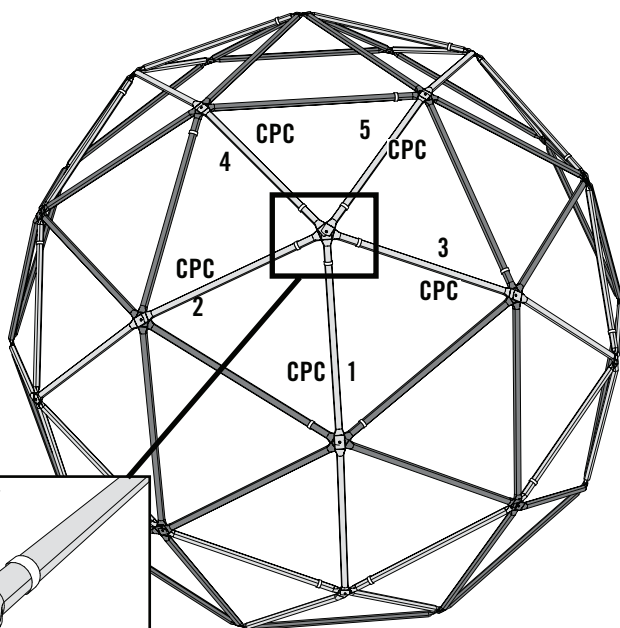


CAUTION

Check and tighten all bolts before allowing children to play. Do not allow Children to play on the Geo-Dome before the handholds are in place.




TOOLS AND HARDWARE REQUIRED FOR THIS PAGE

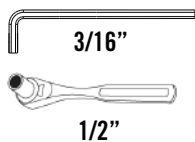


3/16"

1/2"

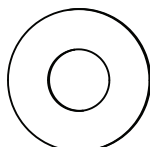

ARL (x32)


 


ASE (x16)

SEC

1.9

Attach **Handholds (CPB)** to each of the joints not touching the ground. Attach the handholds by sliding a **Washer (ARL)** over the **1 3/4" Bolt (ASI)** and placing the Handhold over the Bolt. ***It is critical that the Washer is added.*** Line up the notch on the bottom of the Handhold with the tube on the top of the joint. Secure each Handhold with a Washer and **5/16" Nylock Nut (ASE)**. Tighten completely.

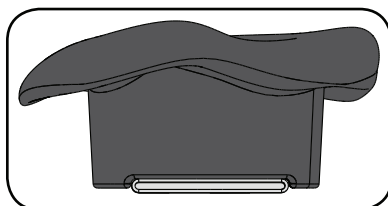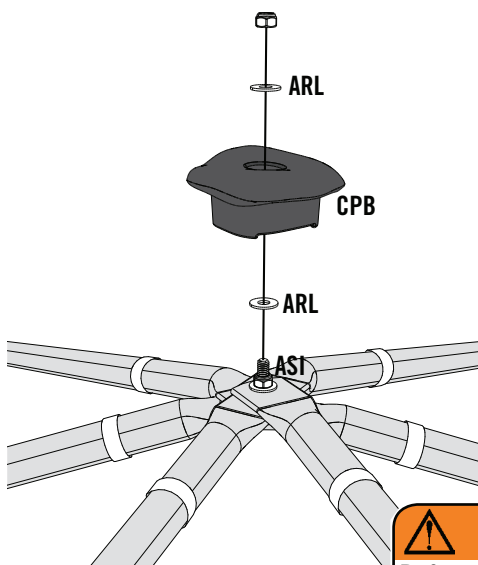

Handhold notch fits over the top of the Tube joint



WARNING

Before allowing children play ensure handholds are in place and secure. Replace broken handholds immediately, do not allow children to play on damaged equipment.



Note: When moving the Geo-Dome, do not slide the Dome or tip it on its side. This may cause the Dome to lose its shape. Instead, use several people to lift the Dome and move it to the new location.

NOTES

 
 
NOTES

***ENHANCE YOUR LIFETIME® PURCHASE BY ADDING
ACCESSORIES OR OTHER GREAT PRODUCTS:***

To purchase accessories or other Lifetime Products, visit us at:

www.lifetime.com

Or call: 1-800-424-3865

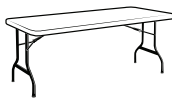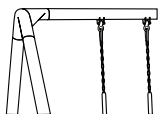



WARNING • AVISO • AVERTISSEMENT



This product is intended for use by children ages 4 to 10. Do not install over concrete, asphalt, packed earth, or any other hard surface. A fall onto a hard surface can result in serious injury.

Observing the following statements and warnings reduces the likelihood of serious or fatal injury.

- The maximum number of occupants that may safely use the equipment is 4 with a maximum weight of 400 pounds.
- On-site adult supervision should be provided for children of all ages.
- Do not use the equipment in a manner other than intended.
- To prevent entanglement and strangulation, use well-fitting shoes and avoid ponchos, scarves, jackets with neck drawstrings, helmets with straps, and other loose-fitting clothing that is potentially hazardous while using equipment.
- Do not climb when the equipment is wet.
- Do not attach items to the playground equipment that are not specifically designed for use with the equipment, such as, but not limited to, jump ropes, clothesline, pet leashes, cables and chain as they may cause a strangulation hazard.
- Remove bike or other sports helmets before playing on playground equipment

Este producto es para niños de 4 a 10 años de edad. No lo instale sobre concreto, asfalto, tierra empaquetada o cualquier otra superficie dura. La caída sobre una superficie dura podría ocasionar serias lesiones.

Si se presta atención a los siguientes enunciados y avisos de advertencia se reduce la probabilidad de producirse lesiones serias o mortales.

- El número máximo de ocupantes que pueden usar de forma segura el equipo es 4, con un peso máximo de 400 lb/ 181 kg.
- Los niños de todas las edades deben estar bajo la supervisión de un adulto en el lugar.
- No use el equipo de una forma distinta para la cual está diseñado.
- Para prevenir enredos y estrangulación, vista a los niños correctamente con calzado adecuado y evite el uso de ponchos, bufandas, chaquetas con cordeles para el cuello, cascos con correas y otro tipo de ropa holgada que sea potencialmente peligrosa durante el uso del equipo.
- No se suba al equipo cuando éste mojado.
- No fije al equipo de patio de juegos elementos que no estén específicamente diseñados para ello, como por ejemplo cuerdas para saltar, tendedores para ropa, correas de mascotas, cables y cadenas, etc., pues revisten un peligro de estrangulación.
- Quite los cascos para ciclistas u otros cascos deportivos antes de jugar en este patio de recreo.

Ce produit est conçu pour un usage par des enfants âgés de 4 à 10 ans. Ne pas installer sur du béton, de l'asphalte, de la terre compactée ou toute autre surface dure. Une chute sur une surface dure peut entraîner des blessures graves.

L'observation des déclarations et des avertissements suivants réduit les risques de blessures graves ou fatales.

- Le nombre maximal d'occupants pouvant utiliser cet équipement en toute sécurité est de 4 avec un poids maximal de 400 lb / 181 kg.
- La présence d'un adulte surveillant les enfants de tous âges doit être assurée.
- Ne pas utiliser l'équipement à d'autres fins que pour l'usage prévu.
- Pour éviter l'emmêlement des cordes et des chaînes et ainsi éviter tout risque d'étranglement, veillez à habiller les enfants correctement. Portez des souliers bien adaptés. Ne mettez pas de ponchos, de foulards / écharpes ou de blousons avec des cordons près du cou, ni de casques avec des sangles et tout autre vêtement ample pouvant potentiellement s'avérer dangereux lors de l'utilisation de l'équipement.
- Ne pas monter sur l'équipement lorsque celui-ci est mouillé.
- Ne pas attacher d'objets sur l'équipement de jeu non spécifiquement conçus pour celui-ci, tels que, mais sans s'y limiter, des cordes à sauter, des cordes à linge, des laisses d'animaux, des câbles et des chaînes. Ceux-ci posent un risque d'étranglement.
- Enlever les casques de vélo ou autres casques sportifs avant de jouer sur cet aire de jeux.

1114360

Lifetime Products, Inc. PO Box 160010 • Freeport Center, Bldg. D-11 • Clearfield, UT 84016 • USA • 1-800-225-3865

WARRANTY INFORMATION

LIFETIME PLAYGROUND EQUIPMENT

1-YEAR LIMITED FACTORY WARRANTY*

THE MANUFACTURER RESERVES THE RIGHT TO MAKE SUBSTITUTIONS TO WARRANTY CLAIMS IF PARTS ARE UNAVAILABLE OR OBSOLETE.

1. Lifetime Playground systems are warranted to the original purchaser to be free from defects in material or workmanship for a period of one year from the date of original retail purchase. The word "defects" is defined as imperfections that impair the use of the product. Defects resulting from misuse, abuse or negligence will void this warranty. This warranty does not cover defects due to improper installation, alteration or accident. This warranty does not cover damage caused by vandalism, rusting, "acts of nature" or any other event beyond the control of the manufacturer.
2. This warranty is nontransferable and is expressly limited to the repair or replacement of defective playground equipment. If the equipment is defective within the terms of this warranty, Lifetime Products, Inc. will repair or replace defective parts at no cost to the purchaser. Shipping charges to and from the factory are not covered and are the responsibility of the purchaser. Labor charges and related expenses for removal, installation or replacement of the playground system or its components are not covered under this warranty.
3. This warranty does not cover scratching or scuffing of the product that may result from normal usage. In addition, defects resulting from intentional damage, negligence, unreasonable use or hanging from the net or rim will void this warranty.
4. Liability for incidental or consequential damages is excluded to the extent permitted by law. While every attempt is made to embody the highest degree of safety in all equipment, freedom from injury cannot be guaranteed. The user assumes all risk of injury resulting from the use of this product. All merchandise is sold on this condition, and no representative of the company may waive or change this policy.
5. This product is not intended for institutional or commercial use; Lifetime Products, Inc. does not assume any liability for such use. Institutional or commercial use will void the warranty.
6. This warranty is expressly in lieu of all other warranties, expressed or implied, including warranties of merchantability or fitness for use to the extent permitted by Federal and state law. Neither Lifetime Products, Inc., nor any representative assumes any other liability in connection with this product. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state..

ALL WARRANTY CLAIMS MUST BE ACCOMPANIED BY A SALES RECEIPT.

REPORT PRODUCT DEFECTS IN WRITING TO:

Lifetime Products, Inc., PO Box 160010 Clearfield, UT 84016-0010, or call (800) 225-3865
M-F 7 a.m. to 5 p.m. MST.

****Call, or visit our Web site for Saturday hours****

Please include your dated sales receipt and photographs of damaged parts.

To register the product, visit our Web site at www.lifetime.com



www.lifetime.com

**Warranty is only valid in the United States.*