

GAZEBO Penguin inc.


4660 HICKMORE ST,
MONTREAL, QUEBEC
H4T 1K2
TEL: 1-514-276-3485, 1-800-737-7174
Email: customerservice@gazebopenguin.com

PLEASE READ
IN ITS ENTIRETY
BEFORE
INSTALLATION

43204-22 BROWN 43204-32 SLATE

PLEASE READ IN ITS ENTIRETY BEFORE INSTALLATION

10'x14' GAZEBO
ASSEMBLY INSTRUCTIONS

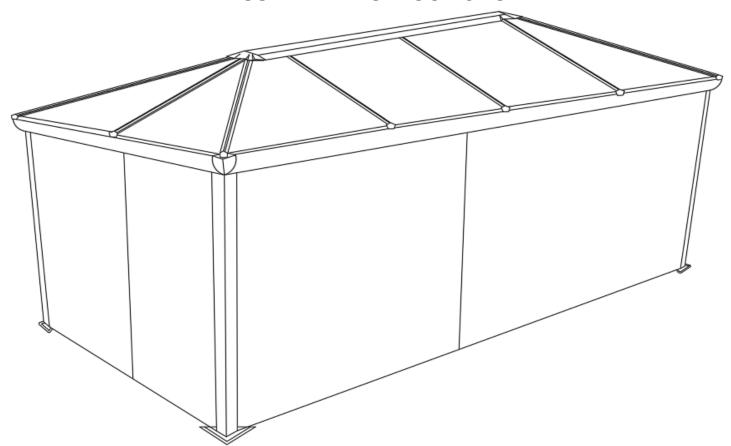

DO NOT DESTROY THE BOXES UNTIL COMPLETELY ASSEMBLED PLEASE VERIFY THE CONTENT OF EACH BOX AGAINST THE LIST OF PARTS

Assembly With Two Or More Adults Recommended

Base Dimensions 8' 9" x 13' 4" Largest Dimensions 9' 9" x 14' Overall Height 108.5" APPROX.

DO NOT DESTROY THE BOXES UNTIL COMPLETELY ASSEMBLED PLEASE VERIFY THE CONTENT OF EACH BOX AGAINST THE LIST OF PARTS

10ft x 14ft / 3.048m x 4.26m GAZEBO Instruction Manual

IMPORTANT: RETAIN FOR FUTURE REFERENCE, READ CAREFULLY

Consult with your local governing authority / local municipal codes regarding installation of temporary structures before purchase or assembly. Some jurisdictions may require permits for, or otherwise regulate, installation and use.

For assistance with assembly, installation, parts, or customer service, contact Gazebo Penguin Customer Service Department at the numbers listed below (English & French, Mon-Fri 8:00 AM to 4:00 PM EST):

Montreal: (514) 276-3485 Elsewhere in Canada and the US: 1-800-737-7174

WARNING:

- For outdoor use.
- Snow should be regularly cleared from the roof and not allowed to accumulate.
- Retain your proof of purchase for warranty purposes. Also keep the original boxes
 until the installation is complete and correct.
- The unit may take more than 4 hours and 3 people are required for this assembly.

PRIOR TO ASSEMBLY:

- Please don't destroy boxes until completely assembled.
- The foundation must be level, flat, and solid, such as concrete or asphalt.
- Keep away from overhead utility lines, tree branches, and other structures.
- Check for underground pipes or wires if digging or drilling is required.
- Do not install near roof lines or other structures that could shed snow, ice, or excessive rain run-off onto the roof top.
- Assemble the structure as close to its final location as possible.
- It is recommended to wear safety gloves, safety glasses, and hard hats for installation.
- Do not hang from, climb on, or stand on the structure or roof.
- Before assembly, read instructions and check that all parts are present in the boxes. If any parts are missing, refer to warranty information.
- A 6ft (1.8m) stepladder, Phillips screwdriver, tape measure, level, mallet, and a tarp to place parts on will be required for assembly (not included).
- Remove top protective film from roof panels prior to assembly; DO NOT remove bottom protective film until ready to insert roof panels, so as to identify which side is on top.

ANCHORING INSTRUCTIONS:

- Proper anchoring of the frame to the base and the wall is required for safety.
- Any structure not anchored securely has the potential to fly away during high wind causing damage and safety hazard.
- How the item is anchored, and the hardware and tools required, will vary based upon the set-up location and are not provided.
- Please check with your local hardware store if for the appropriate anchors for your surface.
- Do not anchor to pavers / pavement slabs because they are not a solid foundation.
- · Periodically check the anchors to ensure they remain secure

CARE AND MAINTENANCE:

- In case of a defective or damaged part, or for any other questions concerning the product, please contact the manufacturer directly.
- · Please have the parts list and part numbers on hand when ordering or requesting replacement parts.

ROOF PANELS:

- Gently clean with an environmentally-friendly soap solution and water using a sponge or washcloth.
- Do not use abrasive materials, wire brushes, chemicals, harsh cleaners, or bleach.
- Rinse using a garden hose and air dry. If removed, ensure thoroughly dry prior to storage.
- Do not use pressure washer.

STRUCTURE:

- Gently clean with an environmentally-friendly soap solution and water using a sponge or washcloth.
- Do not use abrasive materials, wire brushes, chemicals, harsh cleaners, or bleach.
- Rinse using a garden hose and air dry.
- Do not use pressure washer.
- If there are nicks, chips, and/or scratches see the part # of the paint in the parts list to obtain a matching touch-up paint.





MAINTENANCE NOTES

- 1. In case of a defective or damaged part, or for any other questions concerning the product, please contact the manufacturer directly.
- 2. Please have the parts list and part numbers on hand when ordering or requesting replacement parts.
- 3. The product should not be installed adjacent to trees or a sloped roof. Snow and ice may slide onto the roof and cause it to collapse.
- 4. While the product is designed to stay assembled year long, the roof must be kept free of accumulation of snow.



ONE YEAR LIMITED WARRANTY

This product has been designed and manufactured to meet the highest standards of quality and durability. Subject to the Conditions for Exercising the Warranty and the Limitations on the Warranty set forth below, it is warranted to be free of material and manufacturing defects for a period of **one year** from the date of purchase. Missing and damage due to transportation is not covered by the manufacture warranty. Should the product become damaged, or the warranty period has expired, please contact Gazebo Penguin Customer Service Department for a complete schedule of replacement parts and prices.

CONDITIONS FOR EXERCISING THE WARRANTY

The warranty only applies to the original purchaser with the bill.

In order to properly exercise your warranty, please comply with the following:

Carefully inspect the contents of the carton for missing or damaged components. Should you discover damaged or missing parts, do not return the product to the place of purchase, but contact Gazebo Penguin Customer Service Department at the numbers listed below:

Montreal: (514) 276-3485 Elsewhere: 1-800-737-7174

You can also find a claim form to fill out online:

https://abrispenguin.com/assemblyinstructions/

NOTE: Damages/missing parts must be reported within 30 days of delivery. If claimed after your request might be rejected.

LIMITATIONS ON THE WARRANTY

- 1. The product is not warranted against damages due to vandalism, abuse, falling or thrown objects, or accumulation of
- 2. The product is not warranted against damages due to extreme weather conditions, such as thunderstorms, hail, strong wind or snow storms, or any other acts of God.
- 3. Leaking due to heavy rain may happen, please refer to the instruction manual for window positions and information on how to evacuate the water.
- 4. The product is only warranted in the event it is installed in accordance with the Gazebo Penguin's written instructions enclosed with the product.
- 5. The product is not warranted in the event it has been improperly anchored.
- 6. We reserve the right to replace or repair any defective product or parts at our discretion.
- 7. No change to the unit is allowed. This will void your warranty.

Before You Assemble the Gazebo

PLEASE DON'T DESTROY BOXES UNTIL COMPLETELY ASSEMBLED

- Please verify the content of each box against the list of parts.
- It is important that this gazebo be anchored on a solid base with the provided screws. Otherwise, please ensure that you use anchors sufficient for your surface.
- The gazebo should not be installed adjacent to trees or a sloped roof. Snow and ice may slide onto the gazebo and cause it to collapse.


Tools required (not provided)


- 6ft (1.8m) Stepladder
- Robinson #2 Screwdriver
- Mallet
- Safety Gloves & Glasses

- Tarp or protective material for placing parts on during assembly
- Tape Measure
- Leveling Shim

Step 1:


- 1. Assemble Beams "A" and "B" using Center Plate "F", by sliding it inside the beams and securely tighten with 10 Bolts "Pp". Repeat with Beams "C" and "D", also using Center Plate "F"
- 2. Lay out the assembled Beams in a rectangle and join at each corner with a Corner Plate "E", by sliding it inside the beams and tighten it with 4 Bolts "Pp" tightly and hand fasten remaining 6 Bolts in pink. see image on pg. 5

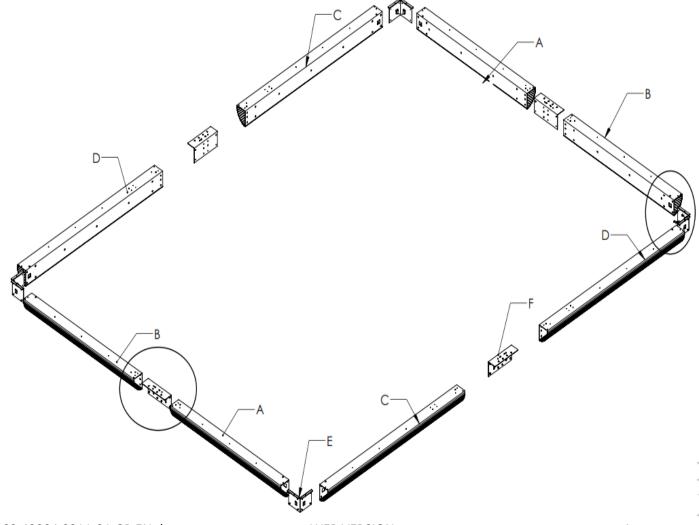

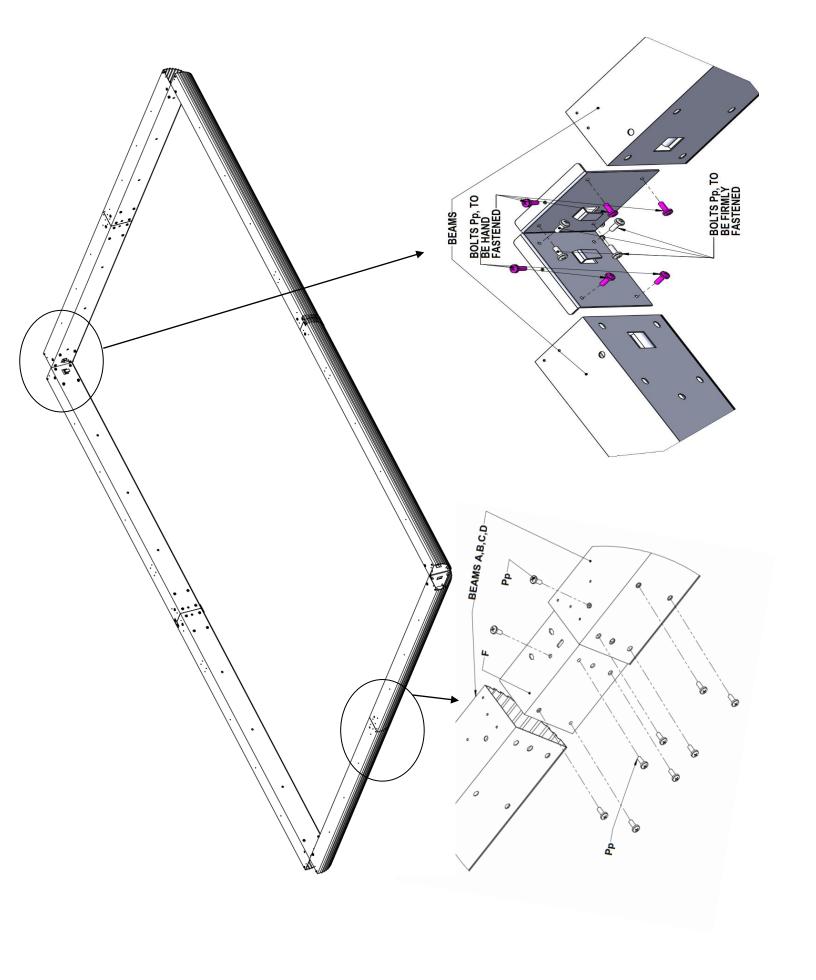


Step 2:

1. For each leg "G", attach foot plate "H" using 3 bolts "Pp".

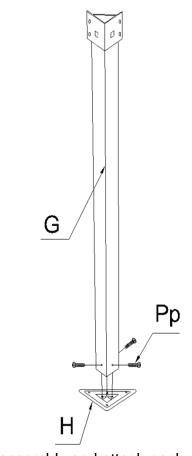


Step 3:

- 1. Unscrew 4 Pp Bolts as shown below, have someone lift the Beam assembly and attach each Leg "G" into a Corner, again securing each using 4 Bolts "Pp".
- 2. Repeat until all four Legs are in place

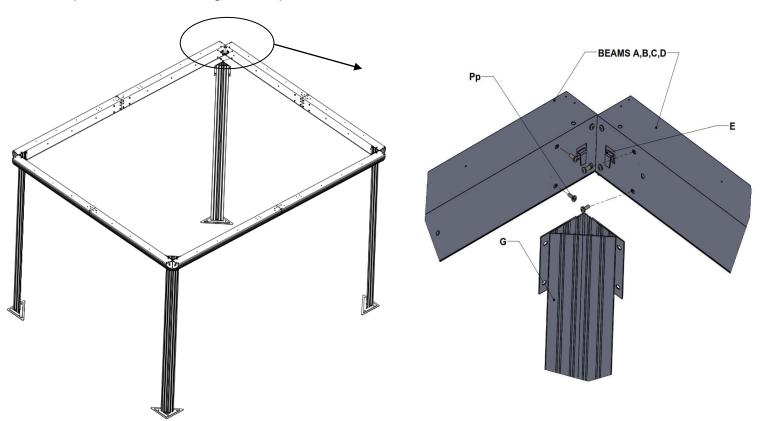


Step 4:

- Install Middle Cover "J" at each of the 4 beam junctions, using 4 Screws "Qq" each.
 Install Corner Cover "I" at each of the corners, using 4 Screws "Qq" each.

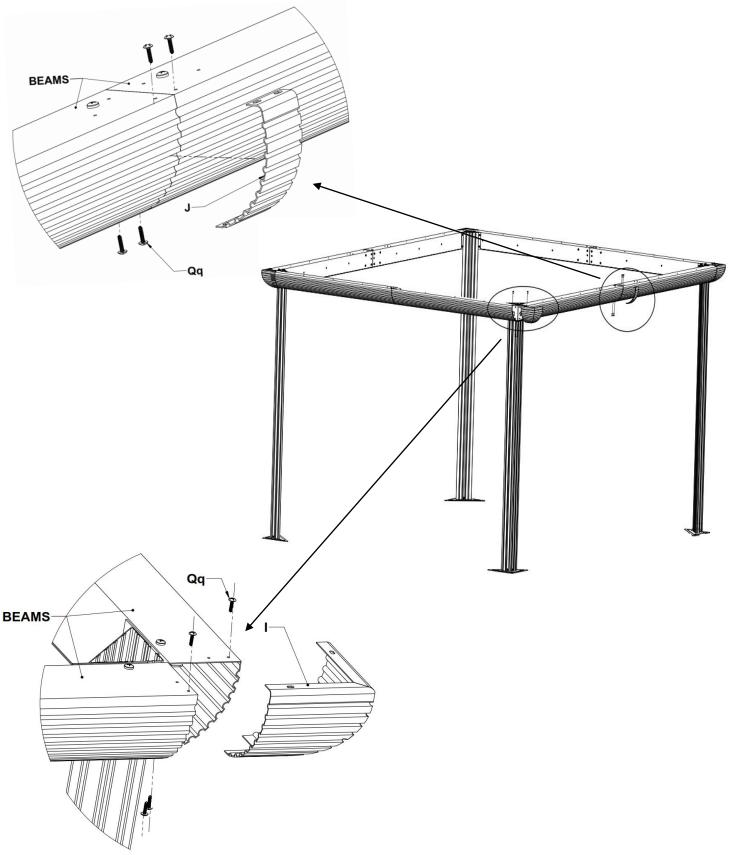

Step 5:

- 1. Attach Mounting Brackets "O" and "P" to Rafters "M" and "N" respectively. Use threaded hole about 8 1/2" & 5" from end of rafter.
- 2. Lift Central Hub "L" to a height of about 110" (2.79m) at the center of the gazebo. (Caution: this part may be heavy, use support as needed)
- 3. Attach one end of Rafter "M" to the hub using 1 Bolt "Pp". Attach other end with Mounting Bracket to the corner of the beam assembly with 2 Bolts "Pp". Use the set of holes closest to the inside. Repeat with remaining "M" Rafters.
- 4. Similarly, attach one end of Rafter "N" to the hub using 1 Bolt "Pp". Attach other end with Mounting Bracket to the beam assembly with 2 Screws "Qq". Use the set of holes closest to the inside. Repeat with remaining "N" Rafters.

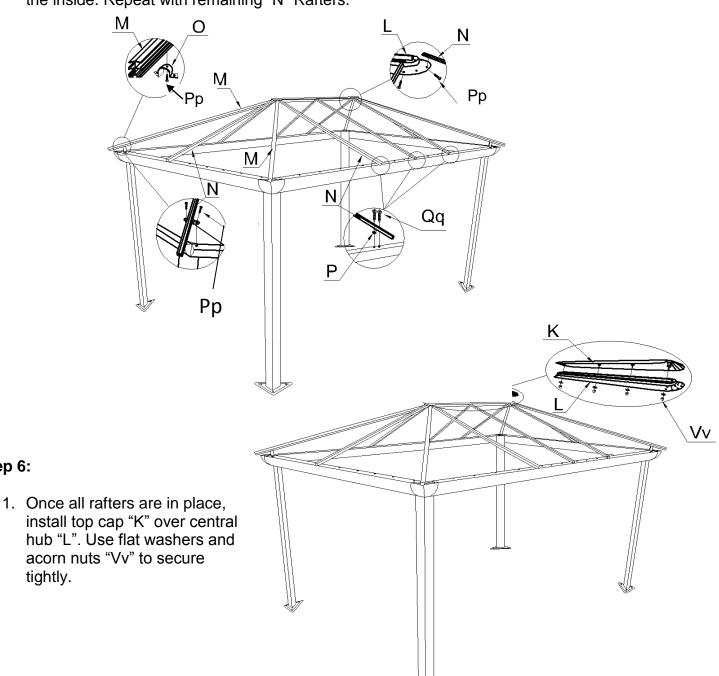


tightly.

Step 6:


Step 7:

1. Install the Flashings "Q", "R", and "S" onto the beam assembly, using Screws "Qq" on the inside. The notched end of a flashing will always go in a corner of the gazebo.

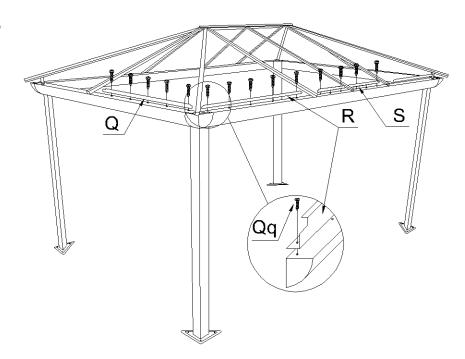


Step 8:

1. Install the Curtain Rails "T" and "U" on the inside of the beam assembly using Bolts "Pp".

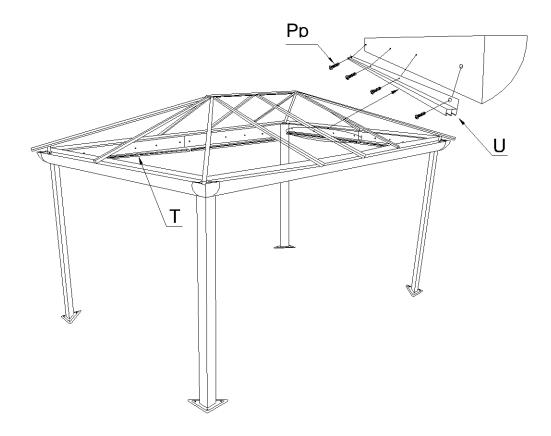


Step 9:

1. Slide the indicated polycarbonate panels into the spaces between the rafters, using the top groove of each rafter. Ensure the side meant to face the sun is on the outside. Use a rubber hammer to carefully tap each panel into the grooves.

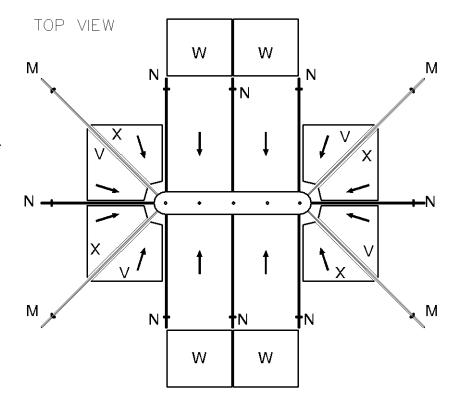


Step 10:

- 1. Insert the middle roof joints in between the rafters and slide them up under the polycarbonate panels. Tap lightly to ensure the panel is fully in the slot. Seen from above, most of the joint as well as the drain holes should be beneath the roof panels.
- 2. To adjust the middle joints to line up: once all polycarbonate roof panels are in place, use a small piece of wood and hammer, then tap down on the middle of the joint bringing it down and holding at the same time the joint and top polycarbonate.
- 3. Do not tap too hard.

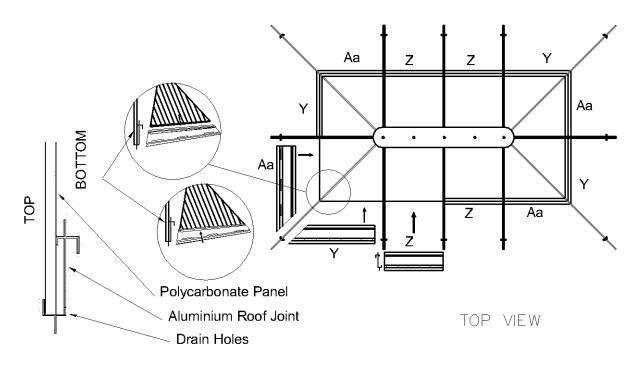


Step 11:

1. Slide the remaining polycarbonate roof panels in the lower groove of the rafters and into the lower slot of the roof joints. Tap to make sure panels fit securely and do not extend past the ends of the rafters.

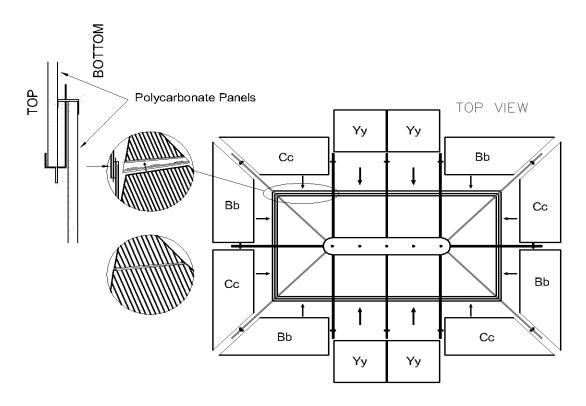


Step 12:

 Starting from any end, install all edgings, with end caps "Gg" or "Hh" at each junction or corner respectively. Use bolts "Pp" to secure.

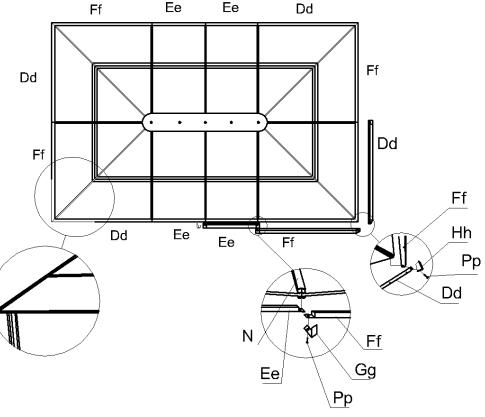

Step 13:


1. Install the upper crossbars on the interior of the roof using "Pp", bolts following the shaped ends and letters. Do not tighten bolts immediately; install loose and tighten once all crossbars are in place.

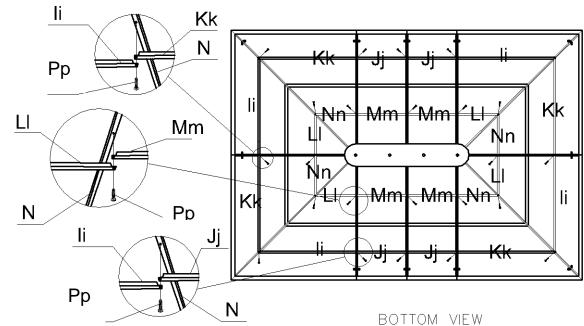

2. Repeat this step with the lower crossbars.


Step 14:

- Secure each foot plate into the ground using screws "Rr" and washers "Tt".
- 2. Use lag shields (Ss) if needed for harder surfaces.

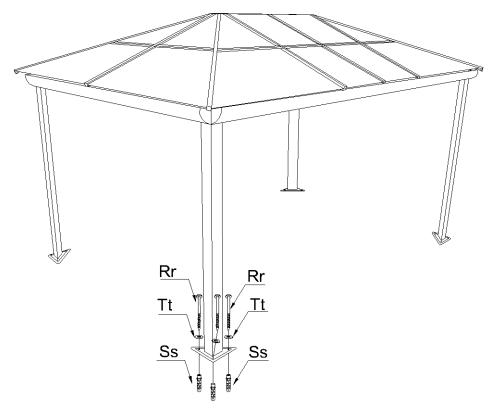

Step 15:


1. Install the screen curtains "Ww" in the interior groove of the curtain rails, using the provided hooks. Install the privacy curtains "Xx" in the exterior groove of the rails. Once the hooks are in, use curtain rail caps "Uu" to close ends of curtain rails.

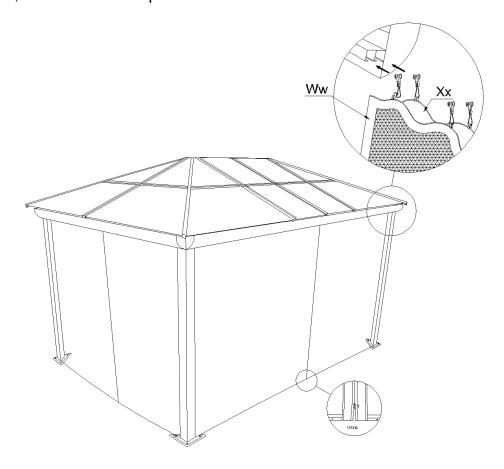

Note that both curtains are packaged and ordered in sets of 2 panels, each set covering half the gazebo.

IMPORTANT NOTES:

Make sure all screws and bolts are tight. If conditions are windy, you may have to add cable guides at the corners.

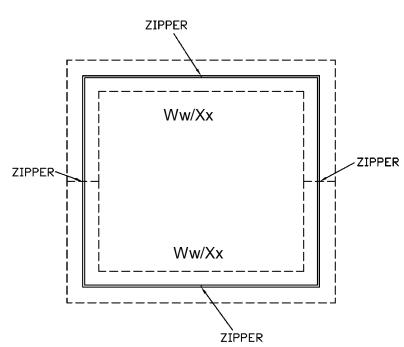

43204 BROWN (see page 18 for Slate parts)

DART	PACKED		DIACRAM		PACKED	OTV	DIACRAM
PART	IN BOX	QTY	DIAGRAM	PART	IN BOX	QTY	DIAGRAM
(11-624-22) 52 ¾" TOP LEFT BEAM A	3	2	(0)	(11-637-22) 60 3/8" ROOF RAFTER N	2	8	
(11-625-22) 52 ¾" TOP RIGHT BEAM B	3	2		(12-030-22) RAFTER M MOUNTING BRACKET O	2	4	
(11-662-22) 78 ¼" TOP LEFT BEAM C	3	2	(5)	(12-031-22) RAFTER N MOUNTING BRACKET P	2	8	
(11-663-22) 78 ¼" TOP RIGHT BEAM D	3	2		(11-638-22) 55 ½" RIGHT FLASHING Q	2	4	L
(11-628-22) CORNER PLATE E	3	4		(11-639-22) 55 ¼" LEFT FLASHING R	2	4	L
(11-629-22) CENTER PLATE F	3	4	**************************************	(11-709-22) 51" CENTER FLASHING S	2	2	
(11-630-22) 81 ½" LEG G	3	4		(11-666-22) 73 ¼" CURTAIN RAIL, 14' SIDE T	2	4	H
(11-631-22) FOOT PLATE H	3	4		(11-642-22) 47 ¾" CURTAIN RAIL, 10' SIDE U	2	4	H
(11-632-22) CORNER COVER I	3	4		(11-643) 30"x30" LEFT UPPER ROOF PANEL V	1	4	
777 202 42204 (2244 24 CD EN			M/ED \/EDCIONI	•	•	1.4

PART	PACKED IN BOX	QTY	DIAGRAM	PART	PACKED IN BOX	QTY	DIAGRAM
(11-633-22) MIDDLE COVER J	3	4		(11-644) 29 ½"x25 ½" MIDDLE UPPER ROOF PANEL W	1	4	
(11-664-22) 63" TOP CAP K	2	1		(11-645) 30"x30" RIGHT UPPER ROOF PANEL X	1	4	
(11-665-22) 60" CENTRAL HUB L	2	1		(11-646-22) 30 ¾" LEFT MIDDLE ROOF JOINT Y	2	4	
(11-636-22) 83" ROOF RAFTER M	2	4		(11-647-22) 25 ½" CENTER MIDDLE ROOF JOINT Z	2	4	
(11-648-22) 30 ¾" RIGHT MIDDLE ROOF JOINT Aa	2	4		(11-661-22) 17 ½" RIGHT UPPER CROSSBAR Nn	2	4	T
(11-649) 33"x58 1/8" LEFT LOWER ROOF PANEL Bb	1	4		(08-158-22) BOLT Pp	3	196	(M6x16mm)
(11-650) 33"x58 1/8" RIGHT LOWER ROOF PANEL Cc	1	4		(08-156-22) SCREW Qq	3	100	(M4x16mm)

PART	PACKED IN BOX	QTY	DIAGRAM	PART	PACKED IN BOX	QTY	DIAGRAM
(11-651-22) 58 7/8" LEFT EDGING Dd	2	4		(08-167-22) SCREW Rr	3	12	(M6x100mm)
(11-652-22) 26 ³ / ₄ " CENTER EDGING Ee	2	4	<u> </u>	(08-193) PLASTIC PLUG Ss	3	12	
(11-653-22) 58 7/8" RIGHT EDGING Ff	2	4		(08-187) WASHER Tt	3	16	(M6)
(11-654-22) RAFTER CAP Gg	2	8		(11-697) CURTAIN RAIL CAP Uu	3	8	
(11-655-22) CORNER END BRACKET Hh	2	4		(08-189-22) ACORN NUT Vv	3	4	Θ
(11-656-22) 44" LEFT LOWER	2	4		(11-667) SCREENING	2	2 Left	
CROSSBA R Ii				Ww		2 Right	
(11-657-22) 26 ¾" MIDDLE LOWER	2	4		(11-668) PRIVACY	2	2 Left	
CROSSBA R Jj	-			CURTAIN Xx	-	2 Right	
(11-658-22) 44" RIGHT LOWER CROSSBA R Kk	2	4		(11-706) 33"x25 ½" MIDDLE LOWER ROOF PANEL Yy	1	4	

PART	PACKED IN BOX	QTY	DIAGRAM	PART	PACKED IN BOX	QTY	DIAGRAM
(11-659-22) 17 ½" LEFT UPPER CROSSBAR LI	2	4		(11-705) CURTAIN HOOKS	3	96	J.
(11-660-22) 26 ¾" MIDDLE UPPER CROSSBAR Mm	2	4	I	10 mm KEY	3	1	

*NOT INCLUDED IN THE BOX								
DESCRIPTION	PART#							
SPRAY PAINT	BROWN	11-726						
PAINT PEN	Brown	18-184						

43204 SLATE

			7520	4 SLATE			
PART	PACKED IN BOX	QTY	DIAGRAM	PART	PACKED IN BOX	QTY	DIAGRAM
(11-624-32) 52 ¾" TOP LEFT BEAM A	3	2	(i)	(11-637-32) 60 3/8" ROOF RAFTER N	2	8	#
(11-625-32) 52 ¾" TOP RIGHT BEAM B	3	2		(12-030-32) RAFTER M MOUNTING BRACKET O	2	4	€
(11-662-32) 78 ¼" TOP LEFT BEAM C	3	2	(i)	(12-031-32) RAFTER N MOUNTING BRACKET P	2	8	
(11-663-32) 78 ¼" TOP RIGHT BEAM D	3	2		(11-638-32) 55 ¼" RIGHT FLASHING Q	2	4	L
(11-628-32) CORNER PLATE E	3	4		(11-639-32) 55 ¼" LEFT FLASHING R	2	4	L
(11-629-32) CENTER PLATE F	3	4	9 6 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0	(11-709-32) 51" CENTER FLASHING S	2	2	
(11-630-32) 81 ½" LEG G	3	4	R .	(11-666-32) 73 ¼" CURTAIN RAIL, 14' SIDE T	2	4	H H
(11-631-32) FOOT PLATE H	3	4		(11-642-32) 47 ¾" CURTAIN RAIL, 10' SIDE U	2	4	Н
(11-632-32) CORNER COVER I	3	4		(11-643) 30"x30" LEFT UPPER ROOF PANEL V	1	4	

PART	PACKED IN BOX	QTY	DIAGRAM	PART	PACKED IN BOX	QTY	DIAGRAM
(11-633-32) MIDDLE COVER J	3	4		(11-644) 29 ½"x25 ½" MIDDLE UPPER ROOF PANEL W	1	4	
(11-664-32) 63" TOP CAP K	2	1		(11-645) 30"x30" RIGHT UPPER ROOF PANEL X	1	4	
(11-665-32) 60" CENTRAL HUB L	2	1		(11-646-32) 30 ¾" LEFT MIDDLE ROOF JOINT Y	2	4	
(11-636-32) 83" ROOF RAFTER M	2	4	{ 1 3	(11-647-32) 25 ½" CENTER MIDDLE ROOF JOINT Z	2	4	
(11-648-32) 30 ¾" RIGHT MIDDLE ROOF JOINT Aa	2	4		(11-661-32) 17 ½" RIGHT UPPER CROSSBAR Nn	2	4	<u> </u>
(11-649) 33"x58 1/8" LEFT LOWER ROOF PANEL Bb	1	4		(08-158-32) BOLT Pp	3	196	(M6x16mm)
(11-650) 33"x58 1/8" RIGHT LOWER ROOF PANEL Cc	1	4		(08-156-32) SCREW Qq	3	100	(M4x16mm)

PART	PACKED IN BOX	QTY	DIAGRAM	PART	PACKED IN BOX	QTY	DIAGRAM
(11-651-32) 58 7/8" LEFT EDGING Dd	2	4		(08-167-32) SCREW Rr	3	12	(M6x100mm)
(11-652-32) 26 ¾" CENTER EDGING Ee	2	4	• • •	(08-193) PLASTIC PLUG Ss	3	12	
(11-653-32) 58 7/8" RIGHT EDGING Ff	2	4		(08-187) WASHER Tt	3	16	(M6)
(11-654-32) RAFTER CAP Gg	2	8		(11-697) CURTAIN RAIL CAP Uu	3	8	
(11-655-32) CORNER END BRACKET Hh	2	4		(08-189-32) ACORN NUT Vv	3	4	Θ
(11-656-32) 44" LEFT	0	4		(11-667)	0	2 Left	
LOWER CROSSBAR Ii	2	4		SCREENING Ww	2	2 Right	
(11-657-32) 26 ³ / ₄ " MIDDLE	2	4		(11-668) PRIVACY	2	2 Left	
LOWER CROSSBAR Jj			-	CURTAIN Xx		2 Right	
(11-658-32) 44" RIGHT LOWER CROSSBAR Kk	2	4		(11-706) 33"x25 ½" MIDDLE LOWER ROOF PANEL Yy	1	4	

PART	PACKED IN BOX	QTY	DIAGRAM	PART	PACKED IN BOX	QTY	DIAGRAM
(11-659-32) 17 ½" LEFT UPPER CROSSBAR LI	2	4		(11-705) CURTAIN HOOKS	3	96	
(11-660-32) 26 ¾" MIDDLE UPPER CROSSBAR Mm	2	4	I	10 mm KEY	3	1	
*NOT	ВОХ						
DESCRIPTION	COLO	DUR	PART#				
SPRAY PAINT	SLA	TE _	18-125				
PAINT PEN			18-126				

NOTE: The Dimensions Are Approximate.

