



OUTDOOR STORAGE

MODEL N° 60011

OWNER'S MANUAL

Keep this Identification Number in case you must contact our Customer Service Department.

REGISTER YOUR LIFETIME PRODUCT TODAY!

There are benefits to registering your Lifetime product. With our new online product registration form, it's fast and easy! Register with us at www.lifetime.com and enjoy these great benefits:

- Receive exclusive money-saving offers from BuyLifetime.com, our online store, as well as NEW product notifications and special closeout promotions!
- In the unlikely event of a product recall or safety modification, we will notify you.
- Registering your product guarantees you warranty service. If you do not register your product, your warranty rights will not be diminished. But you will need to provide a sales receipt to verify your product purchase date before warranty service will be provided.

LIFETIME'S PROMISE TO YOU:

Maintaining your privacy is our long-standing policy at Lifetime. And you can rest assured that Lifetime will not sell or provide your personal data to other third parties, or allow them to use your personal data for their own purposes.

We invite you to read our privacy policy at www.lifetime.com

REGISTER today!

****U.S. and Canada customers ONLY****

IF ASSISTANCE IS NEEDED,

DO NOT CONTACT THE STORE!

CALL OUR CUSTOMER SERVICE DEPARTMENT at 1 (800) 225-3865

HOURS: 7:00 a.m. to 5:00 p.m. Monday through Friday (Mountain Standard Time)

Call, or visit our Web site for Saturday hours

For customers outside the U.S. or Canada, please contact the store for assistance.



SAFETY INSTRUCTIONS



FAILURE TO FOLLOW THESE WARNINGS MAY RESULT IN SERIOUS INJURY OR PROPERTY DAMAGE AND WILL VOID WARRANTY.

To ensure safety, do not attempt to assemble this product without following the instructions carefully. Check entire box and inside all packing material for parts and/or additional instruction material. Before beginning assembly, read the instructions and identify parts using the hardware identifier and parts list in this document. Proper and complete assembly, use and supervision are essential to reduce the risk of accident or injury.


- Do not use or store hot objects such as grills, blowtorches, welding equipment, etc. near the product.
- If using a ladder during assembly, use extreme caution.
- Two capable adults are required for assembly. (It is also recommended that a third adult function as an instruction reader.)

Most injuries are caused by misuse and/or not following instructions. Use caution when using this product.

BEFORE BEGINNING ASSEMBLY



Keep the hardware bags and their contents separate. If any parts are missing, call our Customer Service Department.

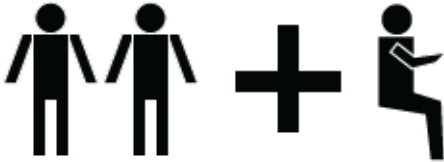

****Two adults required to complete assembly****
(+ one adult suggested as an instruction reader)

Only adults should set up the product. Do not allow children in the set-up area until assembly is complete.



TOOLS REQUIRED FOR THIS ASSEMBLY (NOT PROVIDED)

7/16"



(2)

Ladder



(2)

1/2"



(1)

Electric Drill



(1)

Adjustable Wrench



(1)

Work Light



(1)

Pliers



(1)

Box Knife



(1)

Flashlight



(1)

Phillips Screwdriver



(1)

Hammer Drill
(For concrete platforms)



(1)

Pencil or Marker



(1)

Safety Glasses



(1 pair for each person)

*Read the "Screwdriver Notice" on page 5.

ASSEMBLY GUIDES

Refer to the following areas throughout the instructions to assist in the assembly process:

This area is located at the top, left-hand corner of the page and indicates which tools and hardware are needed to complete the assembly steps on a page.



TOOLS AND HARDWARE REQUIRED FOR THIS PAGE

This area is located at the top, right-hand corner of the page and shows an image of the product with shaded parts indicating which section is being assembled.

SEC #

This area is usually located in the bottom, left-hand corner of a step and indicates that special attention is needed to perform a particular part of a step.



Note:

These areas are usually located in the bottom, right-hand corner of a step and indicate that damage to the product or serious injury may occur if the caution or warning is not heeded.



CAUTION



WARNING

IMPORTANT NOTICES

Level Surface Notice:

Surface must be leveled before installation. We recommend building a level work space with a concrete or patio style surface. If the surface is not properly leveled, the Outdoor Shed will not assemble correctly. Proper surface leveling will save you time in the long run, so please do not ignore this step.

Building Code Notice:

Consult all local building codes, as well as city and county ordinances, to ensure that the construction of the Outdoor Shed does not require a building permit. Proper building permit documentation may be required in your neighborhood, and it would be unfortunate to learn this after constructing the Shed.

Screwdriver Notice:

You may use a #2 Phillips head screwdriver bit and a power screwdriver or drill, instead of a hand screwdriver. However, be aware that the plastic pieces of your Shed can be damaged by overtightening of screws. To avoid damage we strongly recommend the use of a low-powered power screwdriver or a drill that has an adjustable clutch that is set on a low torque setting. If neither is available, use a hand screwdriver. In any case use caution to avoid overtightening the screws.

Floor Puncture Notice:

Sharp objects may damage your floor. If resting sharp, heavy objects on your Shed floor, place a block of wood between the sharp object and floor.



CAUTION:

If more than six (6) inches of snow accumulate on the roof of the shed, carefully remove the snow to avoid possible roof collapse. While standing on the ground, remove the snow from the roof with a broom or snow shovel. Do not stand on the roof to remove snow.

PARTS & HARDWARE LIST

PARTS BOX

ID	Description	Qty
BQR	Vertical Door Support	5
BQT	Door Brace	3
BRF	Truss/Wall Support Channel	7
BQY	Truss/Wall Support Channel for Window Wall Panel	1
BFJ	Rear Gable Support	1
BRE	Truss-to-Gable Channel	4
BRV SMALL PARTS BOX [1051927]		
BRC	Gable-to-Roof Bracket	8
BQU	Corner Wall Channel Upper Bracket	2
BRA	Center Truss-to-Rear Gable Bracket	1
BQX	Outer Truss-to-Rear Gable Bracket	2
BQS	Wall-to-Floor Support Bracket	3
BQZ	Truss/Wall Support Channel Floor Bracket	8
BRB	Entry Gable Support Bracket	1
BRG	Truss/Wall Support Channel Reinforcement for Window Wall Panel	1
BRD	Short Truss Brace	3
BQK	Distance Indicator	1
BQW	Truss Gusset	12
BRU TOOLS & HARDWARE BAGS [1050942]		
BRT TOOL BAG [1055274]		
ARA	1/8" Drill Bit	1
BQN	5/16" Drill Bit	1
BQL	5/16" Hex Driver Socket	1
BQM	#2 x 3" Phillips Bit	1
BRQ WALL/TRUSS SUPPORT CHANNEL INSTALLATION HARDWARE [1055275]		
BRN	1/2" x 2" Lag Bolt	11
BRP	1/4" x 2 1/4" Hex Bolt	16
ADJ	1/4" Cap Nut	16
ADZ	1/4" x 5/8" Pan-Head Screw	73
BRK	#10 x 5/8" Self-Tapping Screw	24
BRR TRUSS SUPPORT ASSEMBLY HARDWARE [1055276]		
BRK	#10 x 5/8" Self-Tapping Screw	63
ADZ	1/4" x 5/8" Pan-Head Screw	32
BQI	5/16" x 2 1/4" Hex Bolt	1
BRL	5/16" Bonded Washer	1
AAN	5/16" Cap Nut	1
AHS	End Plug	2
BES	1/4" x 1/2" Hex Bolt	6
ADV	1/4" x 1 1/8" Pan-Head Screw	6
ADJ	1/4" Cap Nut	6
BRS DOOR SUPPORT ASSEMBLY HARDWARE [1055277]		
BRK	#10 x 5/8" Self-Tapping Screw	18
BRJ	#10 x 1" Self-Tapping Screw	12
ADZ	1/4" x 5/8" Pan-Head Screw	24
BRH	5/16" x 2 1/4" Carriage Bolt	2
BQJ	5/16" Hex Nut	4
BRM	5/16" T-Knob	2
BQO	#10 x 3/4" Flat-Head Screw	1
BRO	#10 x 1 1/4" Pan-Head Screw	6
ADX	#10 x 1/2" Pan-Head Screw	2
AVU	5/16" Flat Washer	4
BRI	Locking Lever	2
AHL	Floor Strike Plate	1

! Note: This weather kit was designed for our standard 8' x 10' shed. Whether or not you use all the hardware provided depends on the size of your shed.

TOOLS, PARTS & HARDWARE IDENTIFIER

TOOL & HARDWARE BAGS

[BRT] TOOL BAG


Tools shown at actual size



BQN (x1)
5/16" Drill Bit



ARA (x1)
1/8" Drill Bit




BQL (x1)
5/16" Hex Driver Socket




BQM (x1)
#2 x 3" Phillips Bit

[BRQ] WALL/TRUSS SUPPORT CHANNEL INSTALLATION HARDWARE

Hardware shown at actual size

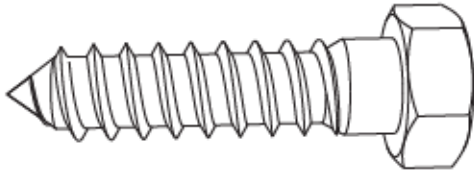

BRN (x11)
1/2" x 2" Lag Bolt



BRP (x16)
1/4" x 2 1/4" Hex Bolt



ADZ (x73)
1/4" x 5/8" Pan-Head Screw




BRK (x24)
#10 x 5/8" Self-Drilling Screw



ADJ (x16)
1/4" Cap Nut

[BRR] TRUSS SUPPORT ASSEMBLY HARDWARE


Hardware shown at actual size



BRK (x63)
#10 x 5/8" Self-Drilling Screw



ADZ (x32)
1/4" x 5/8" Pan-Head Screw




BQI (x1)
5/16" x 2 1/4" Hex Bolt



AAN (x1)
5/16" Cap Nut



AHS (x2)
End Plug



BES (x6)
1/4" x 1/2" Hex Bolt



ADV (x6)
1/4" x 1 1/8" Pan-Head Screw



ADJ (x6)
1/4" Cap Nut



BRL (x1)
5/16" Bonded Washer


PARTS & HARDWARE IDENTIFIER

[BRS] DOOR SUPPORT ASSEMBLY HARDWARE

Hardware shown at actual size (*Unless noted otherwise)



BRK (x18)
#10 x 5/8" Self-Drilling Screw




ADZ (x24)
1/4" x 5/8" Pan-Head Screw



BRH (x2)
1/4" x 2 1/4" Carriage Bolt



BQJ (x4)
5/16" Hex Nut

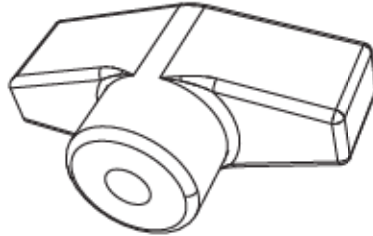

BRM (x2)
5/16" T-Knob



BRI (x2)
Locking Lever



BQO (x1)
#10 x 3/4" Flat-Head Screw



BRO (x6)
#10 x 1 1/4" Pan-Head Screw



ADX (x2)
#10 x 1/2" Pan-Head Screw



AVU (x4)
5/16" Flat Washer



***AHL** (x1)
Floor Strike Plate




BRJ (x12)
#10 x 1" Self-Tapping Screw


PARTS IDENTIFIER

SHED PARTS

Parts shown at 8% of actual size




BQR (x5)
Vertical Door Support




28 1/2"

BQT (x3)
Door Brace




71 1/8"

BRF (x7)
Truss/Wall Support Channel




71 1/8"


BQY (x1)
Truss/Wall Support Channel for Window Wall Panel



59 1/2"

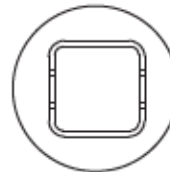

BFJ (x1)
Rear Gable Support




28 5/8"

BRE (x4)
Truss-to-Gable Channel

PARTS IDENTIFIER

[BRV] SMALL PARTS BOX


Parts shown at 25% of actual size

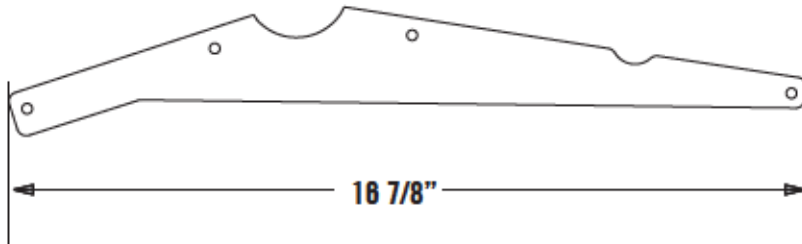

BQW (x12)
Truss Gusset




BRA (x1)
Center Truss-to-Rear Gable Bracket




BQX (x2)
Outer Truss-to-Rear Gable Bracket


Parts shown at 50% of actual size

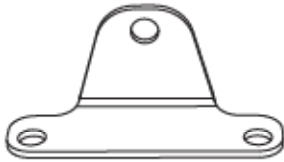

BRC (x8)
Gable-to-Roof Bracket

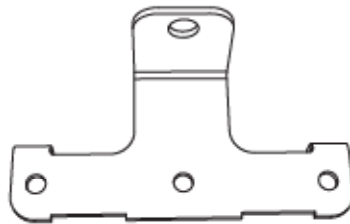

BRB (x1)
Entry Gable Support Bracket

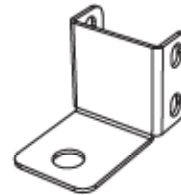

BQZ (x8)
Truss/Wall Support Channel Floor Bracket



BQS (x3)
Wall Support Floor Bracket




BQU (x2)
Corner Wall Channel Upper Bracket




BQK (x1)
Distance Indicator

Parts shown at 8% of actual size



BRD (x3)
Short Truss Brace



BRG (x1)
Truss/Wall Support Channel Reinforcement for Window Wall Panel

SEC 1 WALL/TRUSS SUPPORT CHANNEL INSTALLATION

HARDWARE REQUIRED


Hardware shown at actual size




BRK (x24)
#10 x 5/8" Self-Tapping Screw
(You might not use all)



ADZ (x73)
1/4" x 5/8" Pan-Head Screw
(You might not use all)

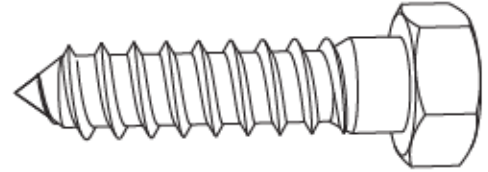

BRN (x11)
1/2" x 2" Lag Bolt
(You might not use all)




BRP (x16)
1/4" x 2 1/4" Hex Bolt (You might not use all)




ADJ (x16)
1/4" Cap Nut
(You might not use all)

PARTS REQUIRED


Parts shown at 8% of actual size



BRF (x7)
Truss/Wall Support Channel (You might not use all)



BQY (x1)
Truss/Wall Support Channel for Window Wall Panel




BRG (x1)
Truss/Wall Support Channel Reinforcement for Window Wall Panel

Parts shown at 50% of actual size



BQU (x2)
Corner Wall Channel
Upper Bracket

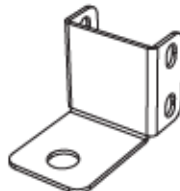

BQZ (x8)
Truss/Wall Support Channel Floor Bracket
(You might not use all)

TOOLS REQUIRED



7/16" Wrench (x2)



3/4" Wrench



Phillips Screwdriver



Electric Drill



Safety Glasses



BQL (x1)




TOOLS AND HARDWARE REQUIRED FOR THIS PAGE

SEC 1



7/16" (x2)



BRP (x16)
(You might not use all)





ADJ (x16)
(You might not use all)



SEC

1.1

Attach a **Floor Bracket (BQZ)** to the bottom of each **Truss/Wall Support Channel (BRF)** and **Truss/Wall Support Channel for Window Wall Panel (BQY)** and secure with two (2) 1/4" x 2 1/4" Hex Bolts (**BRP**) and two (2) 1/4" Cap Nuts (**ADJ**). Do not overtighten.

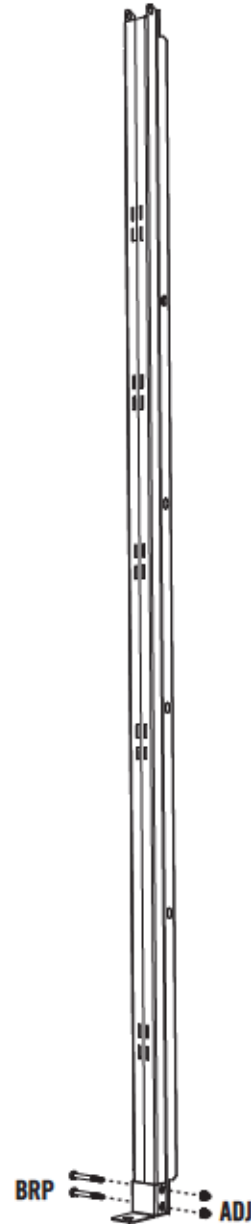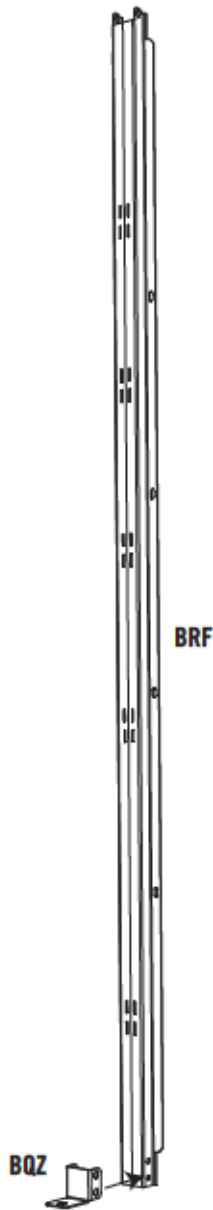



TOOLS AND HARDWARE REQUIRED FOR THIS PAGE



BQL




ADZ (x40)
(You might not use all)



BRK (x10)
(You might not use all)


SEC 1

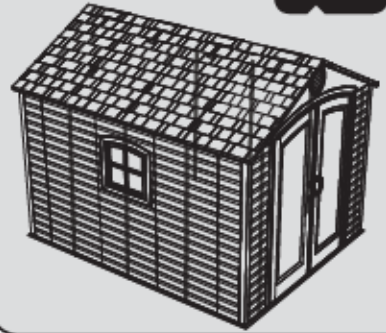

SEC

1.2

Attach a **Truss/Wall Support Channel (BRF)** to the end of a **Truss Gutter Channel** using two (2) **#10 x 5/8" Self-Tapping Screws (BRK)** as shown. Connect the **Truss/Wall Support Channel** to the **Wall Panel** using eight (8) **1/4" x 5/8" Pan-Head Screws (ADZ)** through the holes on along both sides of the length of the **Truss/Wall Support Channel**. Repeat this step for the ends of all **Truss/Wall Support Channels** except for any over a **Window Wall Panel**.

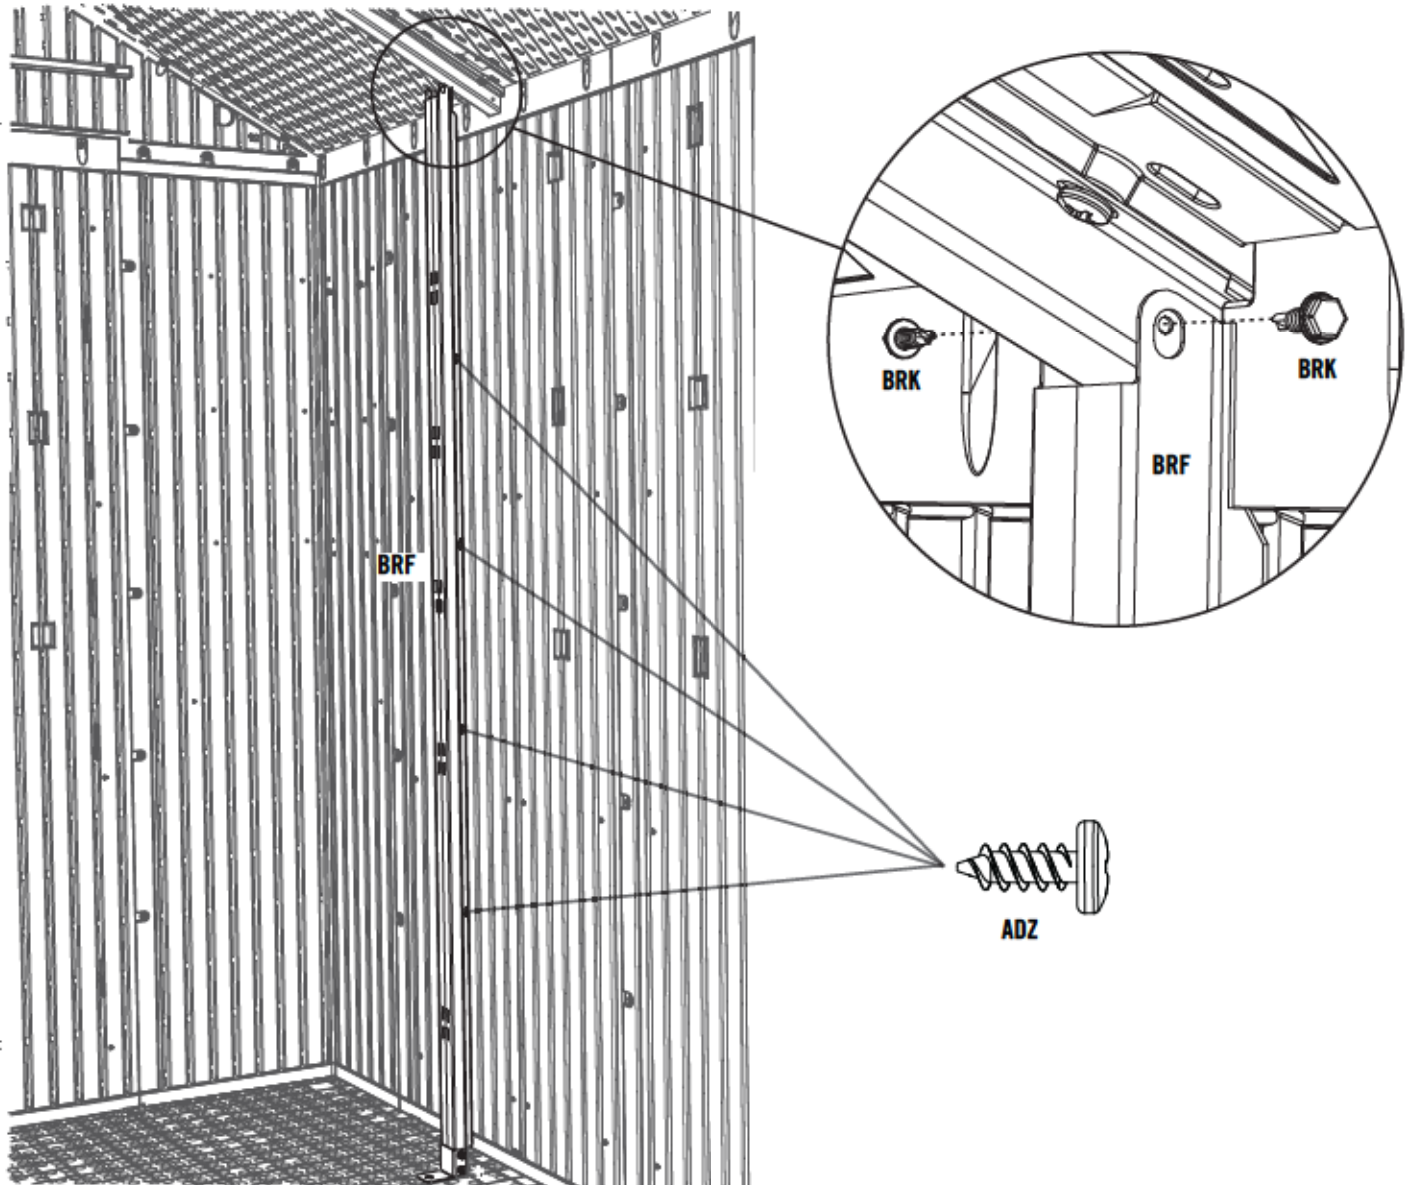



TOOLS AND HARDWARE REQUIRED FOR THIS PAGE

SEC 1




BQL



ADZ (x10)





BRK (x2)

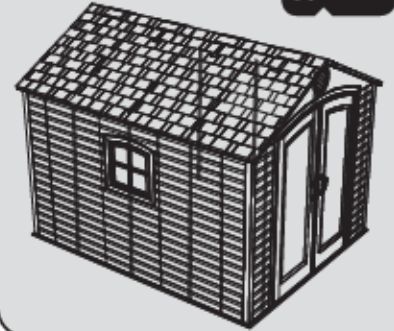

SEC

1.3

Attach a **Truss/Wall Support Channel for Window Wall Panel (BQY)** to the end of the Truss Gutter Channel just above the Window Wall Panel using two (2) **Self-Tapping Screws (BRK)**. Connect the Truss/Wall Support Channel for Window Wall Panel to the Window Wall Panel using ten (10) **1/4" x 5/8" Pan-Head Screws (ADZ)**. Repeat this step for any other Window Wall Panels. If you have no Window Wall Panel, you can still use this part in place of a Truss/Wall Support Channel.

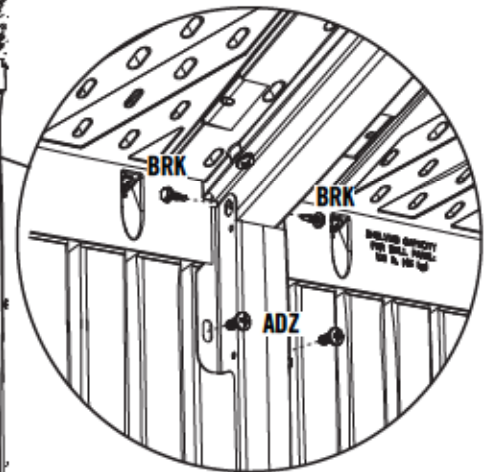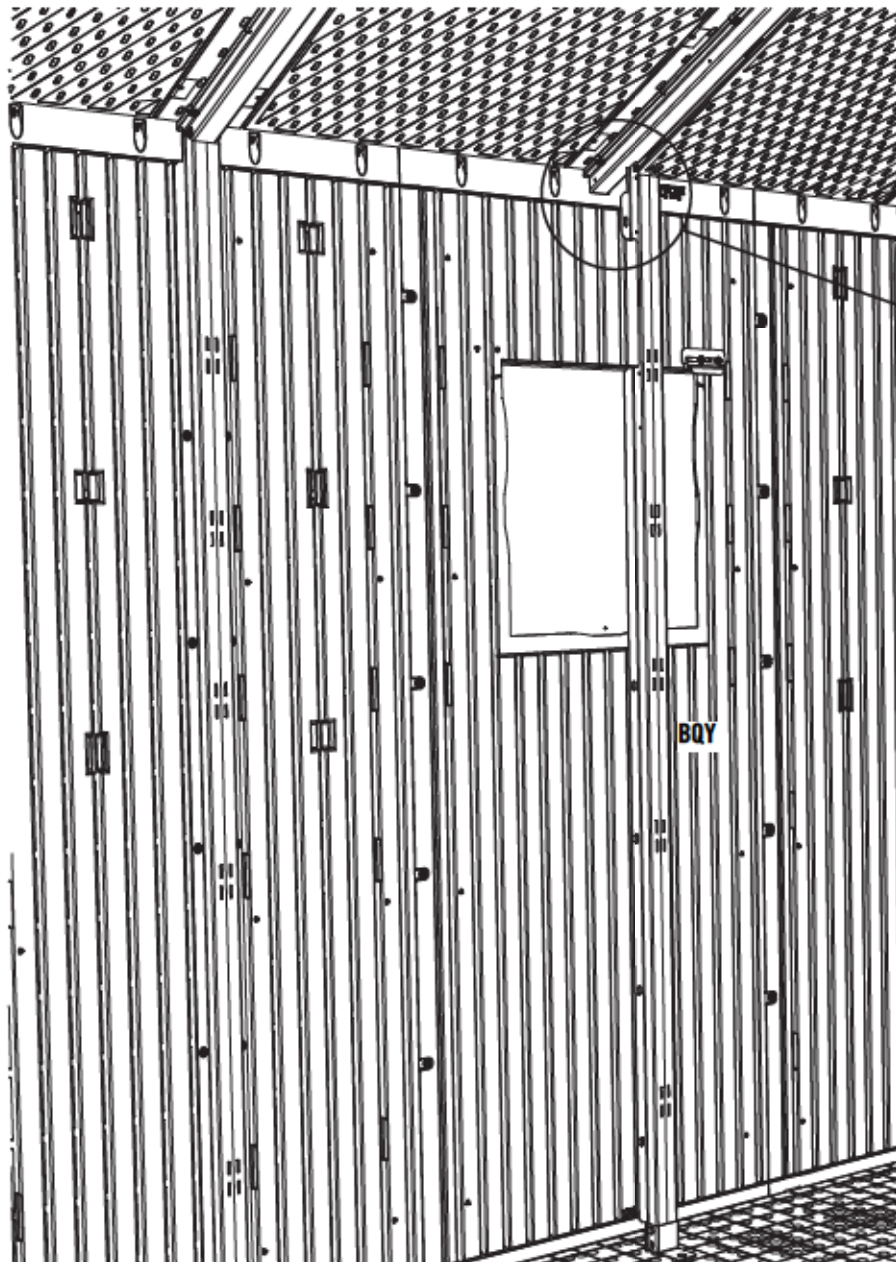




TOOLS AND HARDWARE REQUIRED FOR THIS PAGE

SEC 1



BQL





BRK (x8)



SEC



1.4

Attach a **Truss/Wall Support Channel Reinforcement for Window Wall Panel (BRG)** to the top of the Truss/Wall Support Channel for Window Wall Panel using four (4) **#10 x 5/8" Self-Tapping Screws (BRK)**. Repeat this step for any other Window Wall Panels.

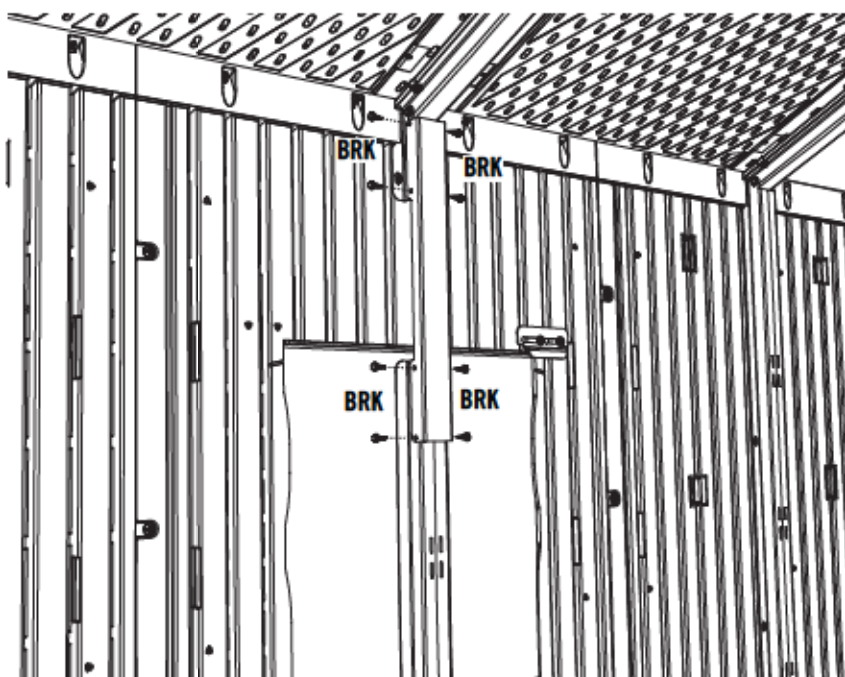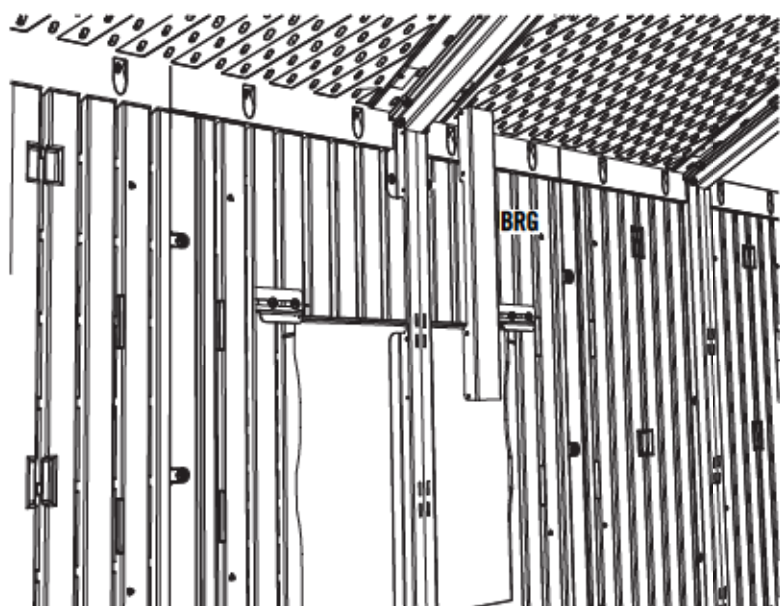




TOOLS AND HARDWARE REQUIRED FOR THIS PAGE

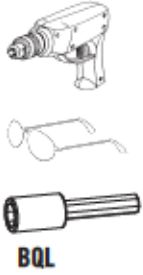

BRK (x4)



SEC 1

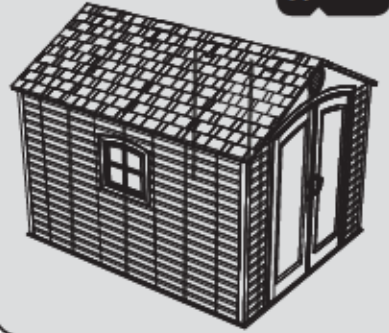

SEC


1.5

Attach a **Front Wall Support Channel Upper Bracket (BQU)** to the top of a **Truss/Wall Support Channel** using two (2) **#10 x 5/8" Self-Tapping Screws (BRK)** as shown. Repeat this step for the second **Front Wall Support Channel Upper Bracket**.

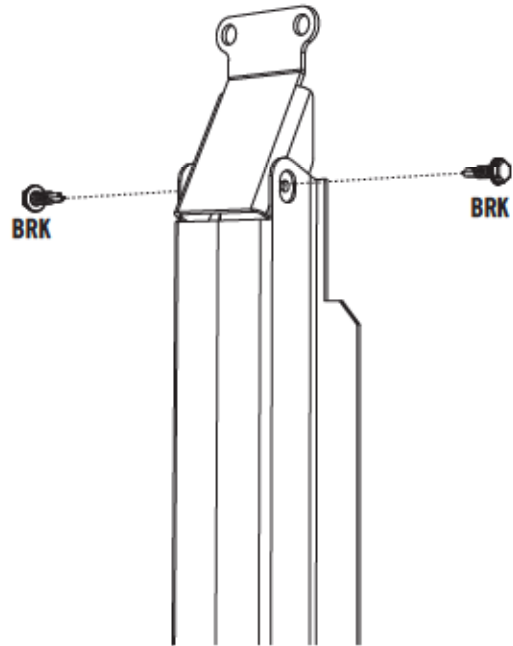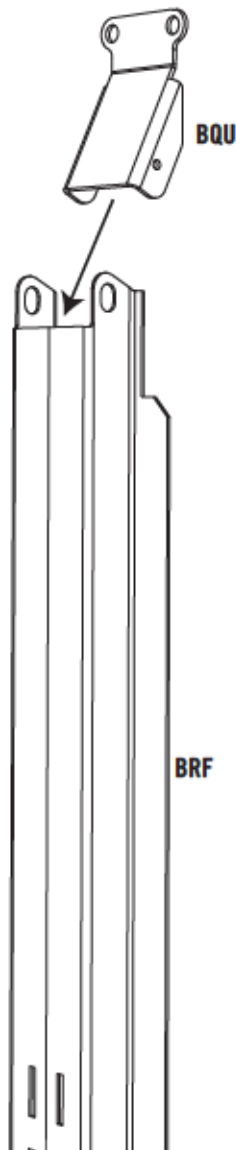




TOOLS AND HARDWARE REQUIRED FOR THIS PAGE



ADZ (x20)



SEC 1

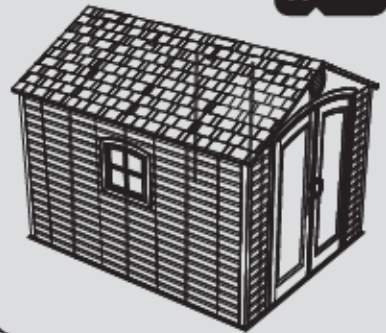

SEC

1.6



Attach a **Truss/Wall Support Channel with Upper Bracket Assembly** next to the first groove on the front, right Corner Wall Panel and secure with ten (10) 1/4" x 5/8" Pan-Head Screws (ADZ). Repeat this step for the front, left Corner Wall Panel.

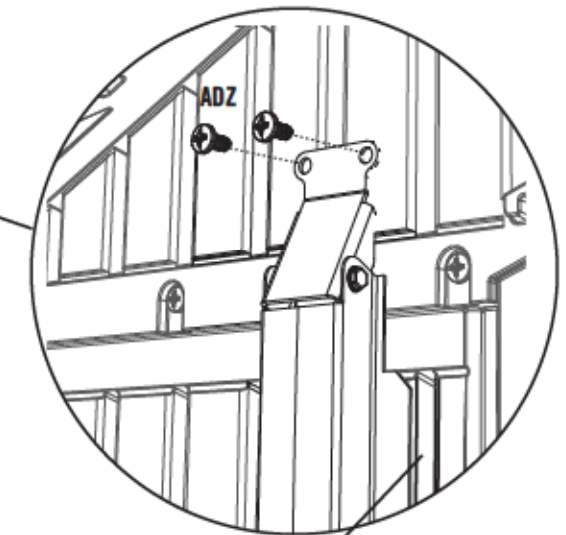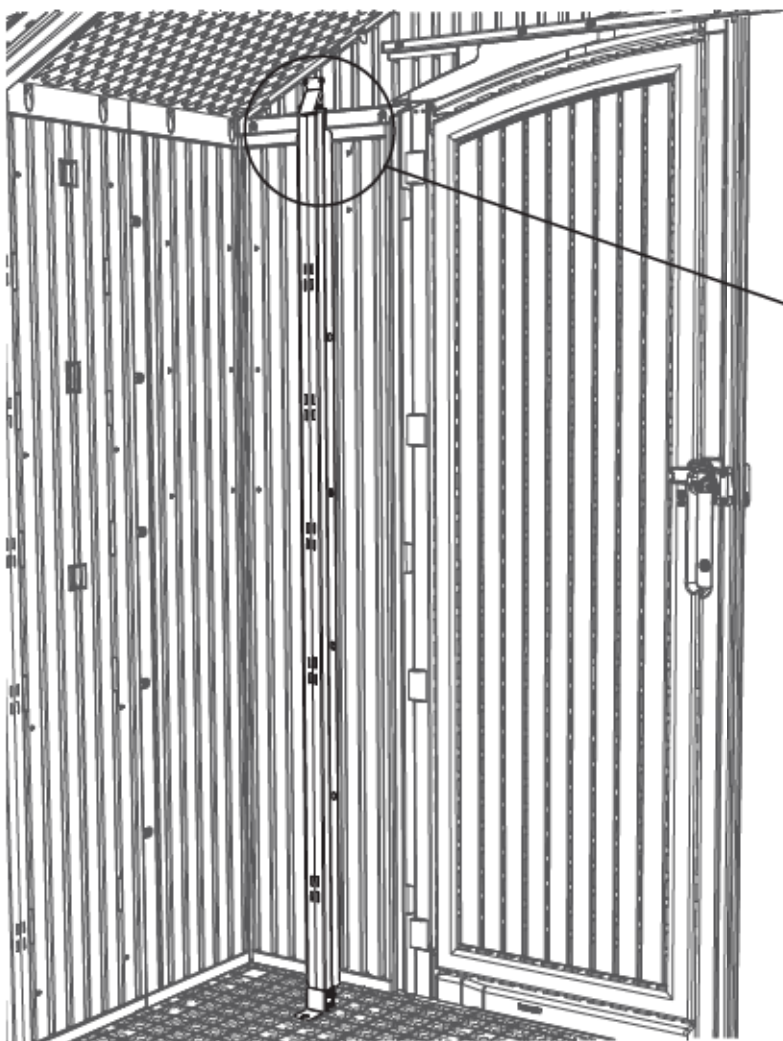

First Groove in Corner Wall Panel



TOOLS AND HARDWARE REQUIRED FOR THIS PAGE



ADZ (x3)


SEC 1



SEC

1.7

Connect the **Wall-to-Floor Support Brackets (BQS)** to the rear Wall using **1/4" x 5/8" Pan-Head Screws (ADZ)**.

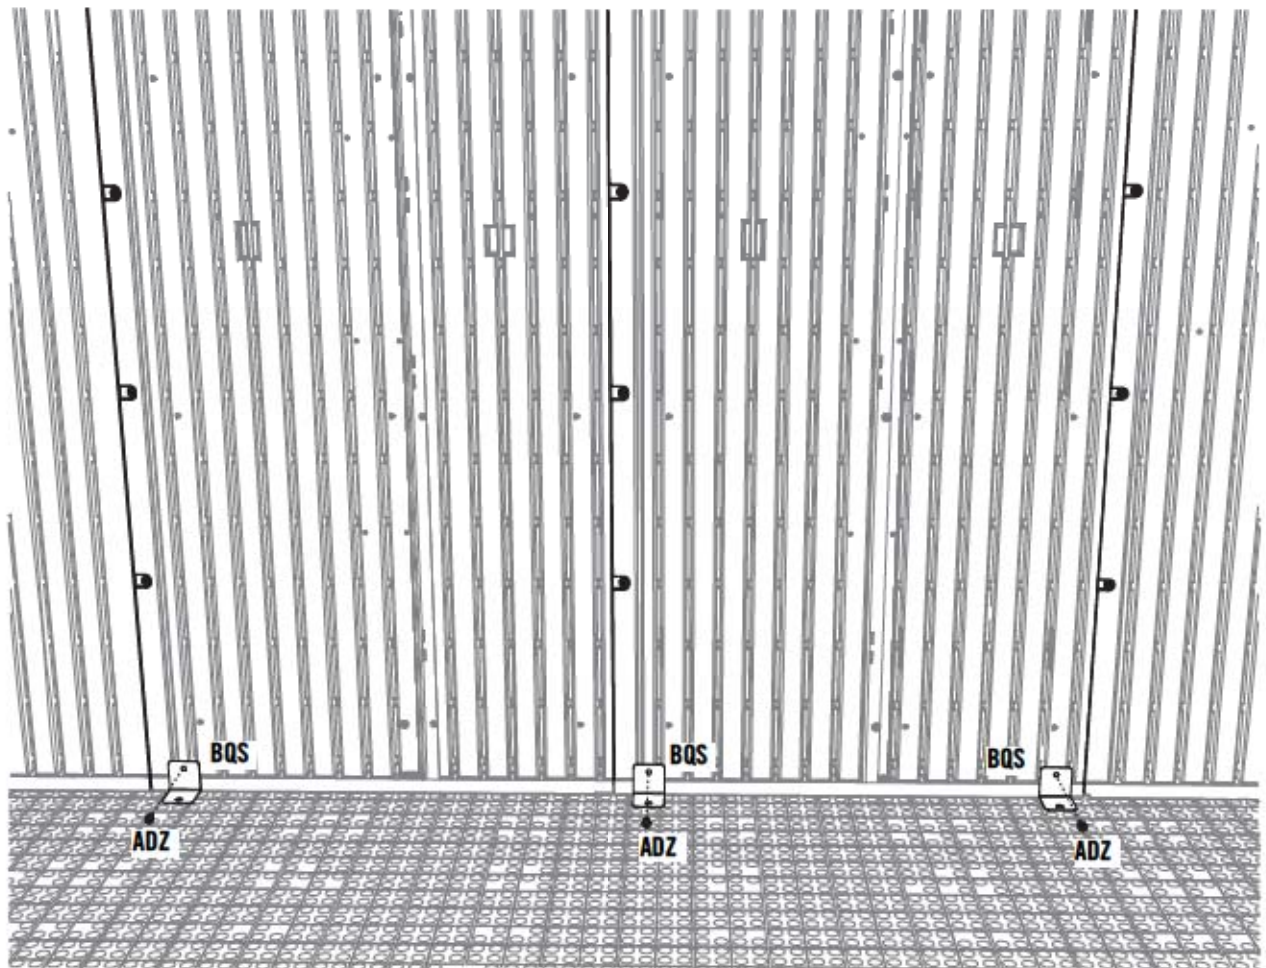




TOOLS AND HARDWARE REQUIRED FOR THIS PAGE

SEC 1



3/4"

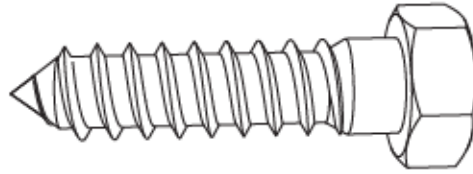


BRN (x11)
(You might not use all Lag Bolts)



SEC

1.8


If you have a Wooden Floor, connect the Wall-to-Floor Support Brackets to the Floor using the 1/2" x 2" Lag Bolt (BRN). Repeat this step to connect the Truss/Wall Support Channel Floor Brackets to the Floor using the same Lag Bolts. If you have a concrete foundation, visit your local hardware store to acquire the bolts that would accommodate the thickness of your concrete. The diameter of the bolts should not exceed 1/2"

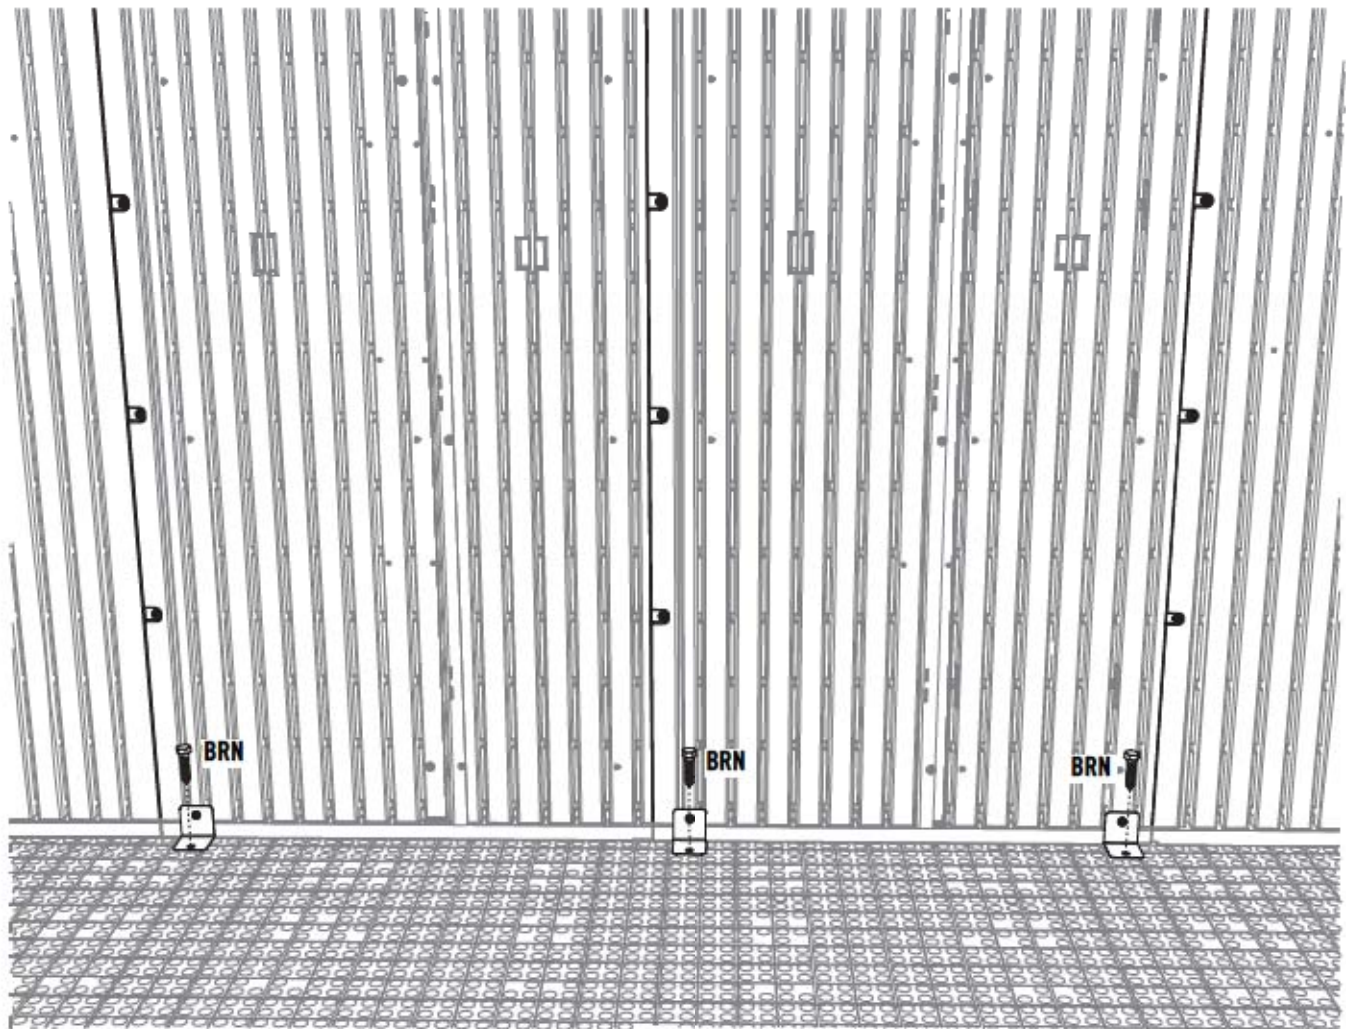

SEC 2 TRUSS SUPPORT ASSEMBLY

HARDWARE REQUIRED

Hardware shown at actual size



BRK (x63)
#10 x 5/8" Self-Tapping Screw
(You may not use all screws)



ADZ (x32)
1/4" x 5/8" Pan-Head Screw




AAN (x1)
5/16" Cap Nut




AHS (x2)
End Plug



BRL (x1)
5/16" Bonded Washer

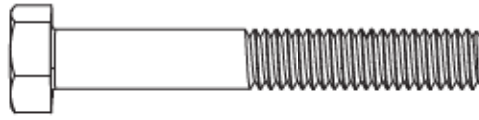

BQI (x1)
5/16" x 2 1/4" Hex Bolt



BES (x6)
1/4" x 1/2" Hex Bolt




ADV (x6)
1/4" x 1 1/8" Pan-Head Screw




ADJ (x6)
1/4" Cap Nut

PARTS REQUIRED

Parts shown at 8% of actual size




BRD (x3)
Short Truss Brace
(You might not use all)




BQX (x2)
Outer Truss-to-Rear Gable Bracket




BRA (x1)
Center Truss-to-Rear Gable Bracket

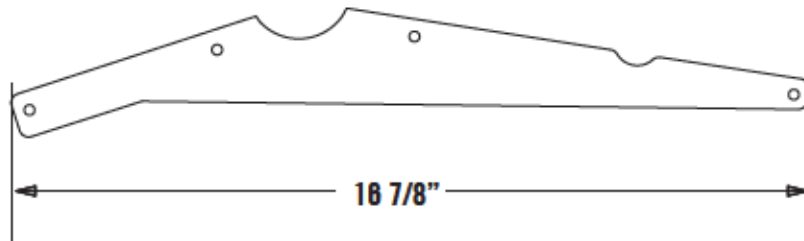



BQW (x12)
Truss Gusset
(You might not use all)

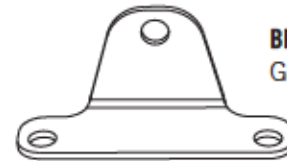


BRC (x8)
Gable-to-Roof Bracket



BFJ (x1)
Rear Gable Support

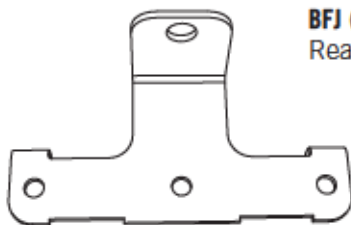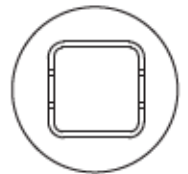

BRB (x1)
Entry Gable Support Bracket



BRE (x4)
Truss-to-Gable Channel


TOOLS REQUIRED



7/16" (x2)



1/2" (x2)



Phillips Screwdriver



Electric Drill



Safety Glasses




BQL (x1)



BQN (x1)



TOOLS AND HARDWARE REQUIRED FOR THIS PAGE



ADZ (x24)



SEC 2




SEC

2.1

Align Roof Brackets (BRC) with the **first** and **third** holes in the front Roof Panel as shown. Secure the Roof Brackets to the right side of the Roof and Entry Gable using three (3) **1/4" x 5/8" Pan-Head Screws (ADZ)** per Roof Bracket. Repeat this step for the left side of the Entry Gable as well as both sides of the Rear Gable.

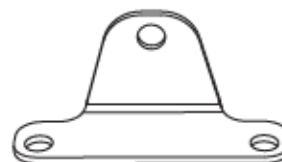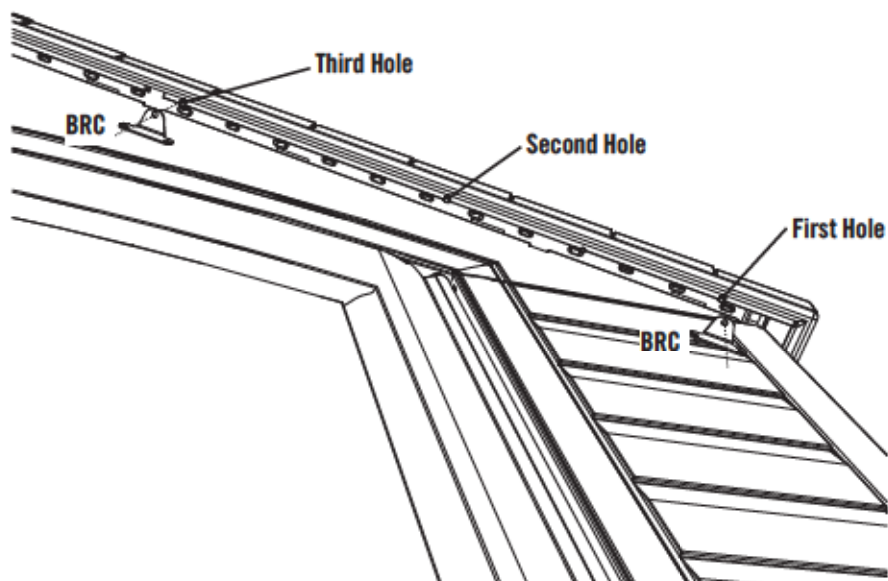

BRC (x8)

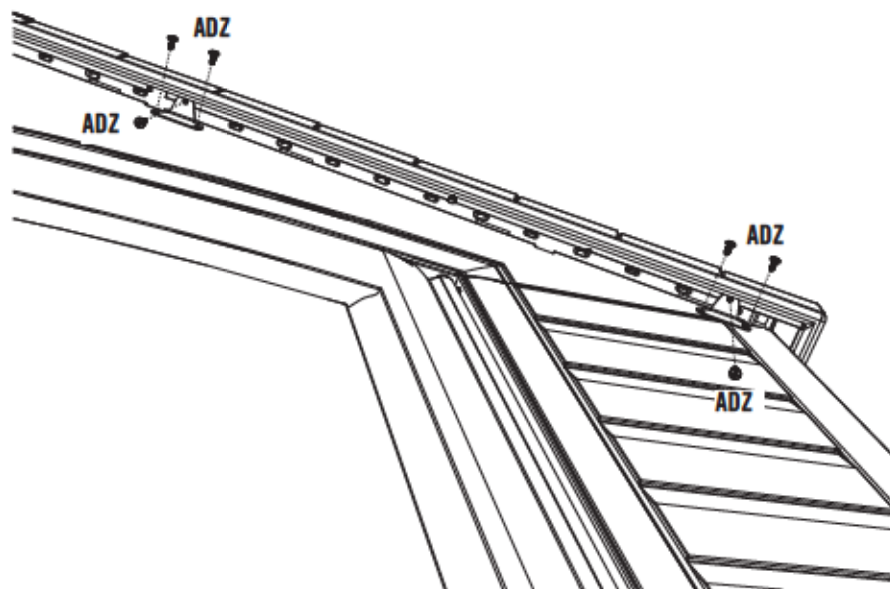




TOOLS AND HARDWARE REQUIRED FOR THIS PAGE



BRK (x48)
(You might not use all)


SEC 2

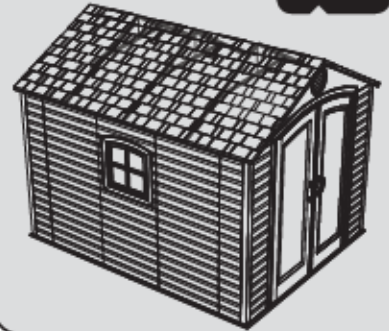

SEC

2.2

Attach a **Truss Gusset (BQW)** to the Truss Gutter Channel and Truss Brace using four (4) **#10 x 5/8" Self-Tapping Screws (BRK)** as shown. Butt the Truss Gusset up against the Truss Gutter Channel and make the top, horizontal border of the Truss Gusset parallel with the Truss Brace. **Repeat this step for both sides and both ends of each Truss.**

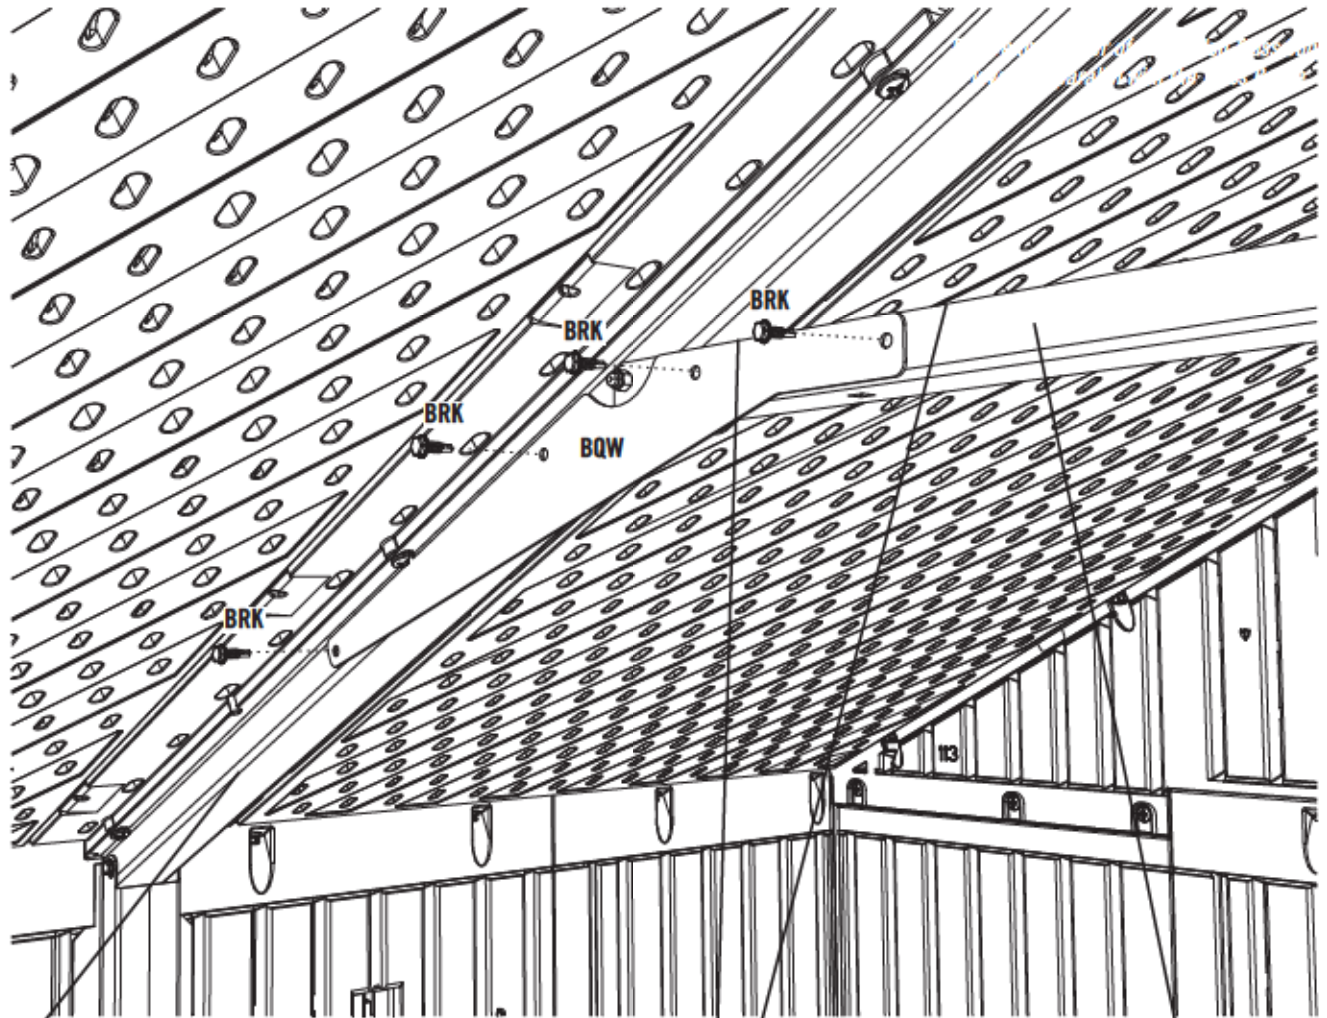

Truss Gutter Channel

Truss Brace



Note: Ensure the border of the Truss Gusset is level and parallel with the Truss Brace.



TOOLS AND HARDWARE REQUIRED FOR THIS PAGE



7/16" (x2)



NO HARDWARE REQUIRED FOR THIS PAGE


SEC 2



SEC

2.3


Remove the 1/4" Cap Nuts from the 1/4" Threaded Rod in a Truss Assembly.

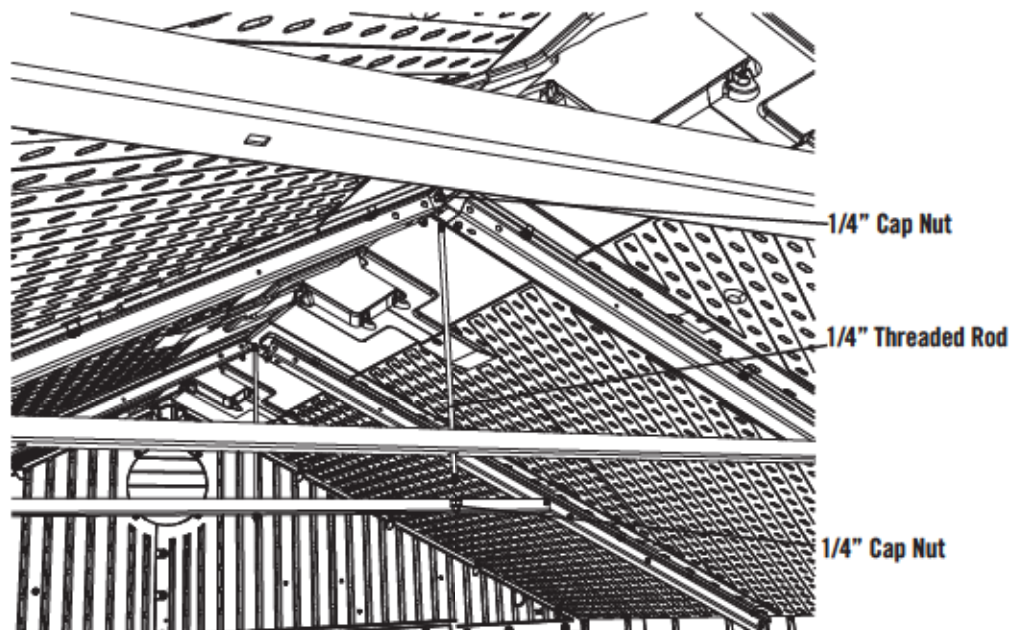

SEC

2.4

Place a **Short Truss Brace (BRD)** up into a Truss Assembly, and re-insert the 1/4" Threaded Rod through the Truss Assembly and Short Truss Brace as shown. **Loosely tighten all 1/4" Cap Nuts removed in the previous step.**

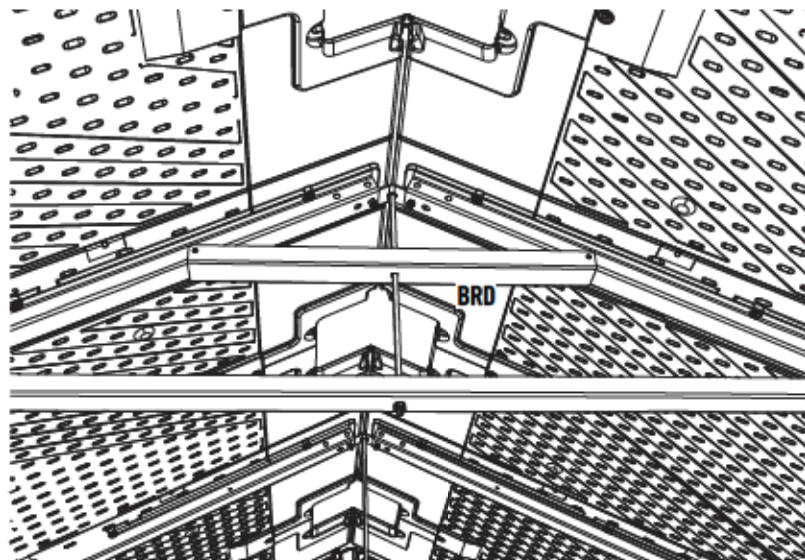



TOOLS AND HARDWARE REQUIRED FOR THIS PAGE




BQL



BRK (x12)
(You might not use all)



SEC
2

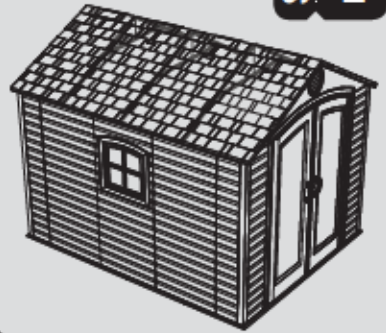

SEC

2.5


Ensure the Short Truss Brace is horizontal and up against the Truss Gutter Channel as shown. Secure the Short Truss Brace to the Truss Assembly using four (4) #10 X 5/8" Self-Tapping Screws (BRK). Repeat steps 2.3 - 2.6 for each Truss Assembly.

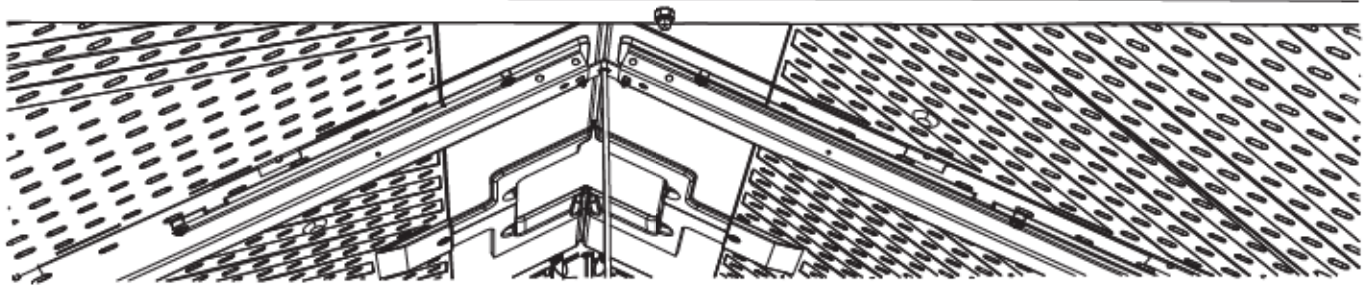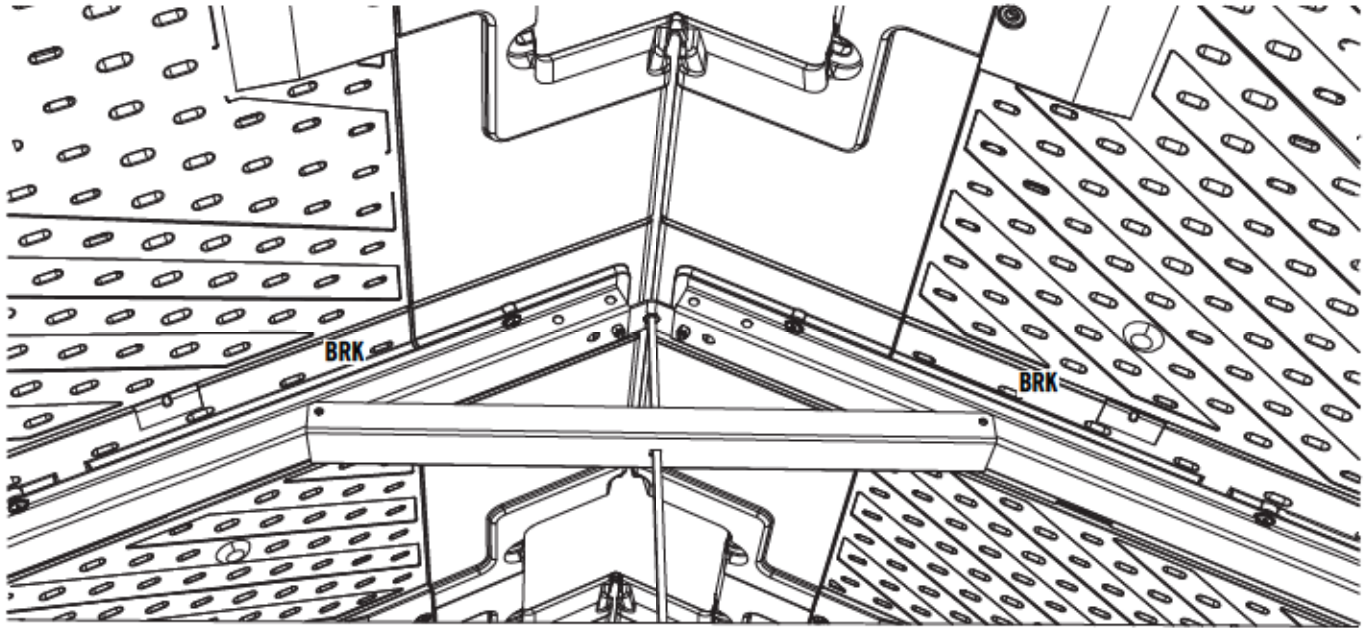



TOOLS AND HARDWARE REQUIRED FOR THIS PAGE

SEC 2



AHS (x2)



ADV (x4)



SEC

2.6


Insert an **End Cap (AHS)** into each end of the **Rear Gable Support (BFJ)**.



SEC

2.7

Secure the Gable Support to the Rear Gable using four (4) **1/4" x 1/8" Pan-Head Screws (ADV)** at the locations shown.

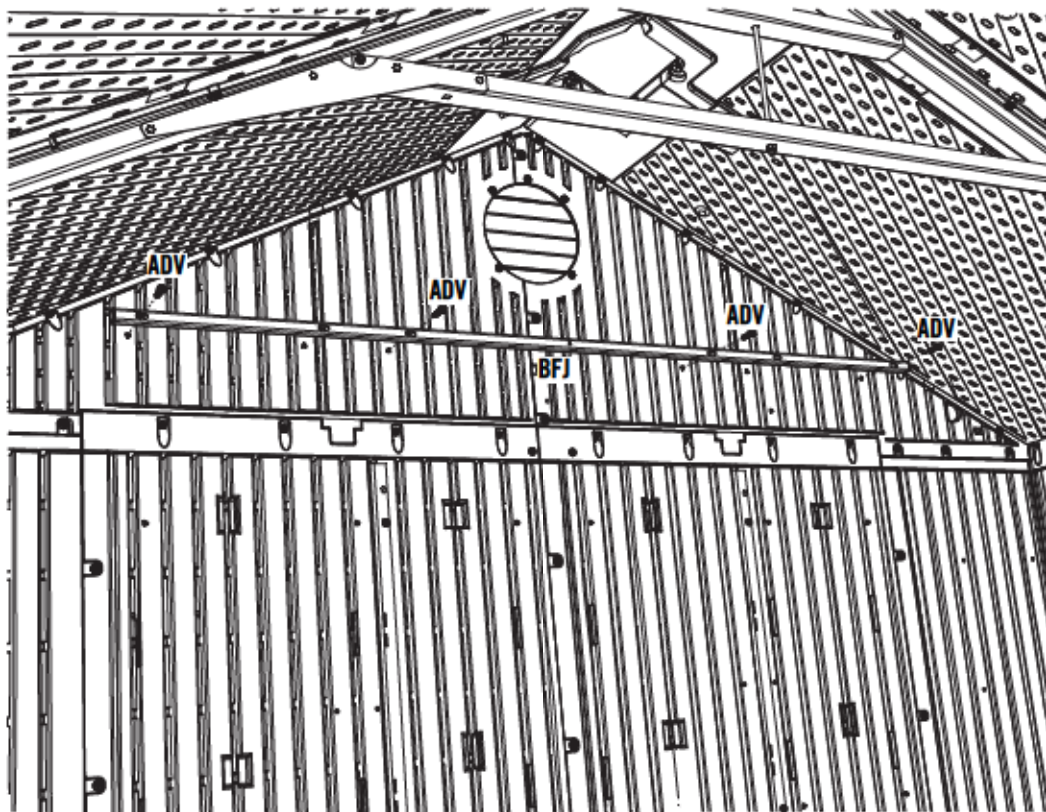




TOOLS AND HARDWARE REQUIRED FOR THIS PAGE



NO HARDWARE REQUIRED FOR THIS PAGE


SEC 2

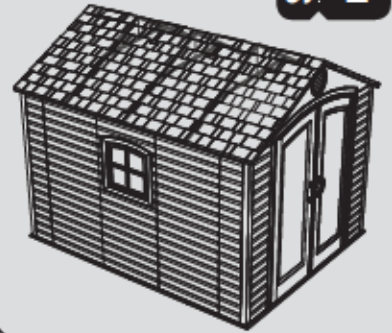

SEC

2.8

Insert the **Center** and two **Outer Support Brackets (BRA & BQX)** behind the holes in the Gable Support as shown.

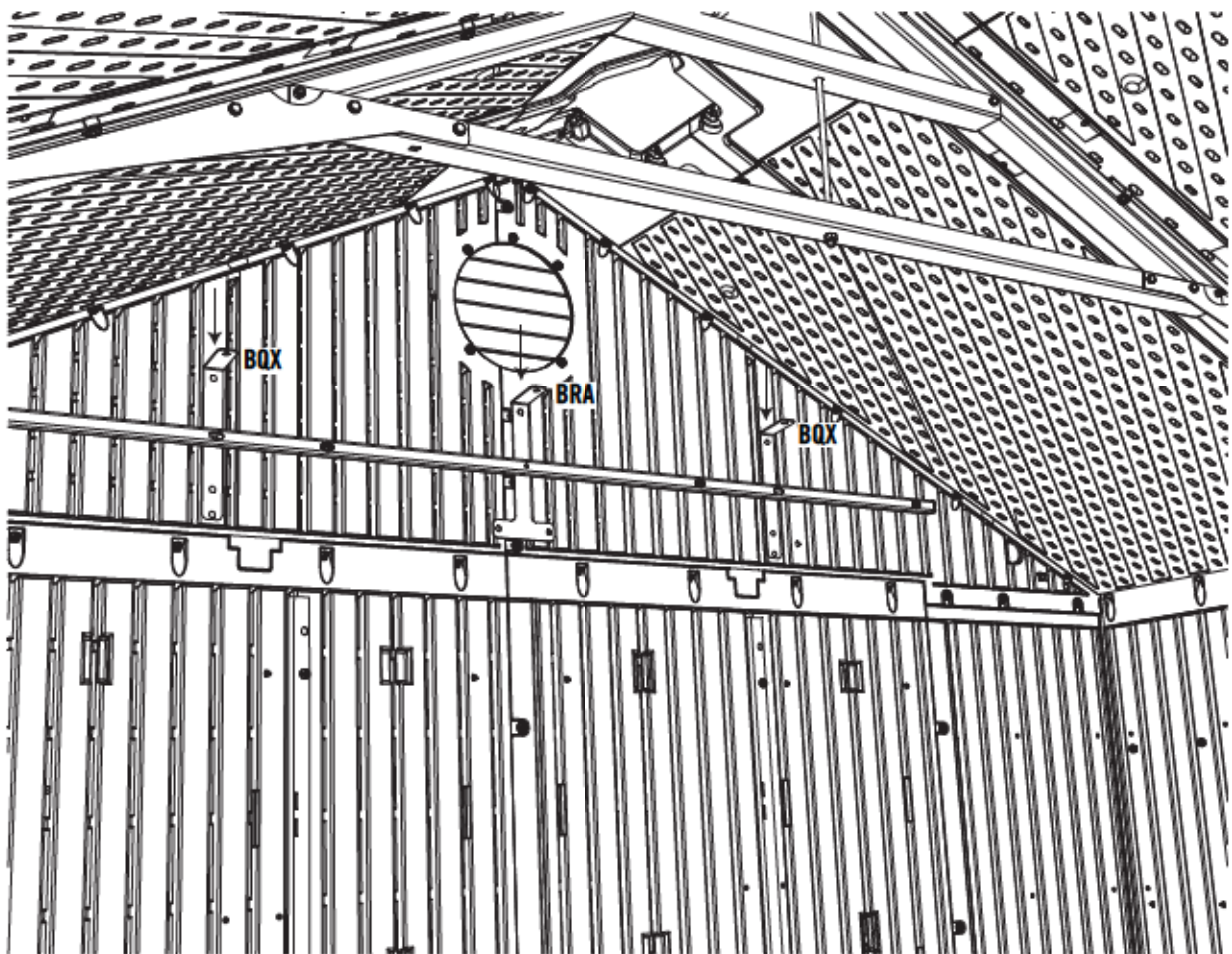



TOOLS AND HARDWARE REQUIRED FOR THIS PAGE



BQN



ADZ (x8)



ADV (x2)


SEC 2



SEC

2.9


Secure the two Outer Support Brackets to the rear Wall using two (2) 1/4" x 1 1/8" Pan-Head Screws (ADV) and eight (8) 1/4" x 5/8" Pan-Head Screws (ADZ).

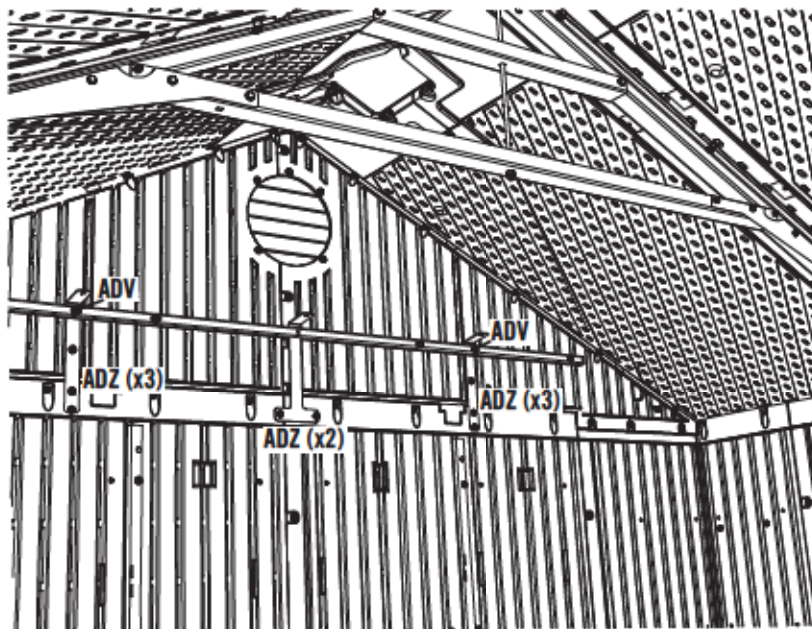

SEC

2.10

Using the 5/16" Drill Bit (BQN), drill a hole through the center hole on the Gable Support, Center Support Bracket, and through the rear Wall of the shed.

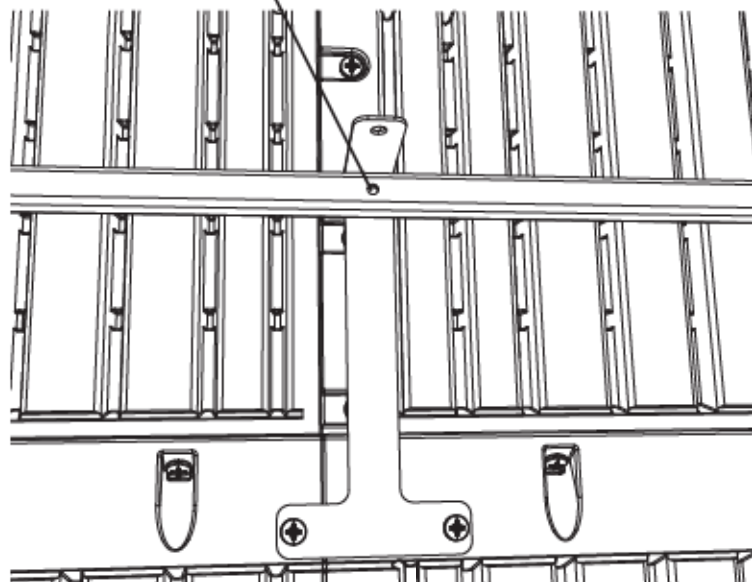



TOOLS AND HARDWARE REQUIRED FOR THIS PAGE

SEC 2




1/2" (x2)



BQN
(Not to scale)



BRL (x1)



BQI (x1)




AAN (x1)



SEC

2.11

Insert a 5/16" x 2 1/4" Hex Bolt (BQI) through the 5/16" Bonded Washer (BRL) and through the hole in the Rear Gable, and secure the Bolt with a 5/16" Cap Nut (AAN).

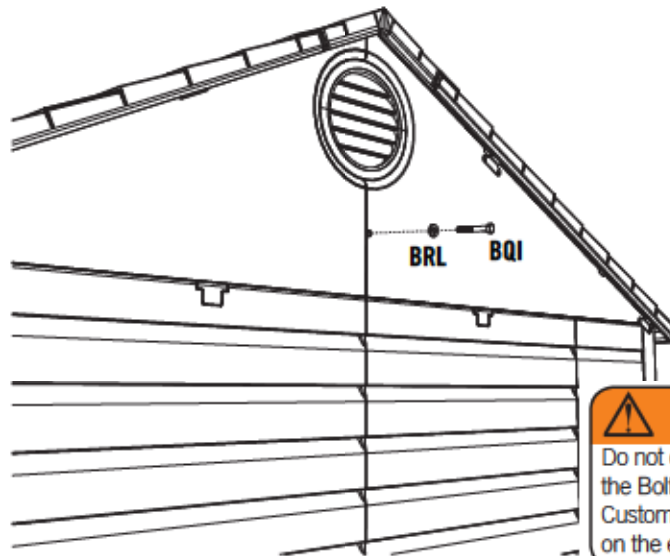

WARNING


Do not overtighten the Cap Nut. If the end of the Bolt breaks through the plastic cap, call our Customer Service Department. Exposed threads on the end of the Bolt may cause serious injuries.

SEC

2.12

In the Truss Brace closest to the rear Wall, there is a square hole near one of the ends. Drill a 5/16" hole approximately the same distance (about 5") from the other end of the Truss Brace.

This square hole will be on either side.

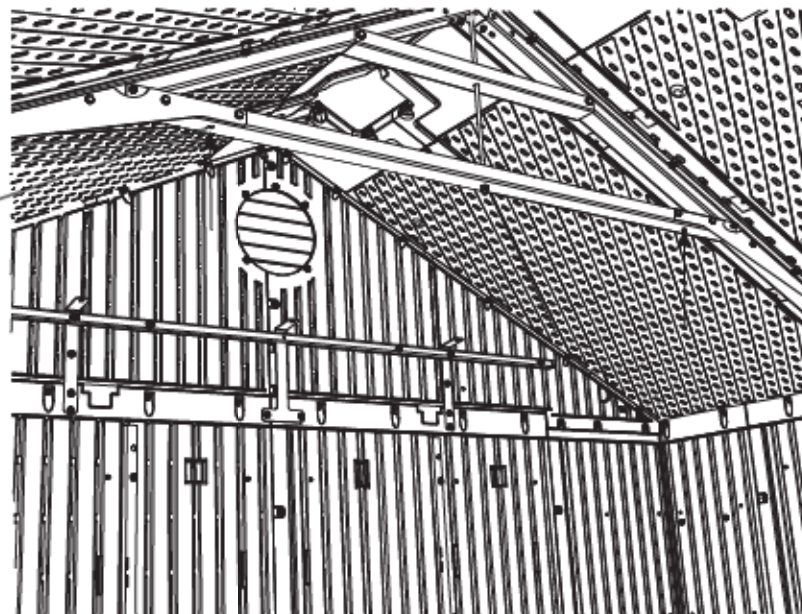



TOOLS AND HARDWARE REQUIRED FOR THIS PAGE


SEC 2



7/16" (x2)



ADJ (x5)




BES (x5)



SEC

2.13


Insert a 1/4" x 1/2" Hex Bolt (BES) through the square hole and the hole you just drilled in the Truss Brace nearest to the rear Wall. Remove the lower 1/4" Cap Nut from the 1/4" Threaded Rod. Secure three (3) Truss/Gable Supports (BRE) to the Truss Brace using two (2) 1/4" Cap Nuts (ADJ) and the 1/4" Cap Nut removed earlier.

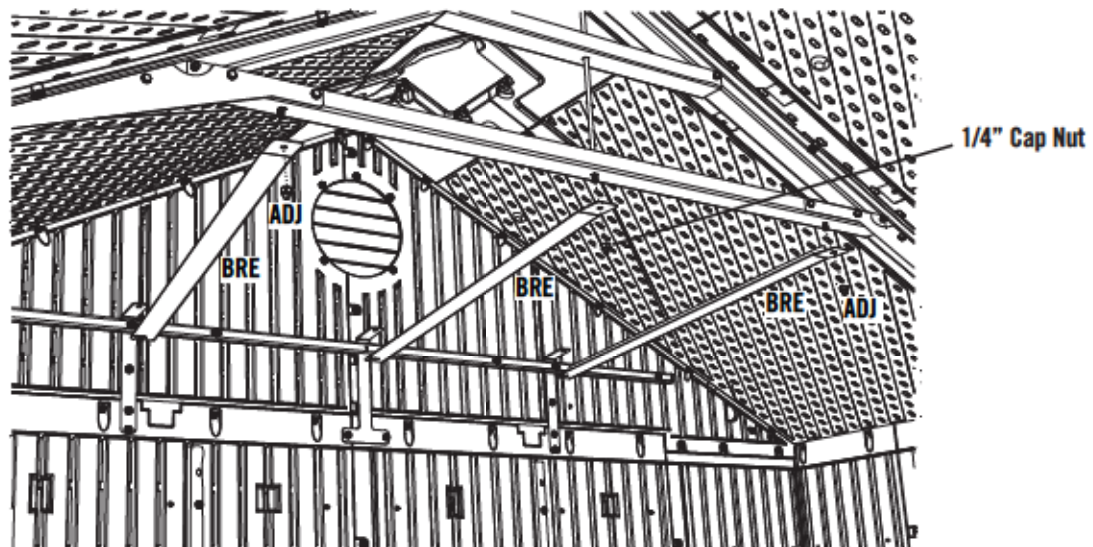

SEC


2.14

Insert a 1/4" x 1/2" Hex Bolt (BES) through the holes in the center and outer Support Brackets, and secure the Truss/Gable Supports to the Support Brackets using 1/4" Cap Nuts (ADJ).

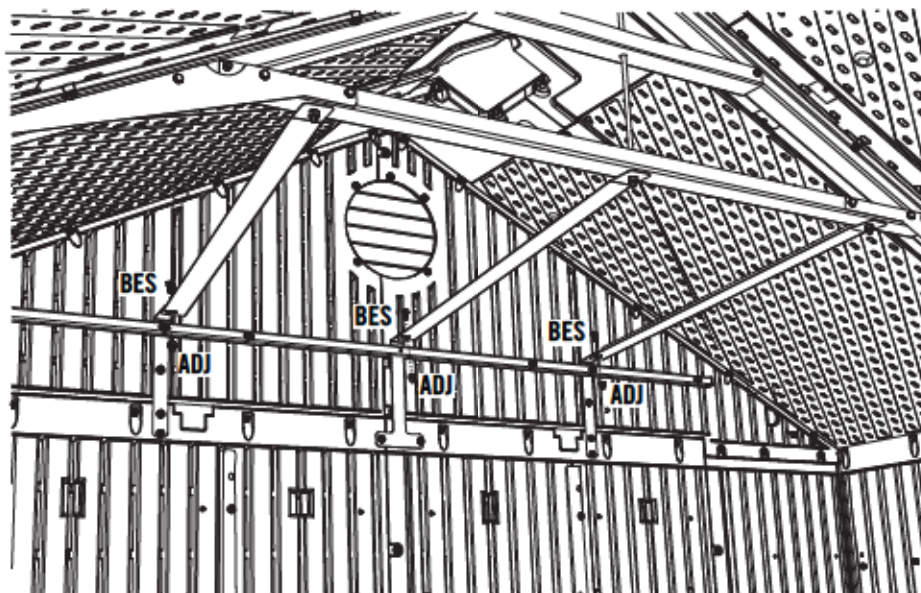




TOOLS AND HARDWARE REQUIRED FOR THIS PAGE

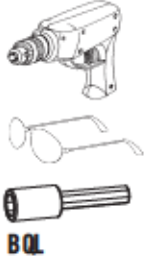

BRK (x3)



SEC 2

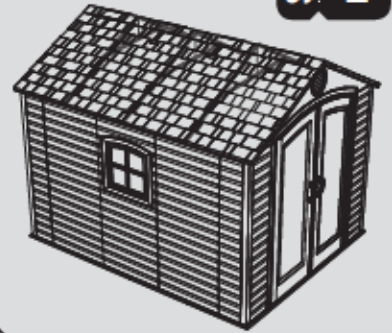

SEC

2.15

Align the notch in the **Entry Gable Support Bracket (BRB)** with the square hole in the middle of the Entry Header Bar as shown.

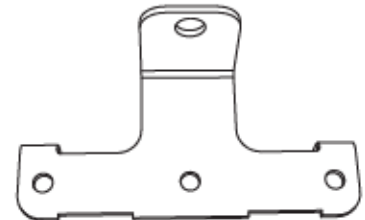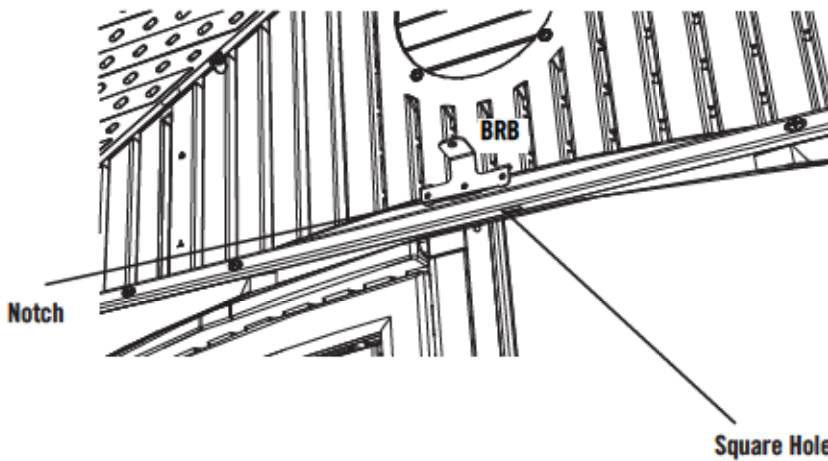


BRB (x1)

SEC

2.16

Use a Drill to secure the Entry Gable Support Bracket to the Entry Header Bar using three (3) #10 x 5/8" Self-Tapping Screws (BRK) as shown.

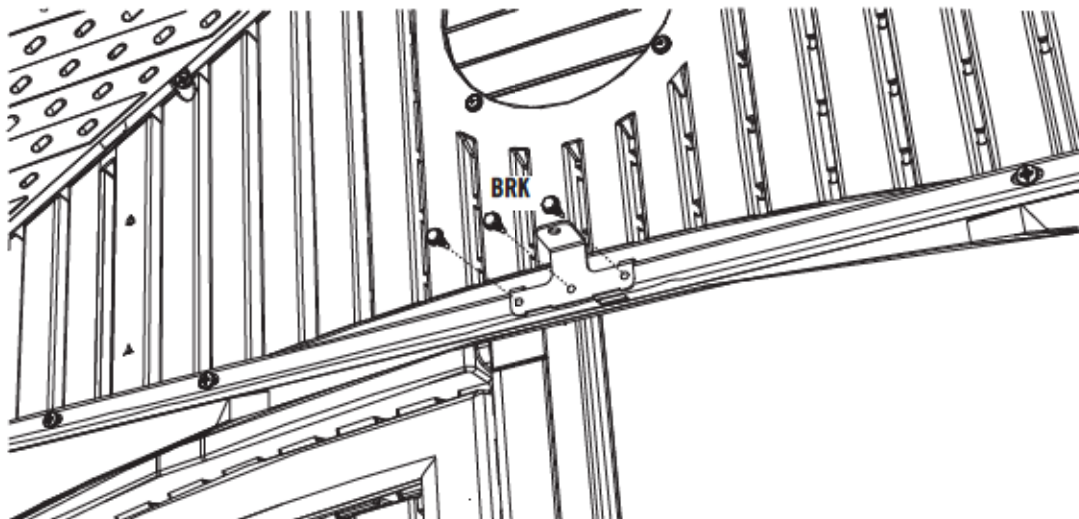



TOOLS AND HARDWARE REQUIRED FOR THIS PAGE


SEC 2



7/16" (x2)



ADJ (x1)




BES (x1)



SEC

2.17

Remove the Cap Nut from the Threaded Rod and reuse the Cap Nut to connect the last **Truss/Gable Support (BRE)** to the Threaded Rod. Connect the other end of the Truss/Gable Support to the Entry Gable Support Bracket using a **1/4" x 1/2" Hex Bolt (BES)** and **1/4" Cap Nut (ADJ)**.

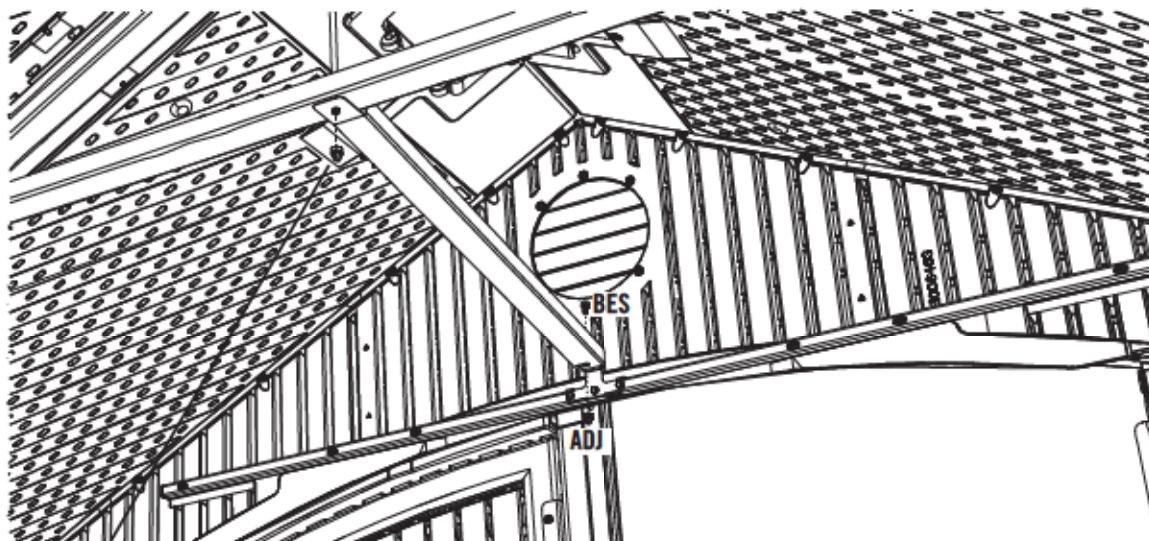


1/4" Cap Nut

SEC 3 DOOR SUPPORT ASSEMBLY

HARDWARE REQUIRED

Hardware shown at actual size (*Unless noted otherwise)



BRK (x18)
#10 x 5/8" Self-Tapping Screw



ADZ (x24)
1/4" x 5/8" Pan-Head Screw




BRI (x2)
Locking Lever



BRH (x2)
1/4" x 2 1/4" Carriage Bolt



BQJ (x4)
5/16" Hex Nut

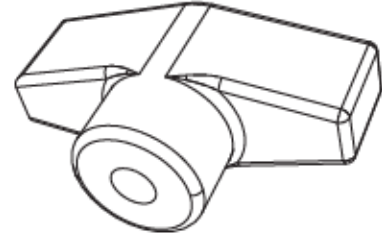

BRM (x2)
5/16" T-Knob



BQO (x1)
#10 x 3/4" Flat-Head Screw



ADX (x2)
#10 x 1/2" Pan-Head Screw



***AHL** (x1)
Floor Strike Plate



BRO (x6)
#10 x 1 1/4" Self-Drilling Screw




AVU (x4)
5/16" Flat Washer




BRJ (x12)
#10 x 1" Self-Tapping Screw

PARTS REQUIRED

Parts shown at 8% of actual size



BQR (x5)
Vertical Door Support



28 1/2"

BQT (x3)
Door Brace

TOOLS REQUIRED



7/16" (x2)



1/2" (x2)



Phillips Screwdriver



Electric Drill



Safety Glasses



BQL (x1)




BQN (x1)




TOOLS AND HARDWARE REQUIRED FOR THIS PAGE



7/16"



BQL



BRK (x6)



SEC 3



SEC



3.1

Remove the two Cap Nuts from the Carriage Bolts and align the two center holes in an **Vertical Door Support (BQR)** with those in the Left Door as shown. Secure the Angled Channel to the Door using the Carriage Bolts and Cap Nuts. Finally, ensure the Angled Channel is parallel to the edge of the Door and secure it using six (6) #10 x 5/8" Self-Tapping Screws (BRK).

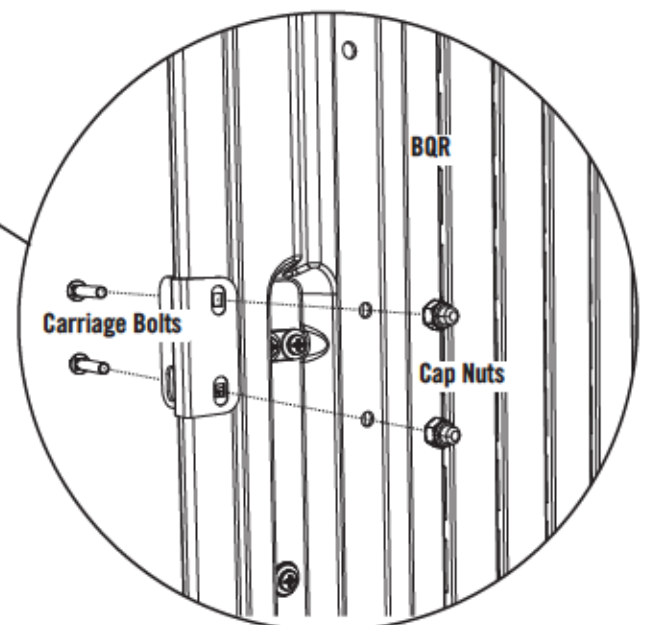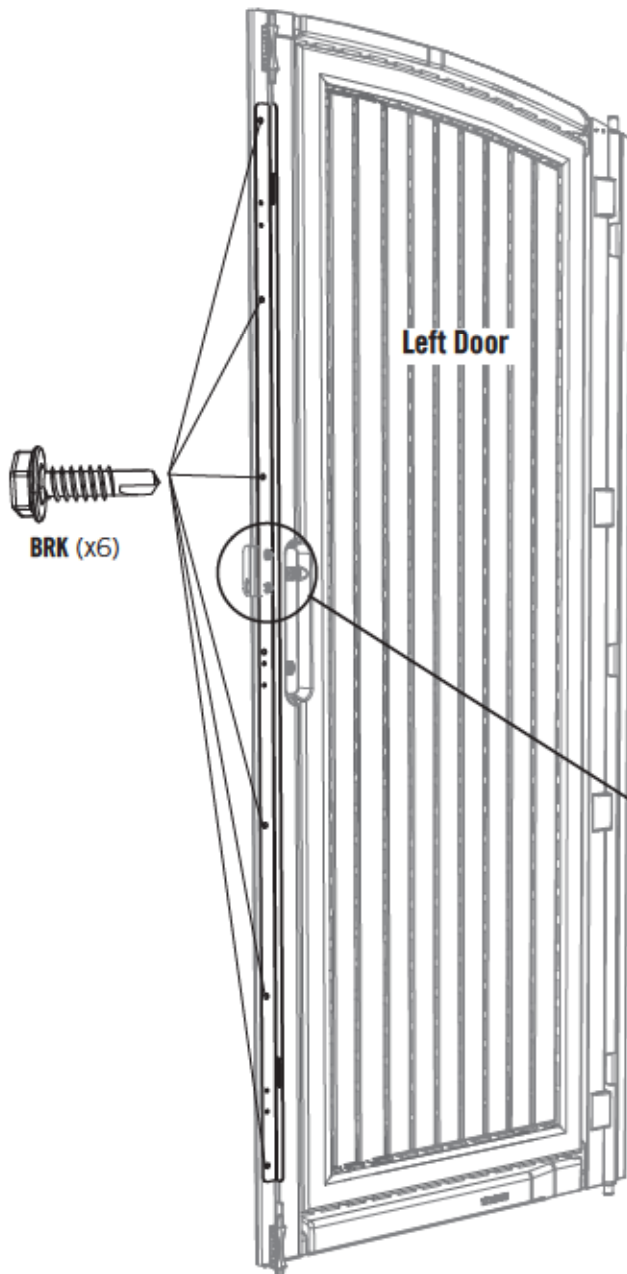




TOOLS AND HARDWARE REQUIRED FOR THIS PAGE



BRK (x6)


SEC 3

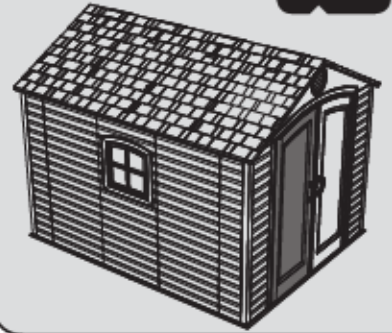

SEC


3.2

Place a second **Vertical Door Support (BQR)** on the back of the Left Door so the top of the Angled Channel is at the same height as the Channel you just attached. Insert the second Angled Channel into the groove shown. Secure the Angled Channel to the Left Door using six (6) **1/4" x 5/8" Pan-Head Screws (BRK)** at the locations shown. **Do not overtighten.**

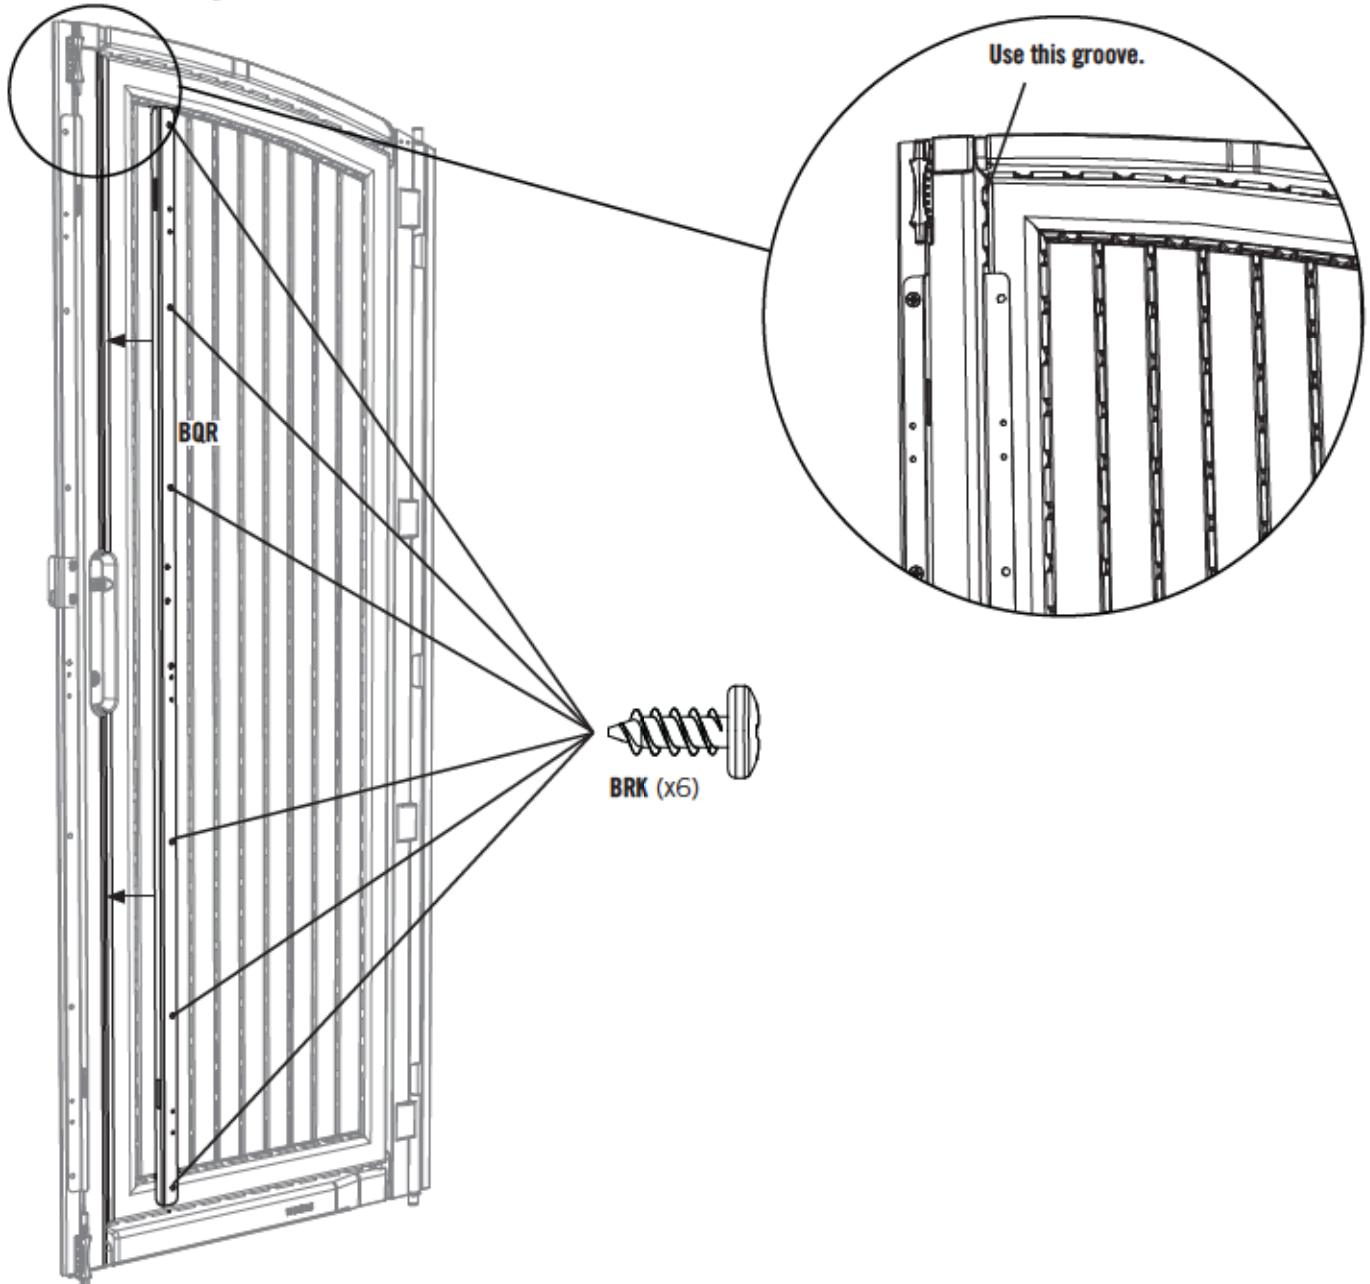



TOOLS AND HARDWARE REQUIRED FOR THIS PAGE



BQK
(Not to scale)

NO HARDWARE REQUIRED FOR THIS PAGE



SEC 3




TWO ADULTS REQUIRED FOR THIS STEP

SEC

3.3

Place a third **Vertical Door Support (BQR)** on the back of the Left Door so the top of the Channel is at the same height as the first two Vertical Door Supports. Align the holes in the Channel over the Hinge Tube. While one adult holds the end of the Vertical Door Support on the mark, have another adult use the **Distance Indicator (BQK)** to set the distance in from the right edge of the Left Door. Finally, make a mark on the Left Door through the top hole in the Vertical Door Support.

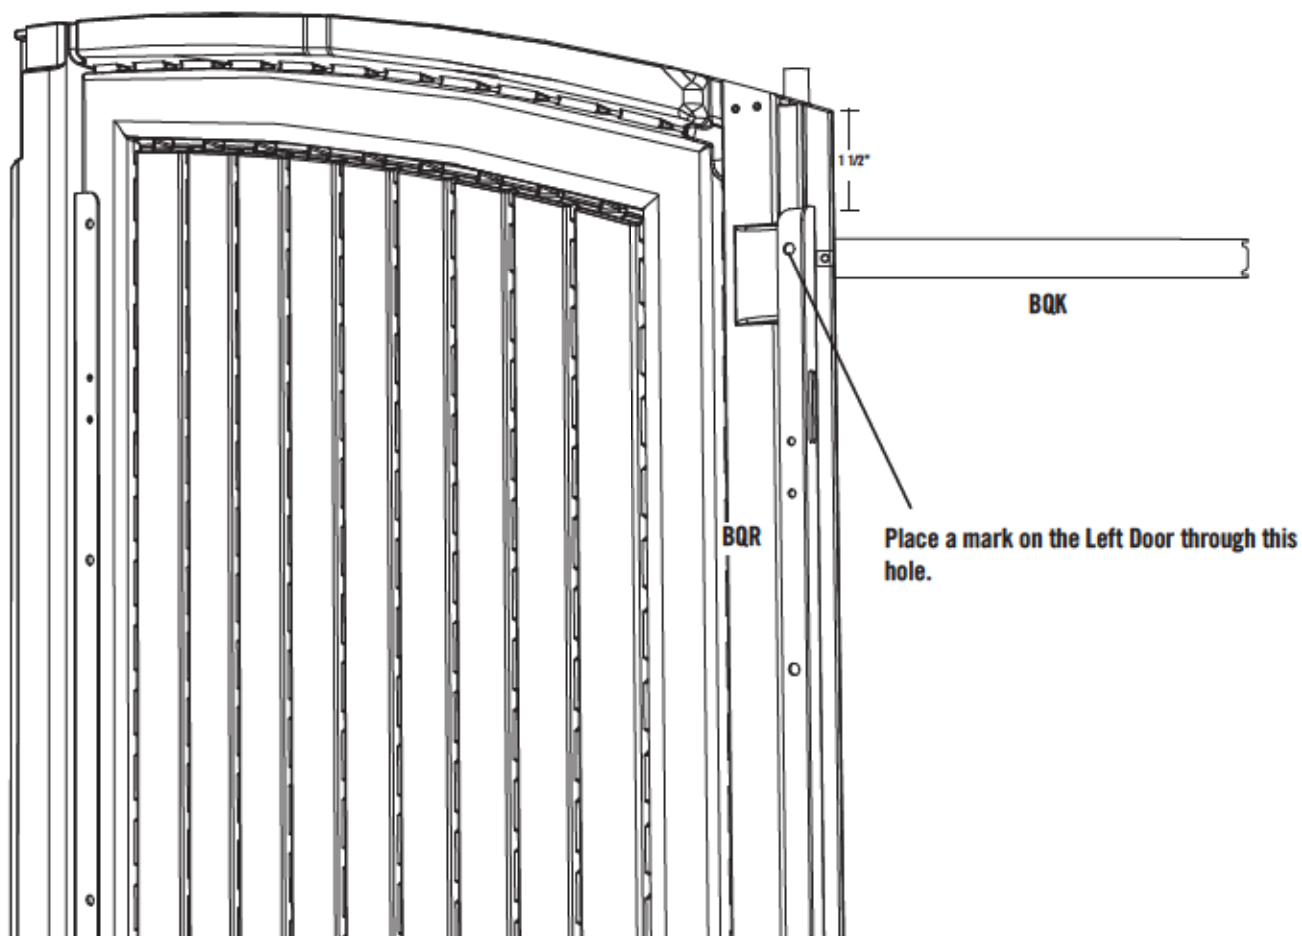

! *Note: The Distance Indicator helps to align the Angled Channel over the Hinge Tube in the Door.*



TOOLS AND HARDWARE REQUIRED FOR THIS PAGE



BQL




BRK (x1)



ARA


SEC 3

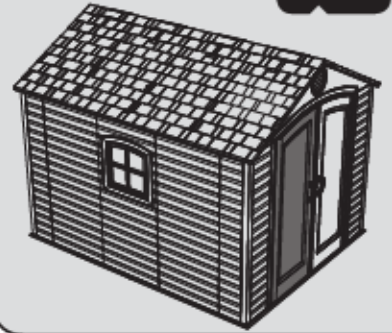

SEC

3.4

Using an 1/8" Drill Bit (ARA), drill a hole straight into the Hinge Tube at the mark you just made. **Do not drill all the way through the Door.** Insert a #10 x 5/8" Self-Tapping Screw (BRK) through the top hole in the Angled Channel at the mark you made in the previous step.

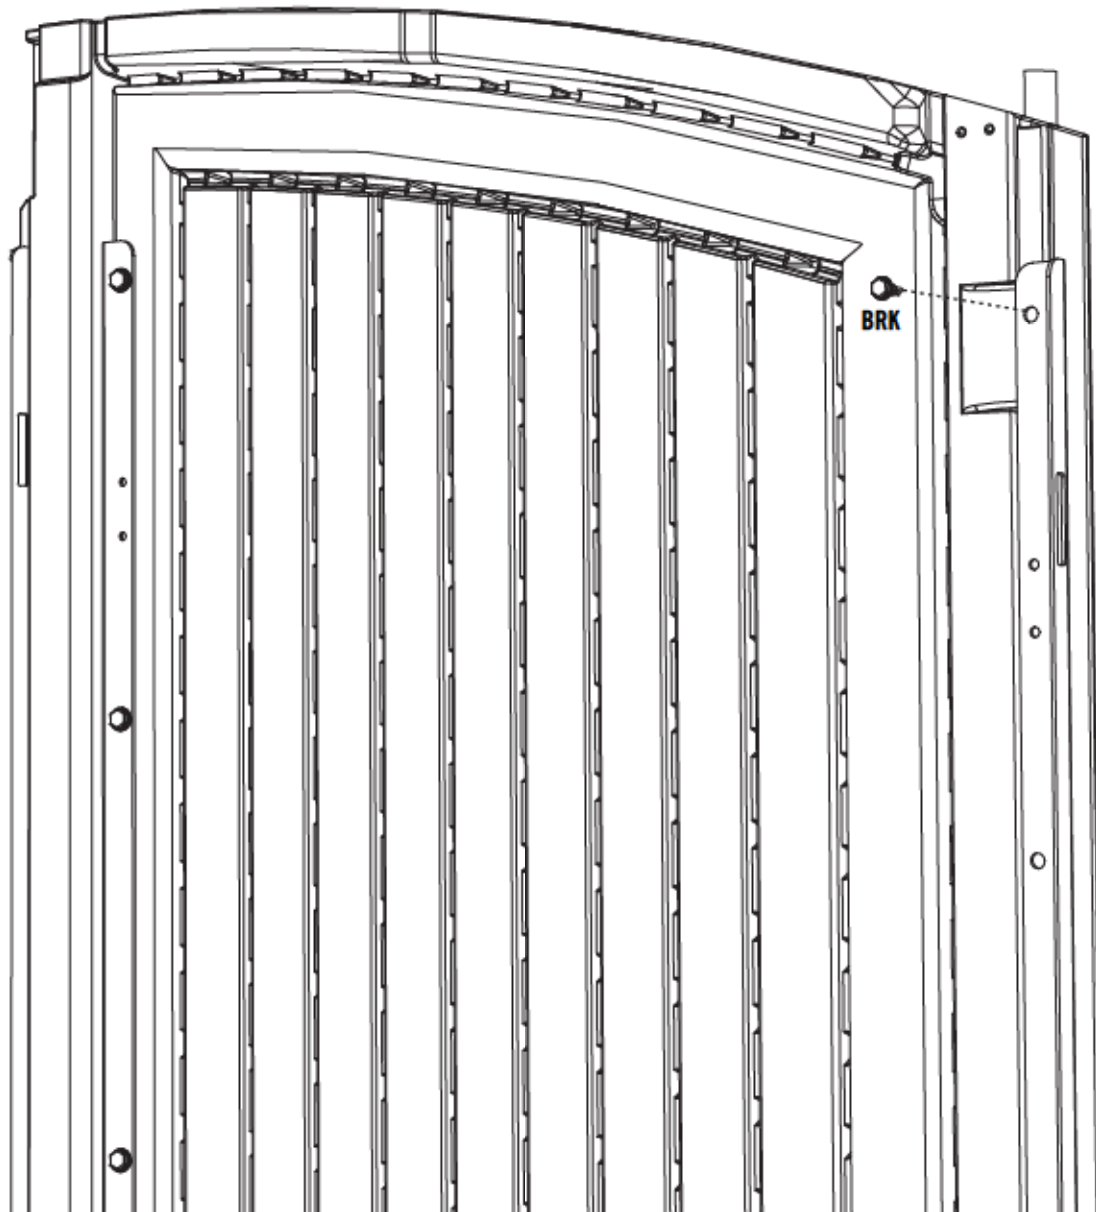





TOOLS AND HARDWARE REQUIRED FOR THIS PAGE



BQL



BQK (x1)
(Not to scale)



BRK (x5)


SEC 3



SEC

3.5

Continue using the Distance Indicator to align the holes in the Angled Channel over the Hinge Tube and Drill holes into the Hinge Tube at the five locations shown. Secure the Angled Channel to the Left Door Hinge Tube using five (5) more #10 X 5/8" Self Tapping Screws (BRK).

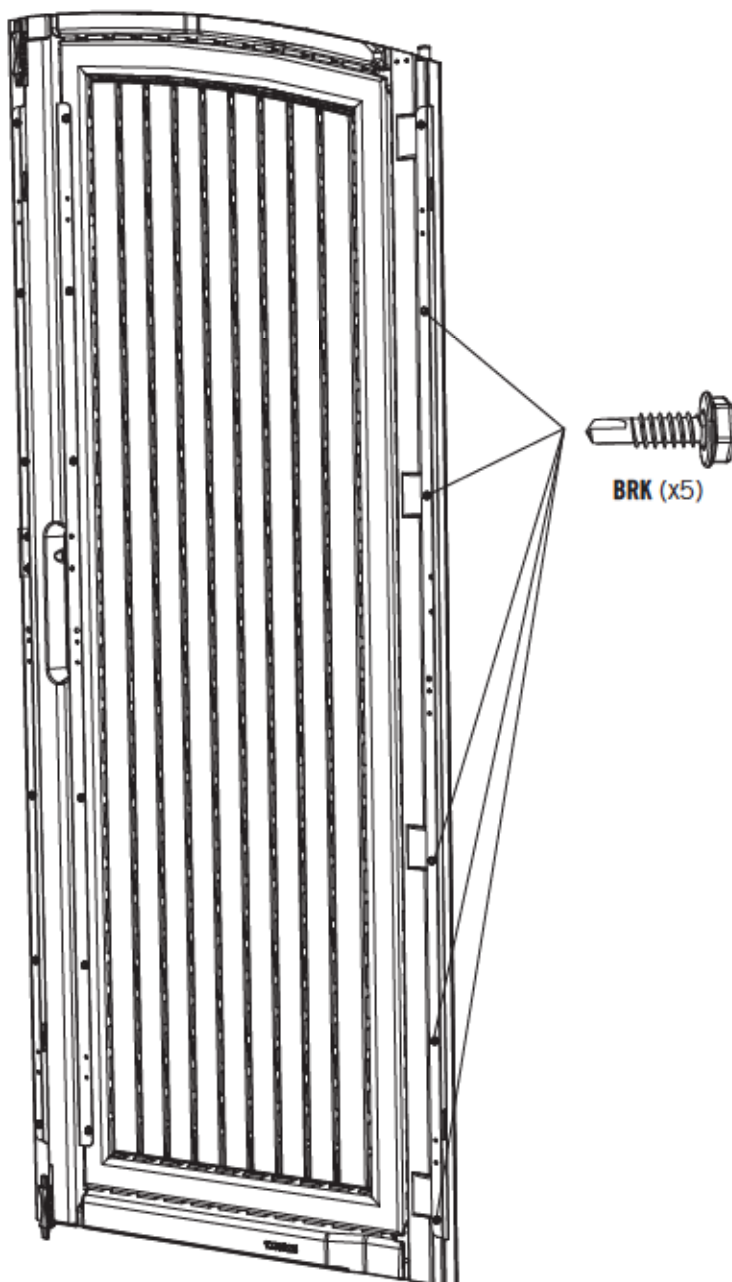



TOOLS AND HARDWARE REQUIRED FOR THIS PAGE


SEC 3



BQK
(Not to scale)




NO HARDWARE REQUIRED FOR THIS PAGE

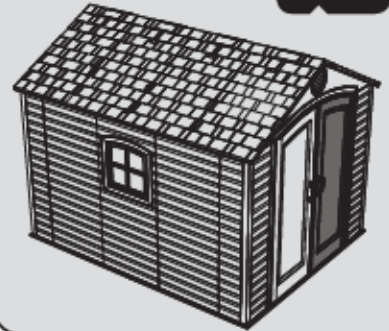

SEC

3.6

Using a pair of needle nose pliers, bend the small ends of the **Distance Indicator (BQK)** to a 90° angle as shown.



Top View




Side View

SEC

3.7

Slide the **Distance Indicator (BQK)** down over the back of the top of the Door so the bent ends rest on the End Channel and the side of the Distance Indicator rests against the plastic ridge of the Door to center the hole over the Door End Channel. Make a mark through the hole in the Distance Indicator and onto the Door End Channel as shown.

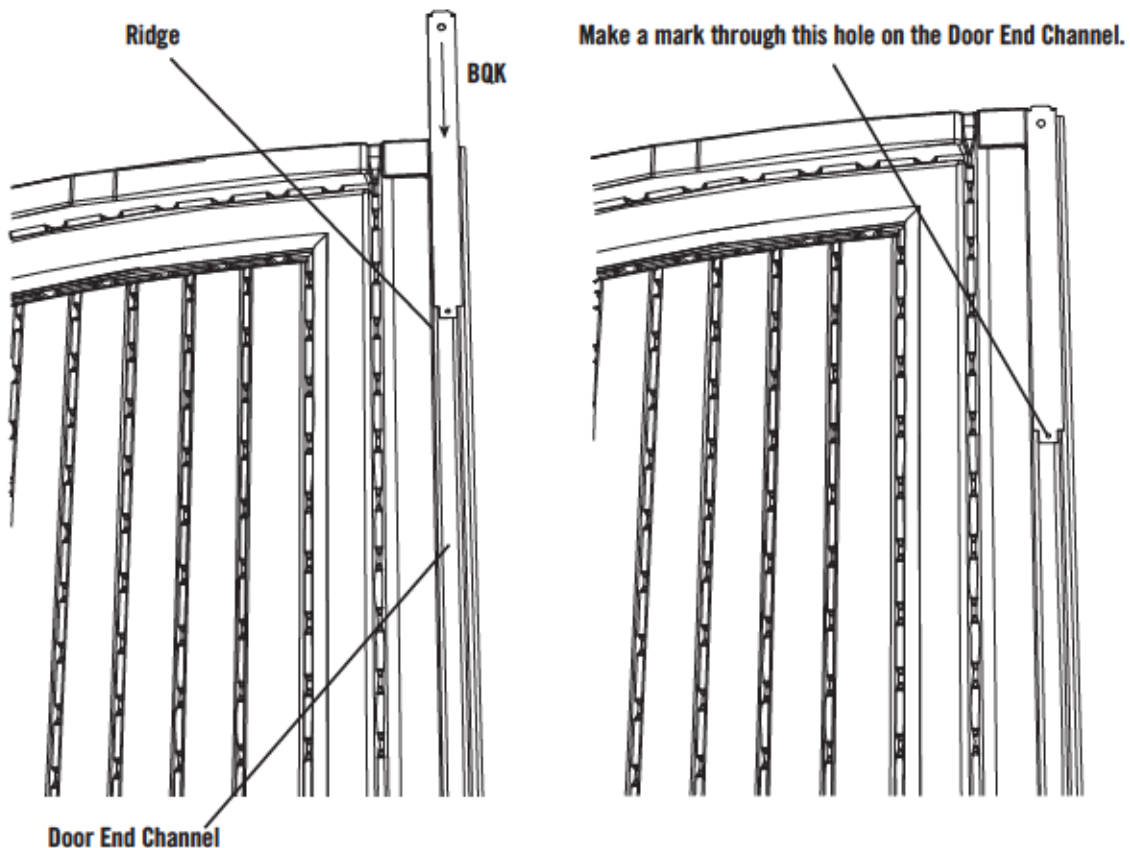

Door End Channel



TOOLS AND HARDWARE REQUIRED FOR THIS PAGE


SEC 3



BQN



BRH (x1)

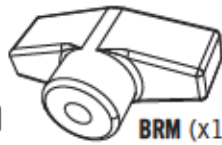

BRM (x1)
(Not to scale)




BRI (x1)
(Not to scale)



AVU (x2)




BQJ (x2)

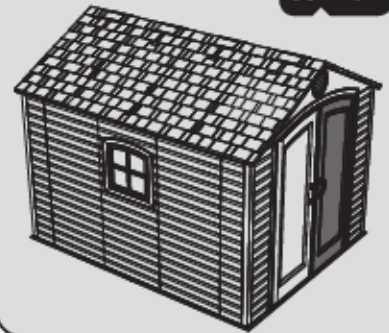

SEC

3.8



Using a 5/16" Drill Bit (BQN), and keeping the drill bit level, drill a hole all the way through the Door End Channel. Connect the required hardware to the Door as shown.

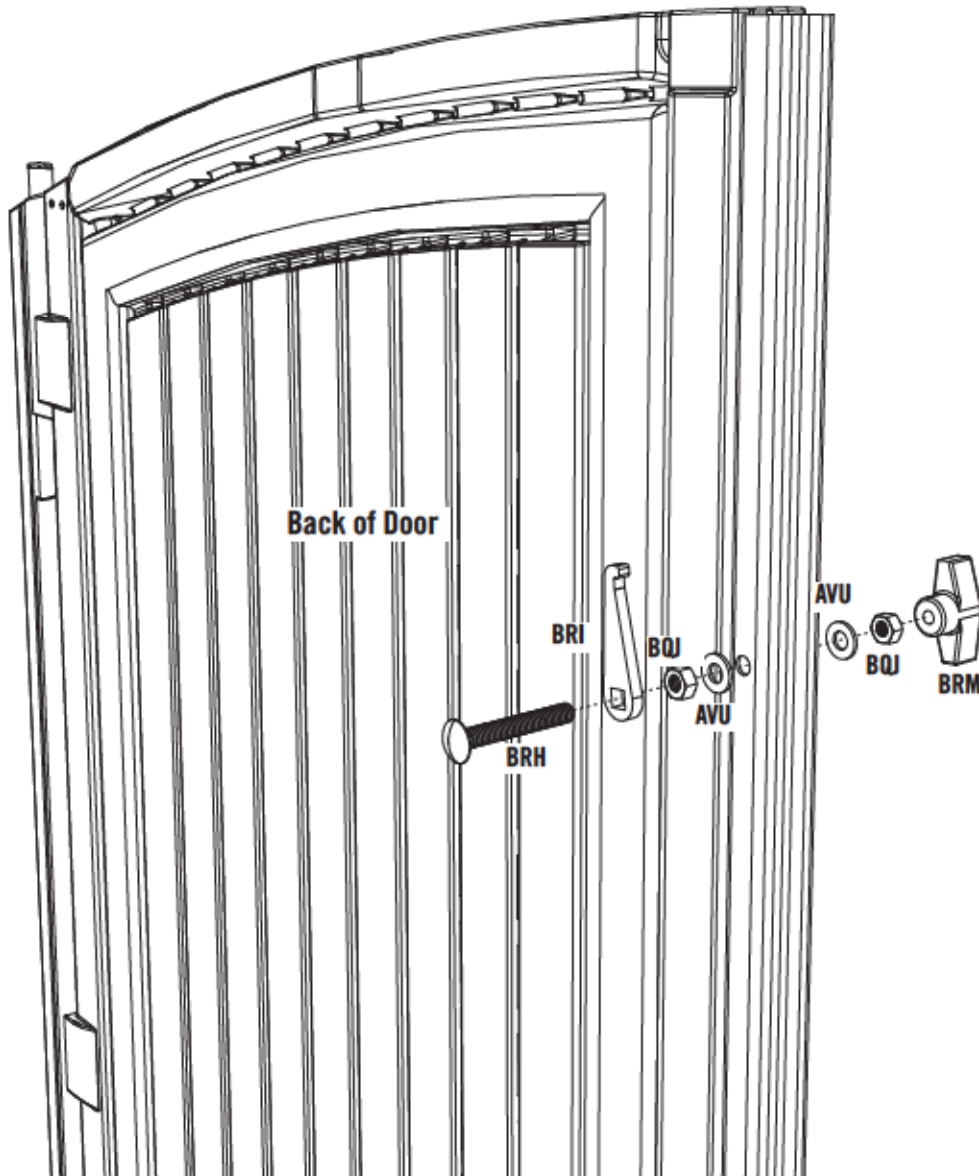



TOOLS AND HARDWARE REQUIRED FOR THIS PAGE


SEC 3

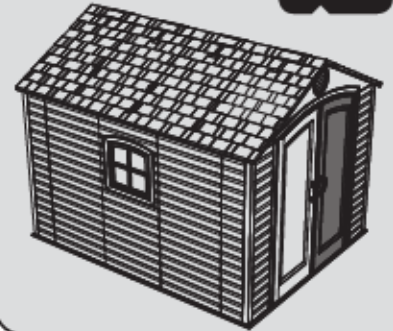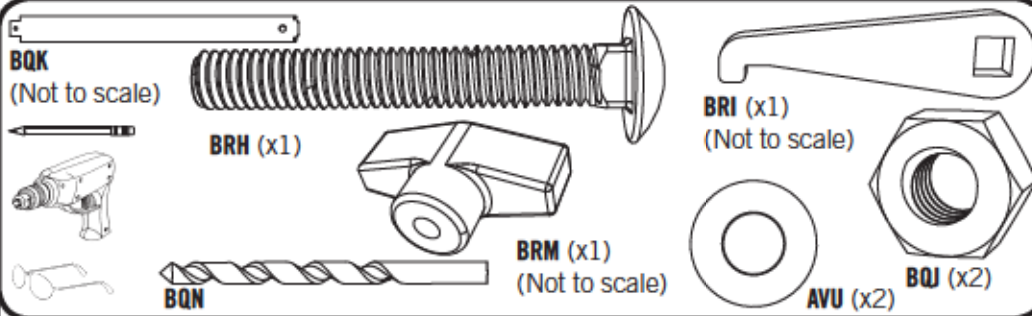

SEC

3.9

Slide the **Distance Indicator (BQK)** up over the back of the bottom of the Door End Channel and against the plastic ridge to center the hole over the bottom of the Door End Channel. Make a mark through the hole in the Distance Indicator and onto the Door End Channel as shown. Using a **5/16" Drill Bit (BQN)** and keeping the drill bit level, drill a hole all the way through the Door End Channel. Connect the required hardware to the Door as shown.

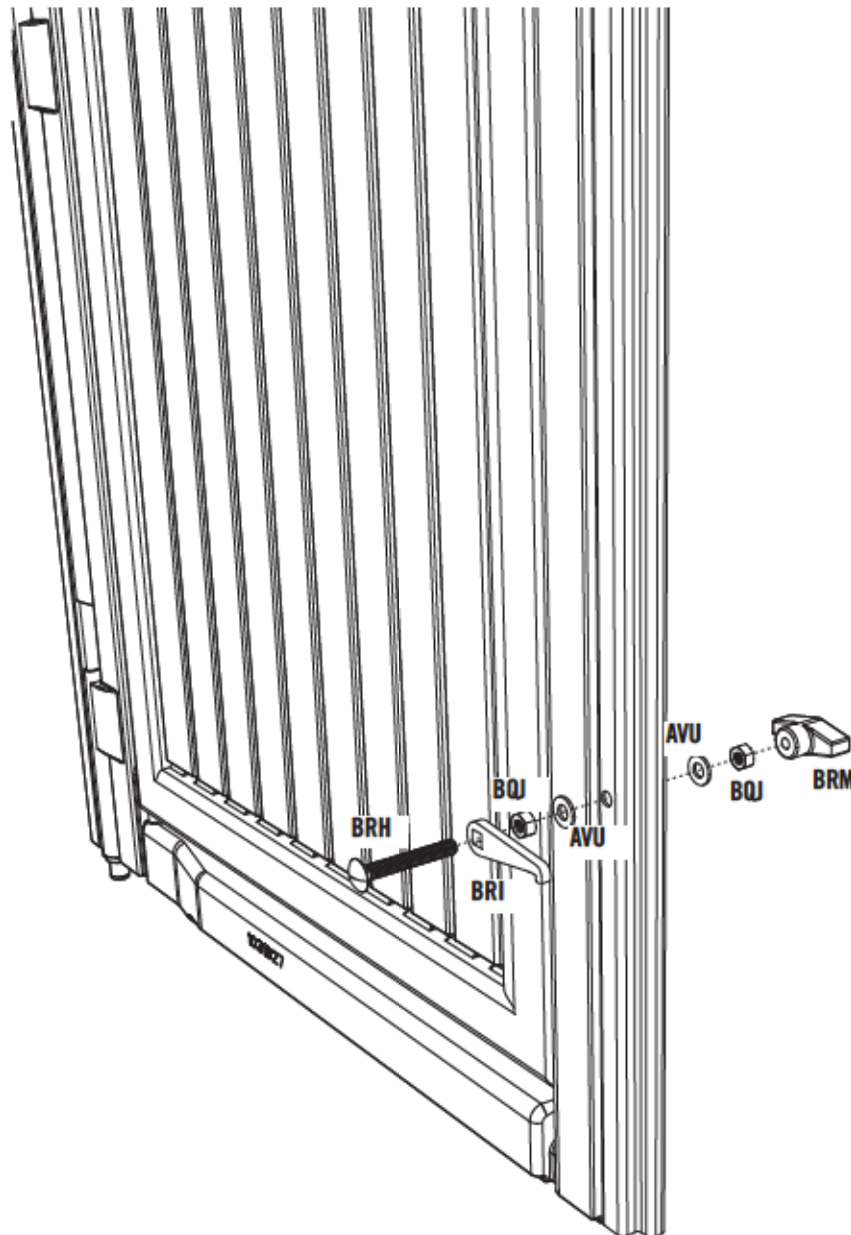



TOOLS AND HARDWARE REQUIRED FOR THIS PAGE


SEC 3



BQK
(Not to scale)




NO HARDWARE REQUIRED FOR THIS PAGE

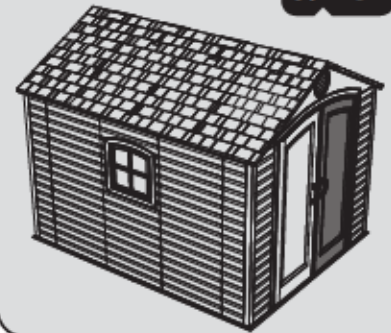

SEC

3.10

Make a mark $2\frac{3}{8}$ " down from the corner of the left side of the Right Door. Place a **Vertical Door Support (BQR)** over the Hinge Tube on the back of the Right Door so the top of the Support is on the mark as shown. While one adult holds the end of an Vertical Door Support on the mark, have another adult use the Distance Indicator to set the distance in from the left edge of the Right Door. Finally, make a mark on the Door through the top hole in the Vertical Door Support.

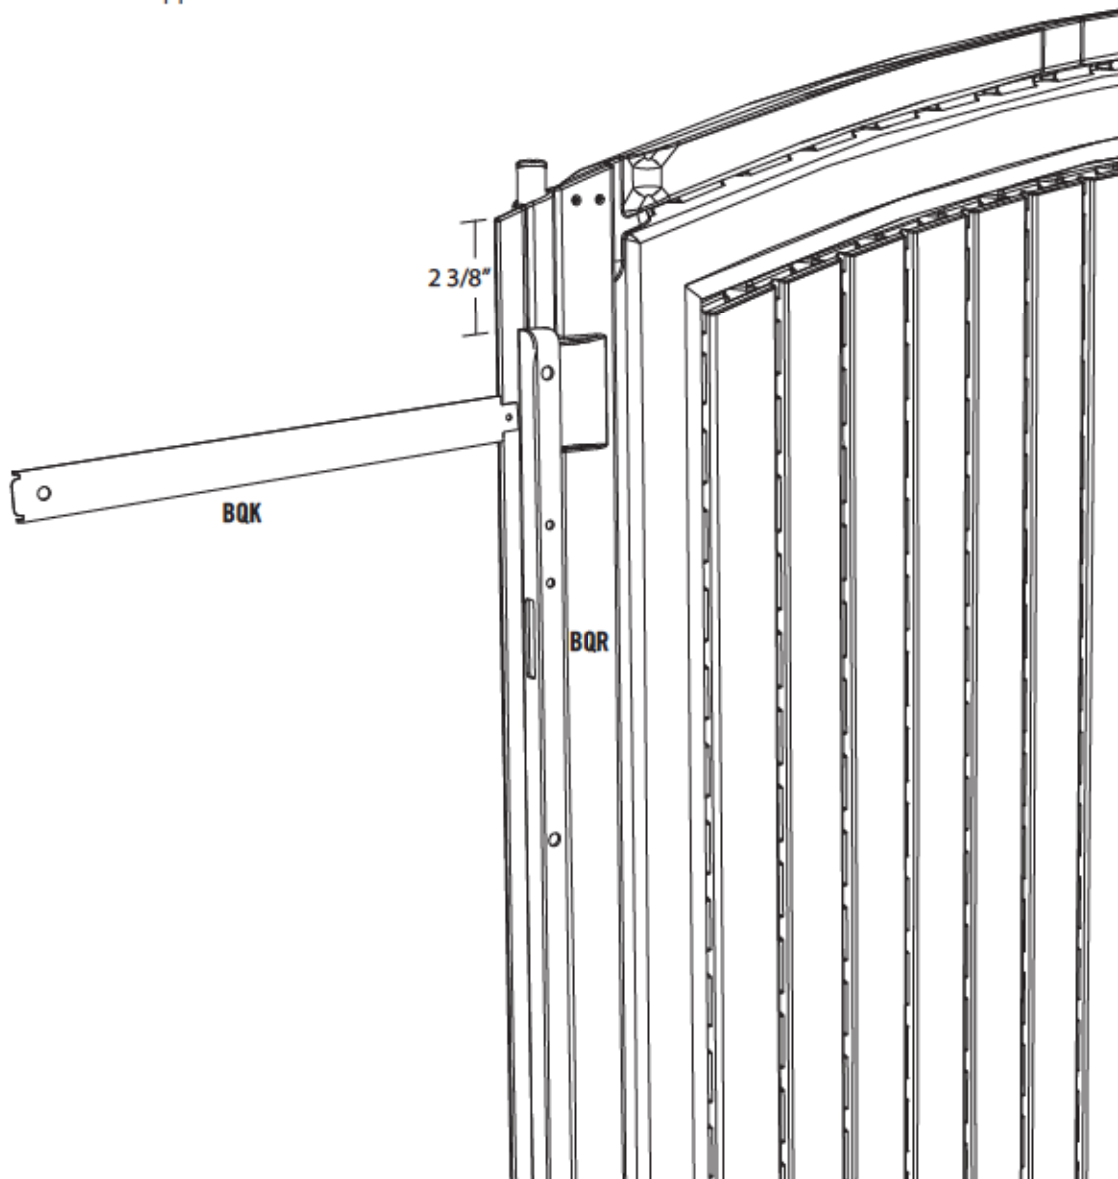


Note: The Distance Indicator helps to align the Angled Channel over the Hinge Tube in the Door.



TOOLS AND HARDWARE REQUIRED FOR THIS PAGE



BQL




BRK (x1)



ARA


SEC 3

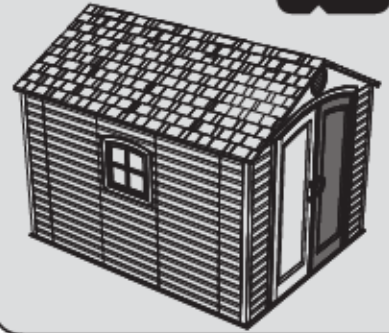

SEC

3.11

Using an $1/8$ " Drill Bit (ARA), drill a hole straight into the Hinge Tube at the mark you just made. Do not drill all the way through the Door. Insert a #10 x $5/8$ " Self-Tapping Screw (BRK) through the top hole in the Angled Channel at the mark you made in the previous step.

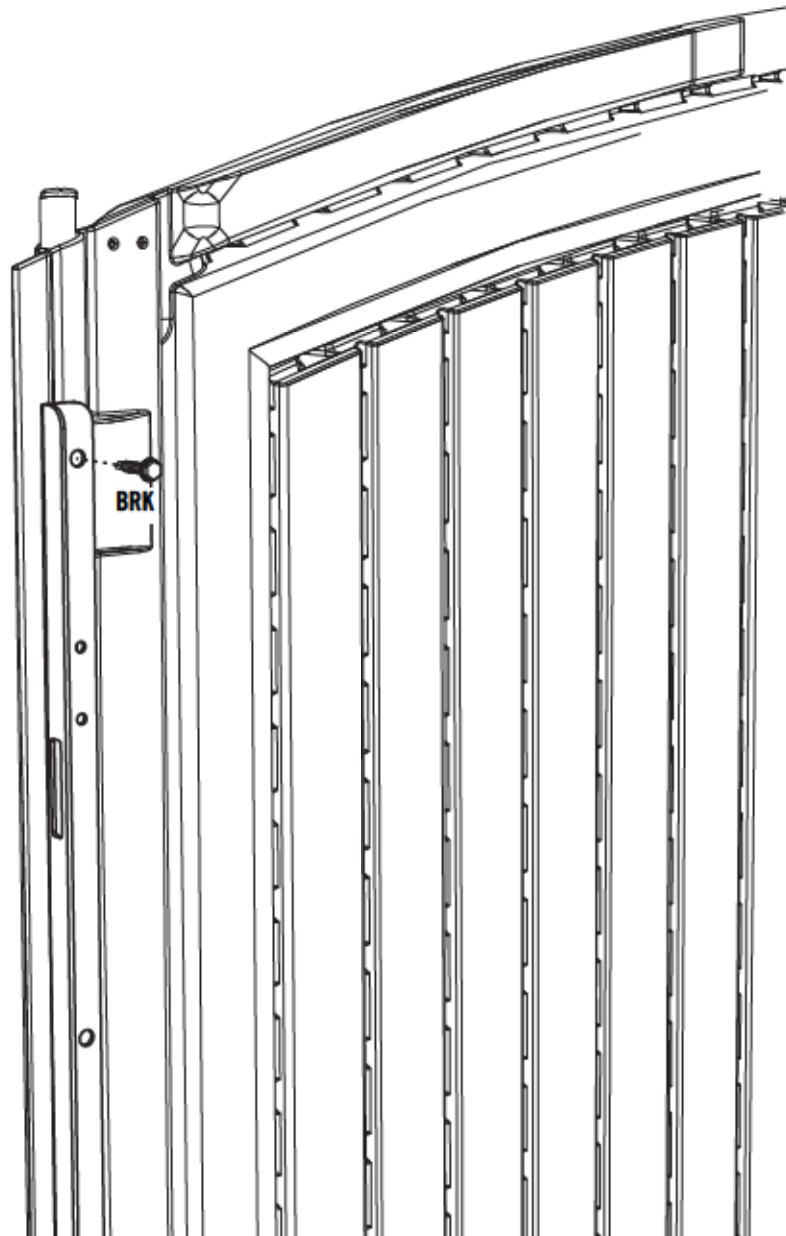



TOOLS AND HARDWARE REQUIRED FOR THIS PAGE



BQL



ARA



BRK (x5)



SEC 3




SEC

3.12

Continue using the Distance Indicator to align the holes in the Vertical Door Support over the Hinge Tube and Drill holes into the Hinge Tube at the five locations shown. Secure the Vertical Door Support to the Left Door Hinge Tube using five (5) more **#10 x 5/8" Self Tapping Screws (BRK)**.

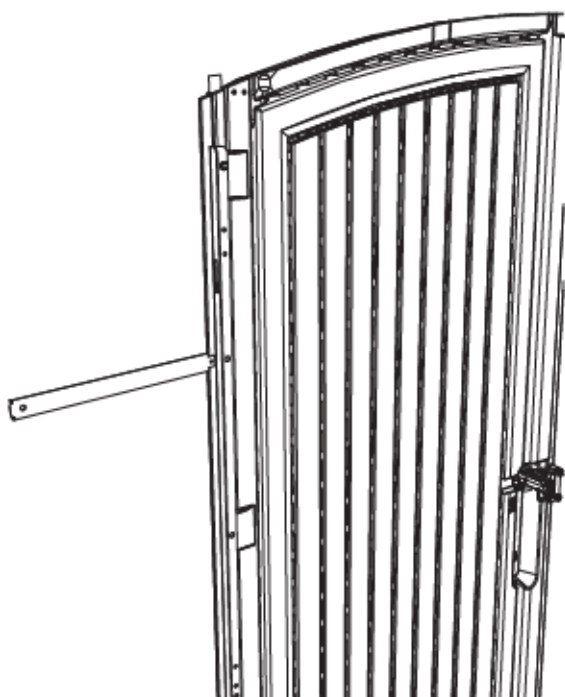

BRK (x5)

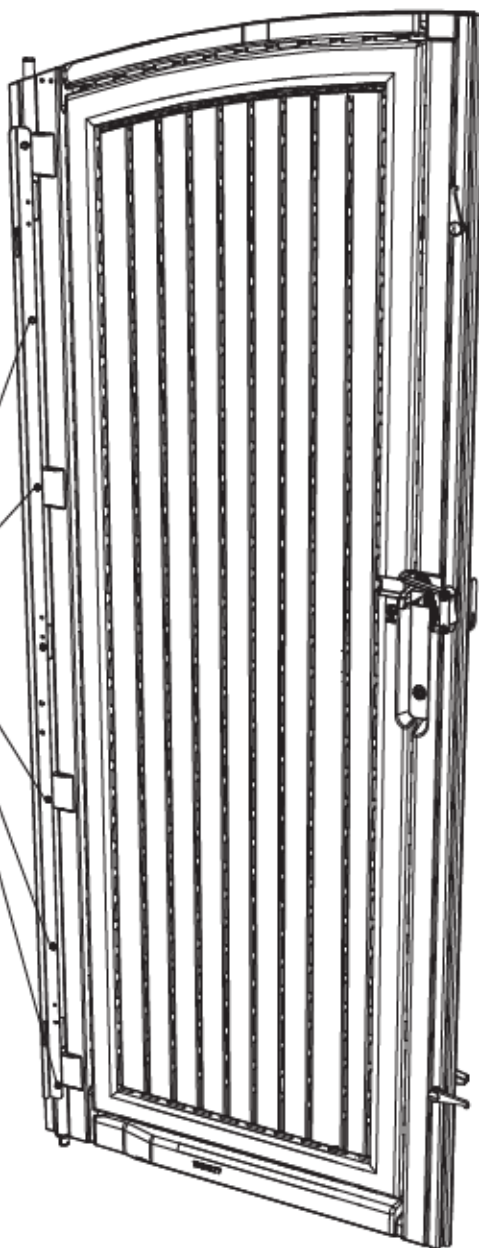




TOOLS AND HARDWARE REQUIRED FOR THIS PAGE



BQ0 (x1)


SEC 3

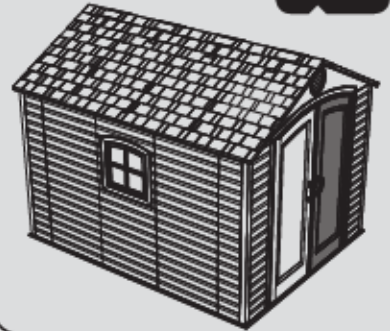

SEC

3.13

Remove the Pan-Head Screw from the Locking Mechanism on the Right Door and replace it with a #10 x 3/4" Flat-Head Screw (**BQ0**). Ensure the head of the Flat-Head Screw is flush with the Thumb Lever.

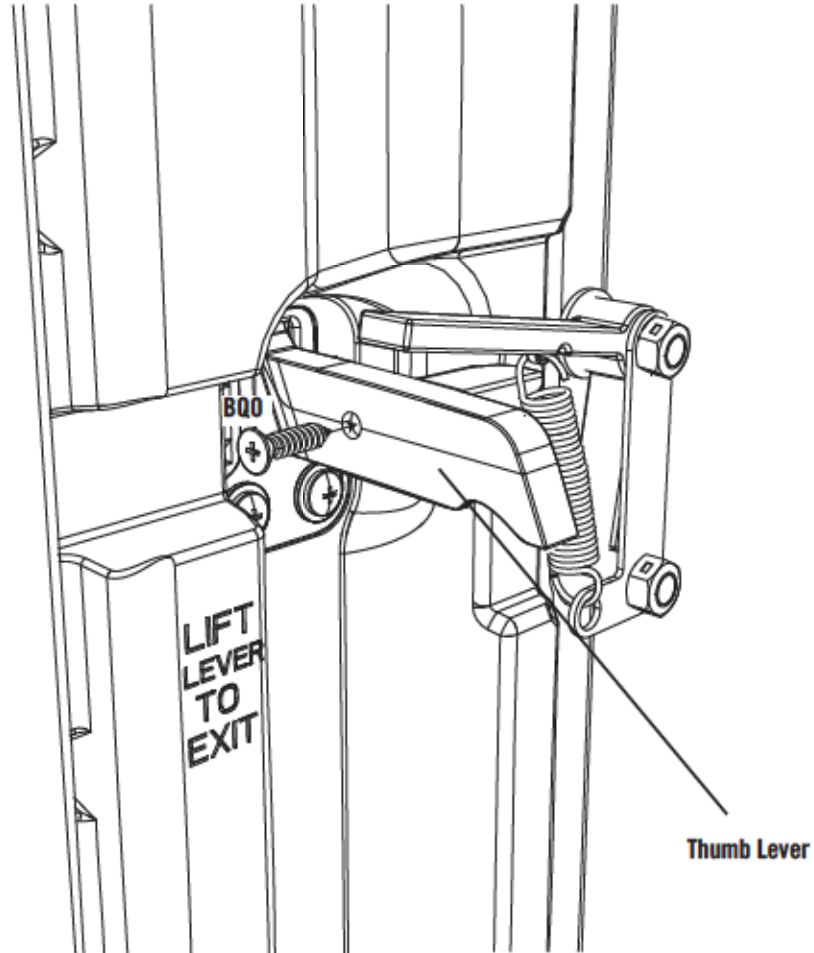



TOOLS AND HARDWARE REQUIRED FOR THIS PAGE



NO HARDWARE REQUIRED FOR THIS PAGE


SEC 3



SEC



3.14

Measure down from the top of the Door about 4 3/8". Insert a **Vertical Door Support (BQR)** into the groove of the Right Door with the top of the Vertical Door Support at the mark as shown.

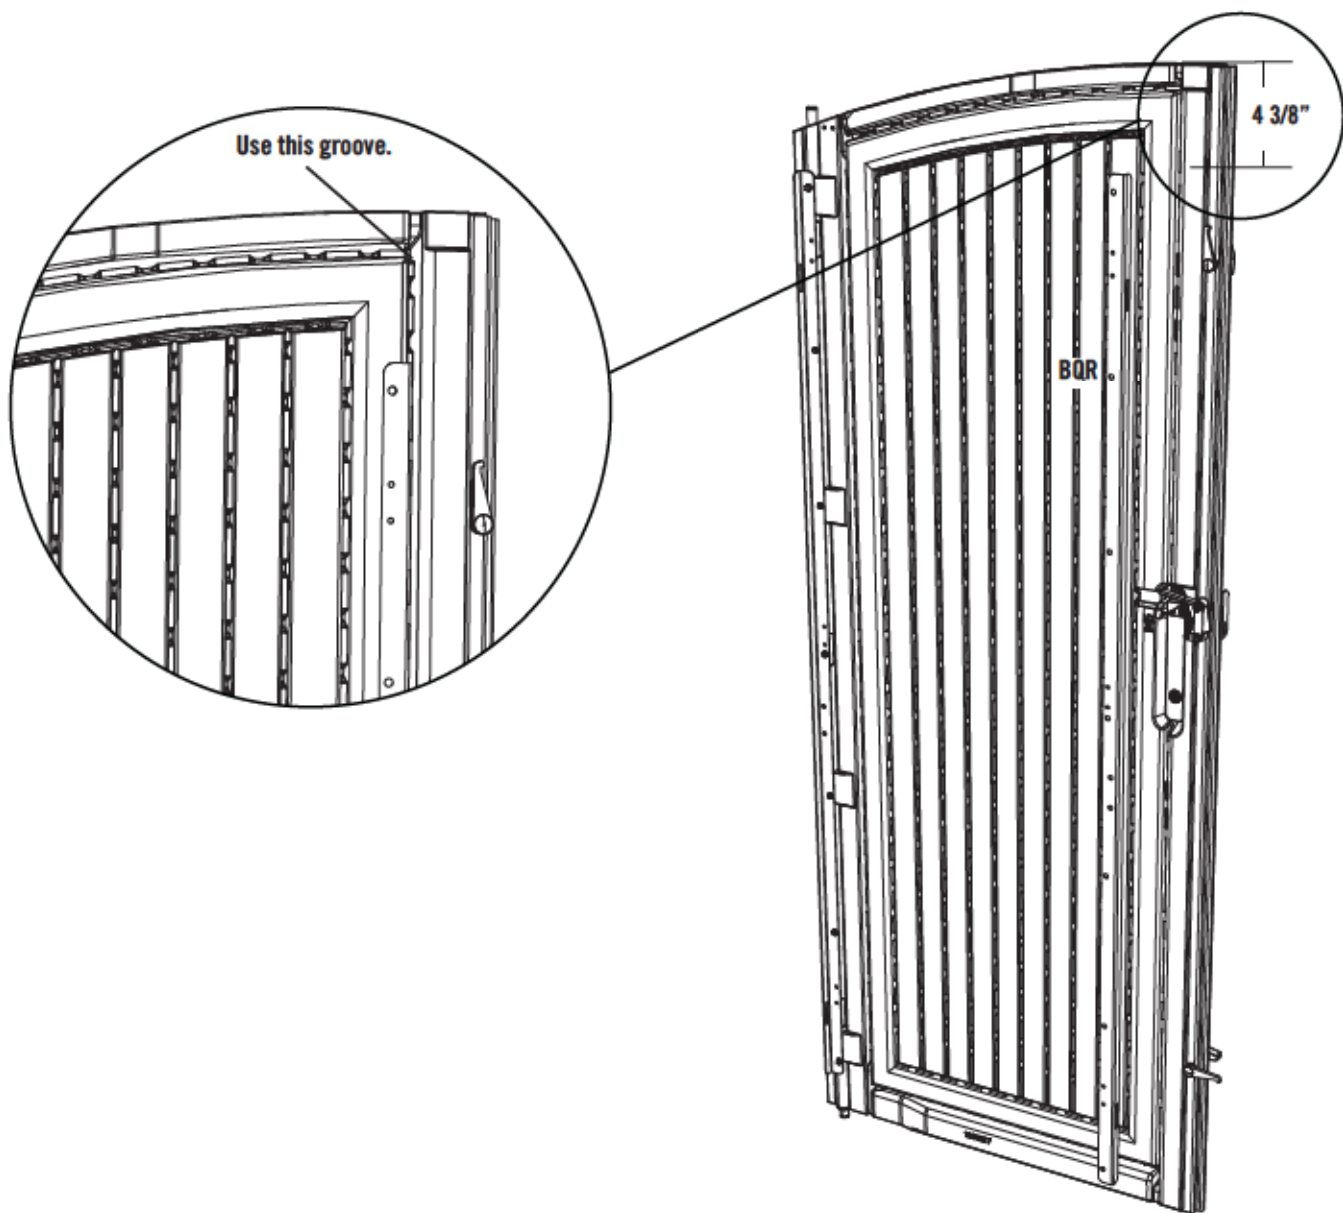




TOOLS AND HARDWARE REQUIRED FOR THIS PAGE



ADZ (x6)


SEC 3

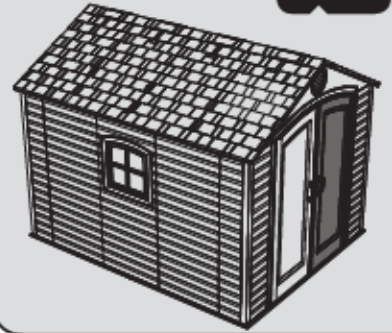

SEC

3.15

Secure the Vertical Door Support to the Right Door using six (6) 1/4" x 5/8" Pan-Head Screws (ADZ).

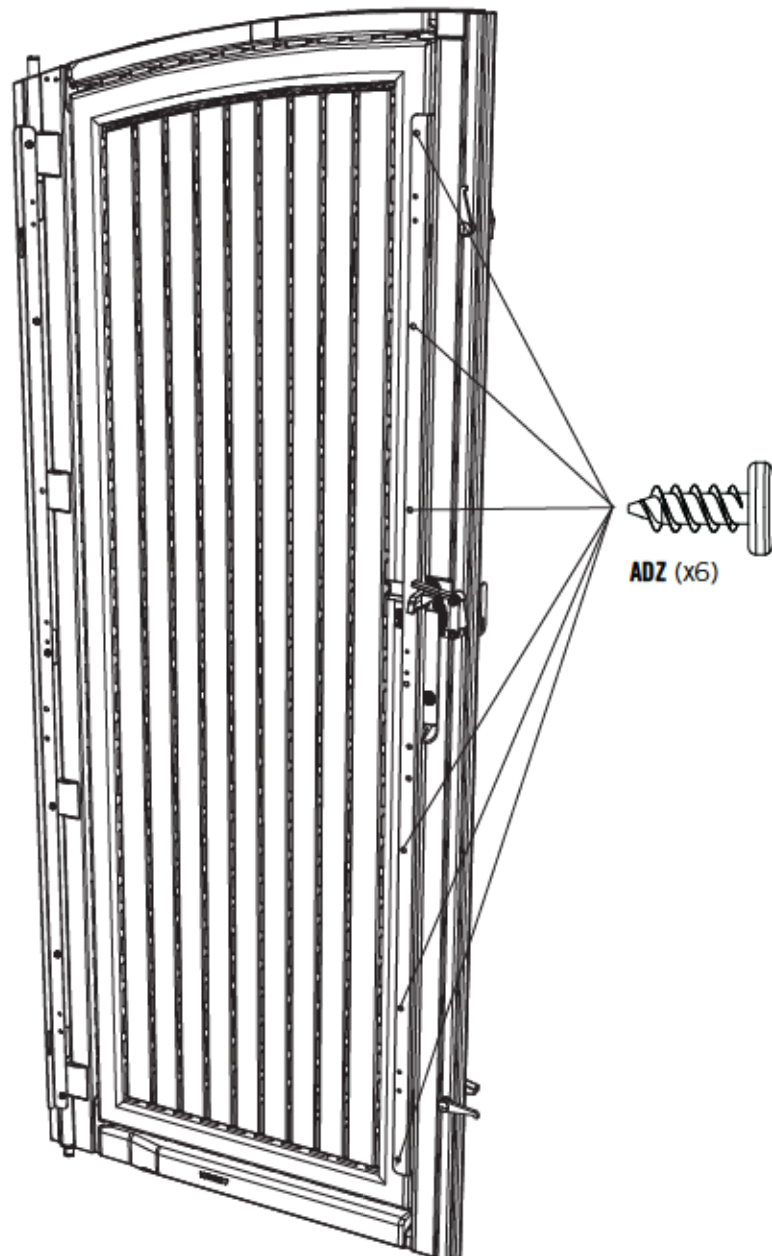



TOOLS AND HARDWARE REQUIRED FOR THIS PAGE

SEC 3



BQL



ADZ (x4)



BRJ (x4)




BRO (x2)



SEC

3.16

Secure a **Door Brace (BQT)** to the Door, Angled Channels, and Door End Channel using four (4) #10 x 1" Self-Tapping Screws (BRJ), two (2) #10 x 1 1/4" Self-Tapping Pan-Head Screws (BRO) and four (4) 1/4" x 5/8" Pan-Head Screws (ADZ) as shown. Do not overtighten Screws.

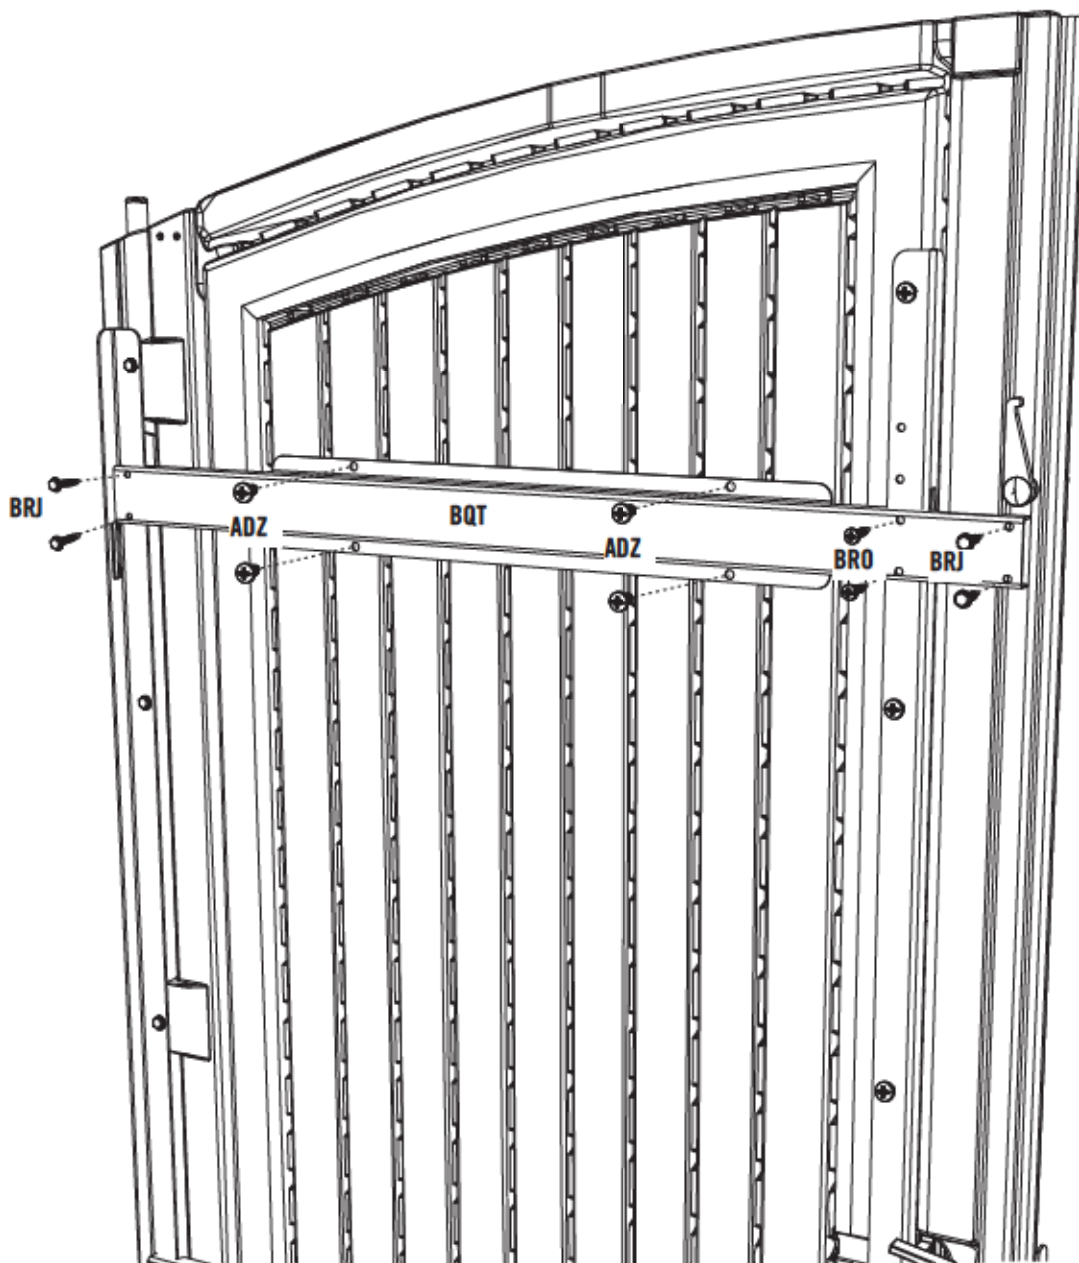



TOOLS AND HARDWARE REQUIRED FOR THIS PAGE



BQL



ADZ (x8)




BRJ (x8)



BRO (x4)


SEC 3

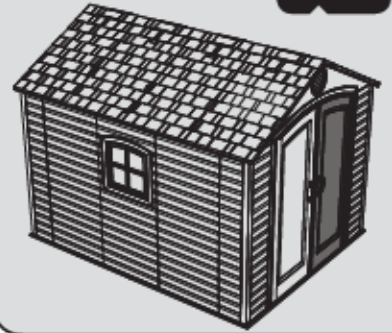

SEC


3.17

Secure the next two **Door Braces (BQT)** to the Door as the locations shown following the instructions in the previous step.

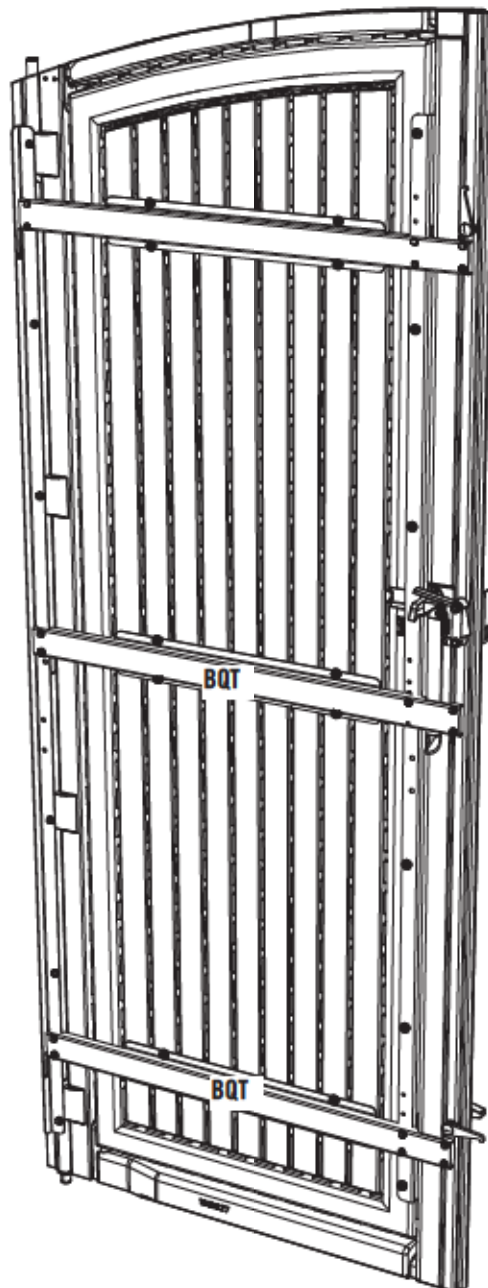




TOOLS AND HARDWARE REQUIRED FOR THIS PAGE



ADX (x2)



AHL (x1)


SEC 3



SEC

3.18

Position the square hole in the **Floor Strike Plate (AHL)** over the square hole in the Floor Panel as shown, and set the Floor Strike Plate over the hole. Secure the Floor Strike Plate to the Floor Panel using two (2) #10 x 1/2" Pan-Head Screws (ADX). Do not overtighten Screws.

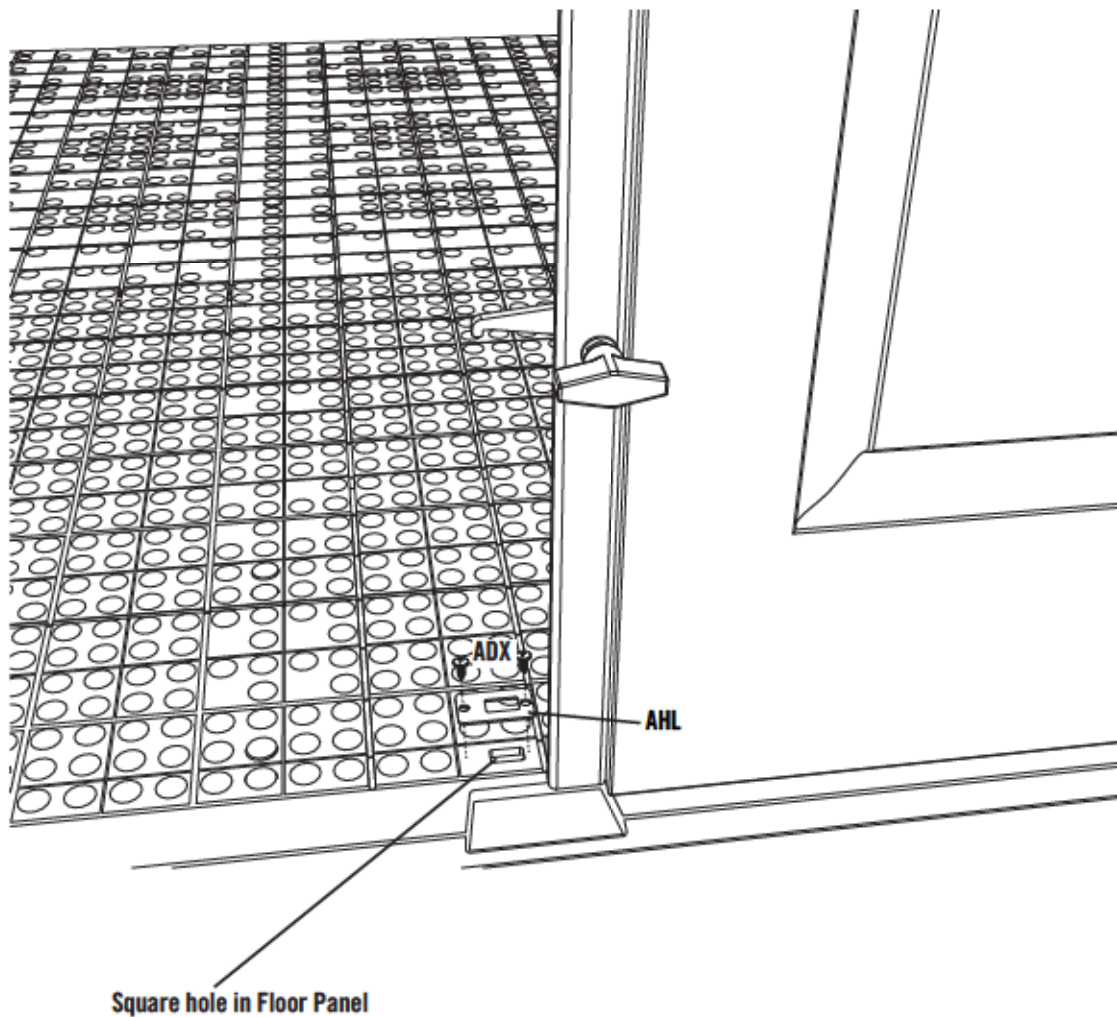




TOOLS AND HARDWARE REQUIRED FOR THIS PAGE

NO TOOLS OR HARDWARE REQUIRED

SEC
3

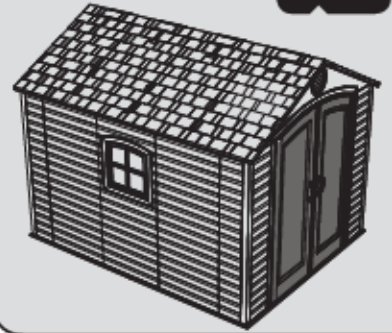

SEC

3.19

To secure the Doors, simply turn the T-Knob to insert the Locking Lever into the notch in the Vertical Door Support. Repeat this step for both Locking Levers.



LIFETIME OUTDOOR SHED EQUIPMENT

10-YEAR LIMITED FACTORY WARRANTY

THE MANUFACTURER RESERVES THE RIGHT TO MAKE SUBSTITUTIONS TO WARRANTY CLAIMS IF PARTS ARE UNAVAILABLE OR OBSOLETE.

1. Lifetime outdoor sheds are warranted to the original purchaser to be free from defects in material or workmanship for a period of ten years from the date of original retail purchase. The word "defects" is defined as imperfections that impair the use of the product. Defects resulting from misuse, abuse or negligence will void this warranty. This warranty does not cover defects due to improper installation, alteration or accident. This warranty does not cover damage caused by vandalism, rusting, "acts of nature" or any other event beyond the control of the manufacturer.

2. This warranty is nontransferable and is expressly limited to the repair or replacement of defective product. If the product is defective within the terms of this warranty, Lifetime Products, Inc. will repair or replace defective parts at no cost to the purchaser. Shipping charges to and from the factory are not covered and are the responsibility of the purchaser. Labor charges and related expenses for removal, installation or replacement of the shed or its components are not covered under this warranty.

3. This warranty does not cover scratching or scuffing of the product that may result from normal usage. In addition, defects resulting from intentional damage, negligence, unreasonable use or hanging from the truss will void this warranty.

4. Liability for incidental or consequential damages is excluded to the extent permitted by law. While every attempt is made to embody the highest degree of safety in all equipment, freedom from injury cannot be guaranteed. The user assumes all risk of injury resulting from the use of this product. All merchandise is sold on this condition, and no representative of the company may waive or change this policy.

5. This product is not intended for institutional or commercial use; Lifetime Products, Inc. does not assume any liability for such use. Institutional or commercial use will void the warranty.

6. This warranty is expressly in lieu of all other warranties, expressed or implied, including warranties of merchantability or fitness for use to extent permitted by Federal and state law. Neither Lifetime Products, Inc., nor any representative assumes any other liability in connection with this product. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

PLEASE INCLUDE YOUR DATED SALES RECEIPT AND PHOTOGRAPHS OF DAMAGED PARTS.

REPORT PRODUCT DEFECTS IN WRITING TO:

Lifetime Products, Inc., PO Box 160010 Clearfield, UT 84016-0010
or call 1-800-225-3865 M-F 7 a.m. to 5 p.m. MST.

REGISTER YOUR PRODUCT FOR QUICKER CUSTOMER SERVICE.

Visit www.lifetime.com or call 1-800-225-3865 to register your product today.

FOR INTERNATIONAL WARRANTY CLAIMS:

All warranty claims must be accompanied by a sales receipt. Report all warranty claims in writing to your regional sales support representative. Please include your dated sales receipt and photographs of damaged parts.

To identify the representative for your region — Please visit: www.lifetime.com/international



www.lifetime.com

ENHANCE YOUR LIFETIME® PURCHASE BY ADDING ACCESSORIES OR OTHER GREAT PRODUCTS

To purchase accessories or other Lifetime Products, visit us at:

www.lifetime.com

Or call: 1-800-424-3865

